



[Manuals.plus](#) /

> [VQP](#) /

> VQP Automatic Card Shuffler and Dealer Instruction Manual

VQP Automatic Card Dealer

VQP Automatic Card Shuffler and Dealer Instruction Manual

Model: Automatic Card Dealer

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your VQP Automatic Card Shuffler and Dealer. Please read this manual thoroughly before using the device.

2. PRODUCT OVERVIEW

The VQP Automatic Card Shuffler and Dealer is a 2-in-1 device designed to automate card shuffling and dealing for various card games. It features programmable settings, a rechargeable battery, and supports multiple card sizes.

2.1 Key Features

- **Automatic Shuffling:** Utilizes dual rollers for even, smooth, and quiet shuffling.
- **Automatic Card Dealing:** Deals cards automatically after shuffling, with an option to disable.
- **Programmable Dealer:** Customizable for 1-8 players, card quantity, and hole cards.
- **Dealing Modes:** Supports swing mode and diagonal mode (for 2 or 3 players).
- **Self-cleaning Sensor:** Ensures consistent performance by preventing dust accumulation.
- **Wireless Dealer Buttons:** Includes 4 buttons for directional card dealing.
- **Wide Card Compatibility:** Fits standard card sizes (Width*Length: 57*87mm, 63*88mm, 60*96mm, 40*87mm, 55*86mm) with 0.45mm thickness.
- **High-capacity Battery:** Built-in 5000mAh rechargeable battery with Type-C charging and multiple protections.

2.2 Components

- 1 x Automatic Card Dealer
- 1 x Type-C charging cable
- 4 x Dealing Buttons
- 1 x User Manual

2.3 Product Dimensions and Weight

- **Item Package Dimensions L x W x H:** 7.44 x 5.35 x 4.76 inches
- **Net Weight:** Approximately 1.9 lbs (0.98 Kilograms)
- **Material:** ABS & POM



Figure 1: VQP Automatic Card Shuffler and Dealer. This image shows the main unit with cards loaded for shuffling and dealing, along with four dealer buttons.

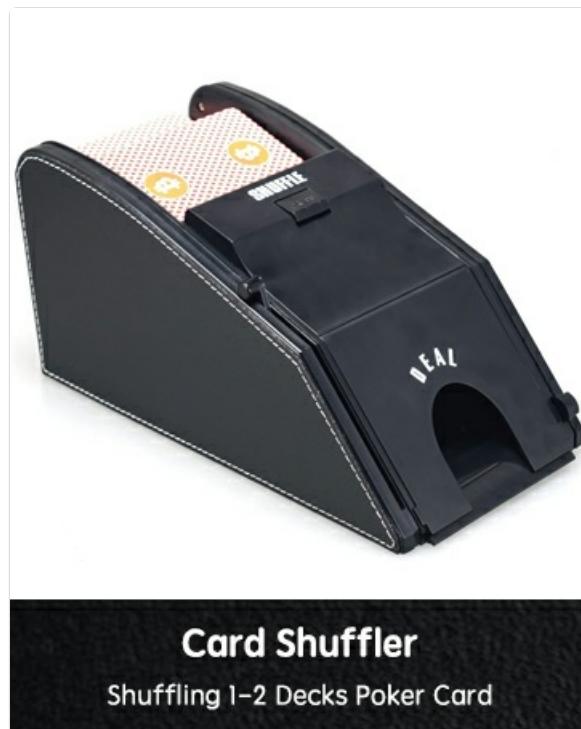


Figure 2: Product Dimensions. The image illustrates the dimensions of the device: 16.2cm length, 12.7cm width, and 11.6cm height.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the device using the provided Type-C charging cable. The battery indicator on the display will show charging status. For long-term storage, maintain a charge level of 50%-60% to preserve battery life.

3.2 Loading Cards

Place the decks of cards into the designated card slots on top of the machine. Ensure cards are aligned properly for smooth operation.

FUNCTION INTRODUCTION

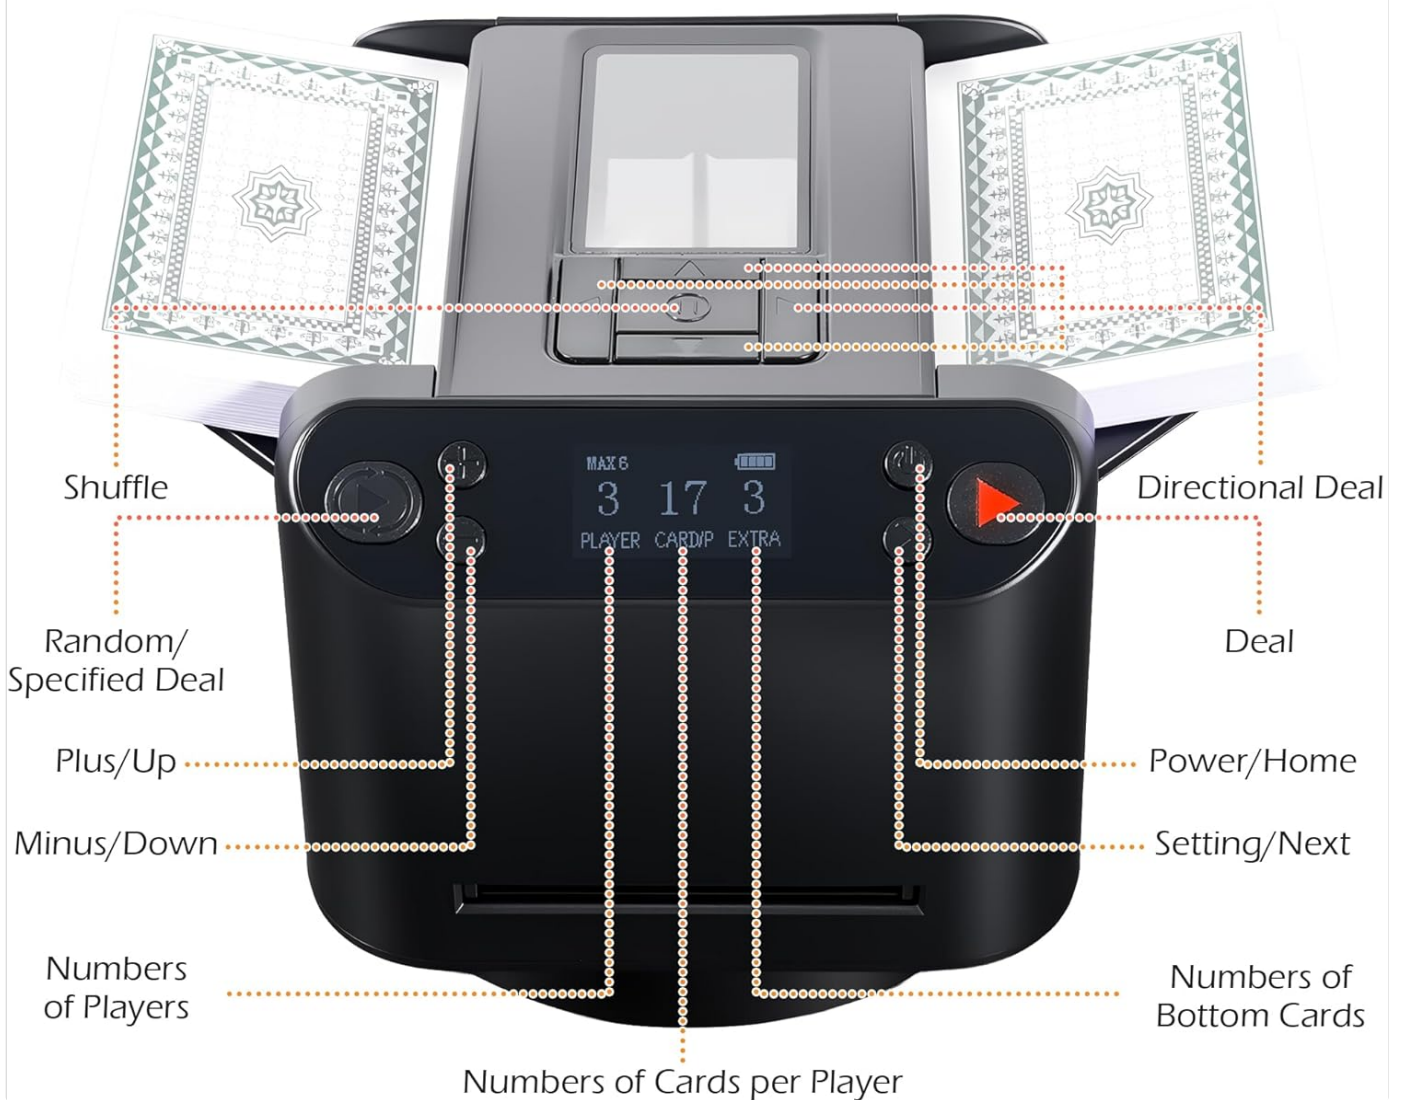


Figure 3: Loading Cards. This image shows cards correctly placed in the input trays of the shuffler.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the power button (red triangle) to turn the device on or off.

4.2 Programming Settings

The device allows for customization of dealing parameters. Follow these steps to program the settings:

1. Press the **Power/Home** button to enter programming mode.
2. Use the **Plus/Up** and **Minus/Down** buttons to adjust the number of players (1-8). Press the **Setting/Next** button to confirm.
3. Adjust the number of cards each player will receive. Press the **Setting/Next** button to confirm.
4. Set the number of bottom cards (community cards) which are left over after dealing the main hands. Press the **Setting/Next** button to confirm.
5. Navigate through additional settings using the **Setting/Next** button. These include:
 - **Post-Shuffle Deal:** Enable or disable automatic dealing after shuffling.

- **Random/Consecutive Deal:** Choose between random or consecutive card dealing.
- **Dealing Mode:** Select "Back-Forth Deal" (180-degree rotation for 3 players) or "360° Rotate Deal". Note: Dealing mode can only be switched if the number of players is set to two or three.
- **Dealing Direction:** Choose between Clockwise or Anticlockwise dealing.
- **Dealing Distance:** Adjust the dealing distance (Far, Mid, Close) for different table sizes.

6. Once all settings are configured, the device is ready for operation.



Figure 4: Function Introduction. This diagram labels the various buttons and display areas on the device, including Shuffle, Random/Specified Deal, Plus/Up, Minus/Down, Numbers of Players, Numbers of Cards per Player, Numbers of Bottom Cards, Directional Deal, Deal, Power/Home, and Setting/Next.

4.3 Shuffling Cards

After loading cards and setting parameters, press the **Shuffle** button (play icon on the left) to begin the shuffling process. The transparent window allows you to observe the shuffling.



Figure 5: Upgraded Shuffling Function. This image highlights the internal mechanism for shuffling, emphasizing the mechanical devices and electric equipment that mix the deck for randomness.

4.4 Dealing Cards

If "Post-Shuffle Deal" is enabled, cards will be dealt automatically after shuffling. Otherwise, press the **Deal** button (red triangle) to initiate dealing.

The device supports dealing for 2 to 8 players. The retractable tail allows adjustment for different card sizes.

UPGRADE REMOTE

CONTROL

Upgrading the remote control version can be used for the Blackjack gameplay, where players can use remote control buttons to make their own choices of "follow" or "not follow", controlling an automatic card dealing machine for dealing.

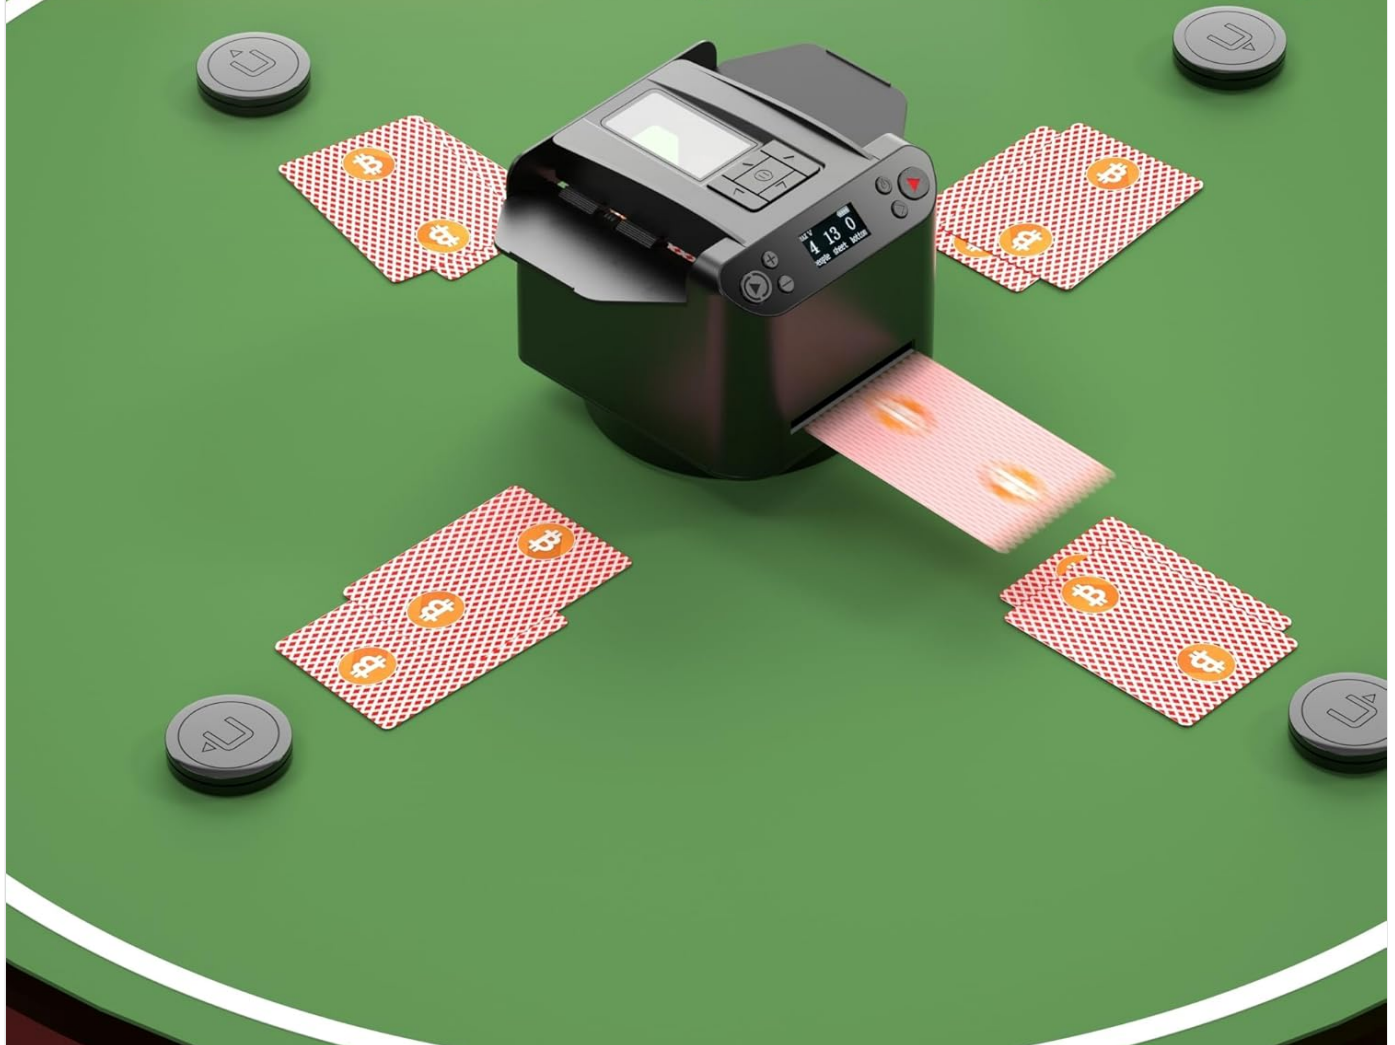


Figure 6: Dealing for Multiple Players. This image shows the device dealing cards to multiple player positions around a table, demonstrating its 2 to 8 player capability.

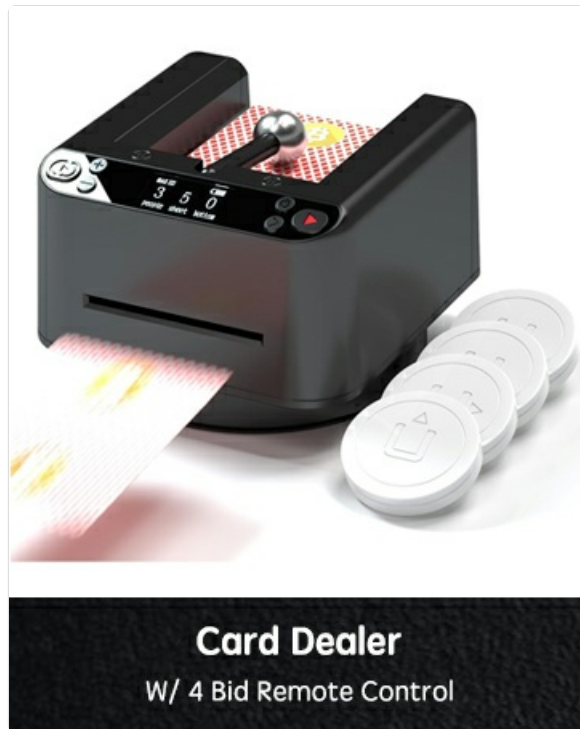


Figure 7: Dealing Accuracy. This image emphasizes the precise distribution of cards by the automatic dealer, minimizing human error.

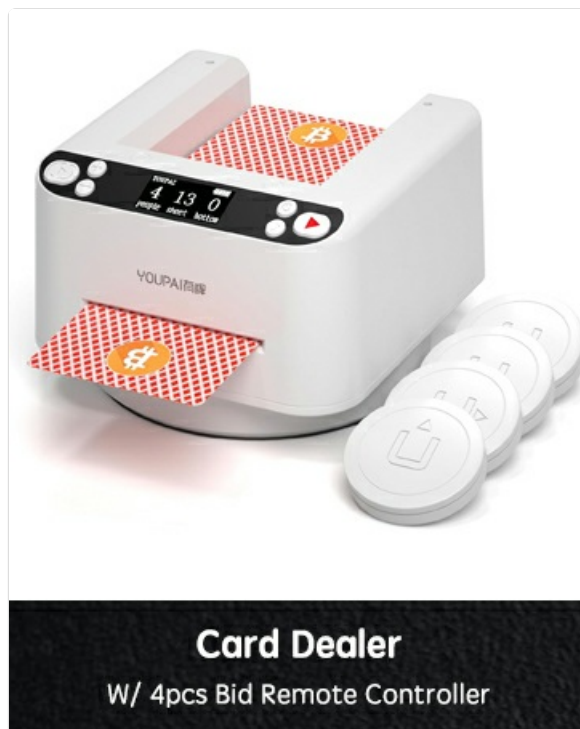


Figure 8: Fast and Efficient Dealing. This image illustrates the speed and efficiency of the automatic card dealer compared to manual dealing.



Figure 9: Convenience. This image highlights the time and labor savings offered by the automatic card dealer, making it suitable for frequent use.

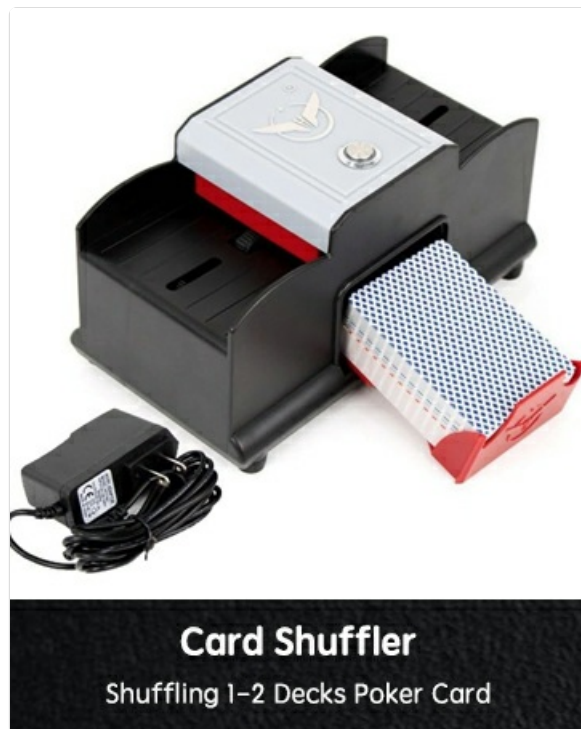


Figure 10: Retractable Tail. This image demonstrates the adjustable retractable tail feature, which accommodates different card sizes.

4.5 Using Wireless Dealer Buttons

The included 4 wireless dealer buttons can be used to deal cards in specific directions. Each button represents a direction (Left, Right, Front, Behind) and allows players to request cards interactively.

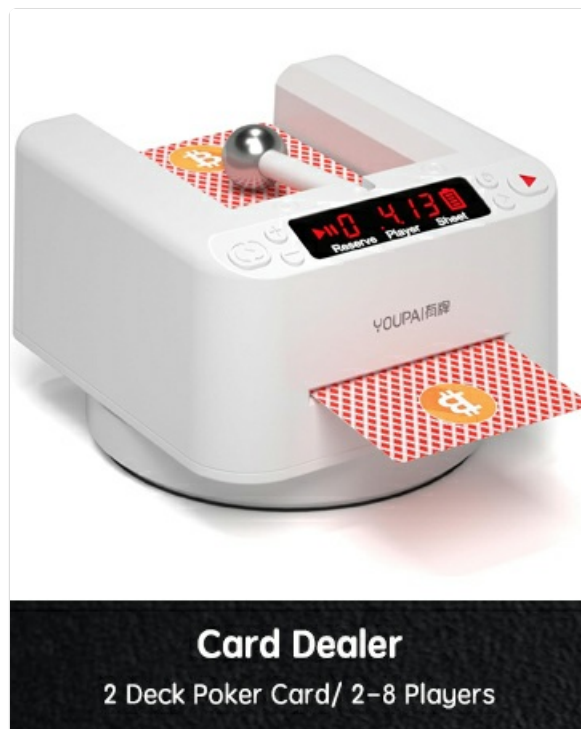


Figure 11: Wireless Dealer Buttons. This image shows the device along with the four wireless dealer buttons, indicating their use for directional card dealing.

4.6 Official Product Video: How to Program and Deal

Your browser does not support the video tag.

Video 1: How to program the automatic card shuffler and dealer. This video demonstrates the step-by-step process of setting up the device, including programming the number of players, cards per player, and dealing modes, followed by a demonstration of the shuffling and dealing functions.

5. MAINTENANCE

5.1 Cleaning

The device features a self-cleaning sensor on the playing card slot to prevent dust accumulation. Periodically wipe the exterior of the device with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

5.2 Battery Care

To prolong battery life, avoid fully charging the lithium battery when the product is unused for long periods. Keep the charge at 50%-60% for optimal storage. The battery includes over-charge, over-discharge, over-current, and short-circuit protection.

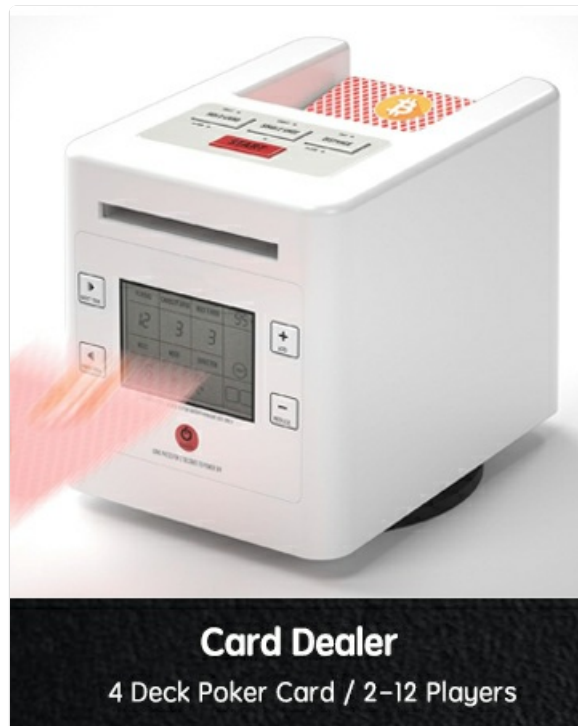


Figure 12: Built-in Battery. This image provides an internal view of the device, highlighting the large-capacity rechargeable battery.



Figure 13: All-in-One Design. This image showcases the compact and integrated design of the card shuffler and dealer, emphasizing its small size and lightweight nature.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cards not shuffling/dealing smoothly.	Cards are not properly aligned or are of an unsupported size/thickness. Dust accumulation on sensors.	Ensure cards are within supported dimensions and properly loaded. Clean the card slot and sensors.
Inconsistent card dealing (e.g., extra cards).	Incorrect programming settings.	Review and adjust the number of players, cards per player, and dealing mode settings in the programming menu.
Battery does not last long.	Battery not fully charged or degraded over time.	Ensure the device is fully charged before use. For long-term storage, maintain 50-60% charge. If battery life significantly degrades, contact customer support.
Device not powering on.	Battery is depleted.	Connect the device to the Type-C charging cable and allow it to charge for at least 30 minutes before attempting to power on again.

7. SPECIFICATIONS

- **Model Name:** Automatic Card Dealer
- **Brand:** VQP
- **Color:** Black
- **Material:** ABS & POM
- **Item Package Dimensions L x W x H:** 7.44 x 5.35 x 4.76 inches
- **Package Weight:** 0.98 Kilograms (approx. 1.9 lbs)
- **Battery:** Built-in 5000mAh rechargeable battery
- **Charging:** Type-C (5V)
- **Card Compatibility:** Width*Length: 57*87mm, 63*88mm, 60*96mm, 40*87mm (Mahjong card), 55*86mm (Chip-embedded playing card); Thickness: 0.45mm
- **Suggested Users:** Poker Players
- **Manufacturer:** VQP
- **Date First Available:** December 4, 2023

8. WARRANTY AND SUPPORT

The product warranty follows FBA Rules. For any issues, questions, or support needs, please contact VQP customer service through your purchase platform.