



[Manuals.plus](#) /

› [HiGrace](#) /

› HiGrace 10-inch Android 14 Tablet User Manual

## HiGrace C107

# HiGrace 10-inch Android 14 Tablet User Manual

Model: C107 | Brand: HiGrace

## INTRODUCTION

Welcome to the HiGrace 10-inch Android 14 Tablet user manual. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your new tablet. Designed for versatility and performance, your HiGrace tablet is equipped with an Octa-Core processor, 10GB RAM, 128GB internal storage (expandable up to 1TB), a 1280x800 HD IPS display, Wi-Fi 6, and dual cameras, making it ideal for everyday use, entertainment, and light productivity.



Image: The HiGrace 10-inch Android 14 Tablet shown with its included accessories: charger, USB-C cable, and user guide.

## WHAT'S IN THE BOX

- HiGrace 10-inch Android 14 Tablet (Model C107)
- USB-C Charging Cable
- Power Adapter
- User Guide (this manual)

## PRODUCT OVERVIEW

The HiGrace C107 tablet is designed for a seamless user experience, offering robust performance and versatile features.



Image: A visual breakdown of the tablet's key specifications including 5MP+8MP cameras, 10GB RAM, Octa-Core CPU, Android 14, Wi-Fi 6, Bluetooth 5.0, 5000mAh battery, 1280x800 HD display, and dual speakers.

## Key Features:

- **High Performance:** Equipped with a powerful A55 architecture Octa-Core CPU and 10GB RAM (4GB physical + 6GB virtual expansion) for smooth multitasking and fast application launches.
- **Ample Storage:** 128GB internal storage, expandable up to 1TB via TF card (not included), providing vast space for your files, apps, and media.
- **Vibrant Display:** 10-inch 1280x800 HD IPS touchscreen with Widevine L1 support for high-definition streaming from platforms like Netflix and Amazon Prime Video.
- **Advanced Connectivity:** Features Wi-Fi 6 for faster and more stable internet connections.
- **Dual Cameras:** 5-megapixel front camera and 8-megapixel rear camera for video calls and capturing moments.
- **Long-lasting Battery:** 5000mAh large-capacity battery with intelligent power-saving technology for extended use.
- **Slim and Portable:** Lightweight design with a 9mm thin body, making it easy to carry.

- **Android 14:** Runs on the latest Android 14 operating system for an optimized and user-friendly experience.

## SETUP

### 1. Initial Charging

Before first use, fully charge your tablet. Connect the USB-C charging cable to the tablet's charging port and the power adapter to a wall outlet. The battery indicator on the screen will show charging progress. A full charge typically takes several hours.



**5000 mAh**



**5-8 Hours**



**Type-c**

5000mAh large-capacity battery and intelligent power saving technology, long standby time, you can travel and hike with confidence.

**5000mAh**



*Image: The tablet screen displaying a 5000mAh battery icon, indicating its large capacity and charging capability.*

### 2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side or top edge) until the HiGrace logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a power options menu appears. Select "Power off" and confirm.

- **To Restart:** From the power options menu, select "Restart."

### 3. Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup wizard. Follow the on-screen prompts to:

1. Select your language.
2. Connect to a Wi-Fi network.
3. Set up your Google account (or create a new one). This is crucial for downloading apps from the Google Play Store.
4. Set up screen lock (PIN, pattern, or password).
5. Review and accept terms and conditions.

For Wi-Fi connection, select your network from the list, enter the password if prompted, and tap "Connect."

## OPERATING YOUR TABLET

---

### 1. Basic Navigation

- **Touch:** Tap an icon to open an app or select an item.
- **Swipe:** Drag your finger across the screen to scroll through pages, menus, or content.
- **Pinch-to-Zoom:** Place two fingers on the screen and pinch them together or spread them apart to zoom in or out on photos, maps, or web pages.
- **Home Screen:** The main screen where you can access your apps and widgets. Swipe left or right to navigate between home screens.
- **Navigation Bar:** Located at the bottom of the screen, typically includes Back, Home, and Recent Apps buttons.

### 2. App Management

- **Downloading Apps:** Open the Google Play Store app, search for your desired app, and tap "Install."
- **Organizing Apps:** Drag and drop app icons to rearrange them on the home screen or into folders.
- **Uninstalling Apps:** Press and hold an app icon, then drag it to the "Uninstall" option that appears (or go to Settings > Apps).

### 3. Split-Screen Functionality

Your tablet supports split-screen mode, allowing you to use two apps simultaneously. To activate:

1. Open the first app you want to use.
2. Tap the "Recent Apps" button (square icon) on the navigation bar.
3. Tap the app icon at the top of the first app's preview, then select "Split screen."
4. Choose the second app from your recent apps or app drawer to fill the other half of the screen.

Equipped with a clear 5-megapixel front camera and 8-megapixel rear camera. Support split-screen function, You can simultaneously view a video and send a message, no need to exit the application.



Image: The tablet demonstrating its split-screen capability, displaying multiple applications running concurrently for enhanced productivity.

## MAINTENANCE

### 1. Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- For optimal battery longevity, try to keep the charge between 20% and 80%.
- Use the original charger and cable provided with your tablet.

### 2. Storage Management

Regularly check your tablet's storage to ensure optimal performance. Go to Settings > Storage to view usage and free up space.

- Delete unnecessary apps and files.
- Clear app cache regularly (Settings > Apps > [App Name] > Storage > Clear cache).
- Utilize the 1TB expandable storage via a TF card for large media files.

# 10(4+6)GB RAM+128GB



**10(4+6)GB**  
RAM



**128GB**  
ROM



**1TB**  
TF Card Expanded

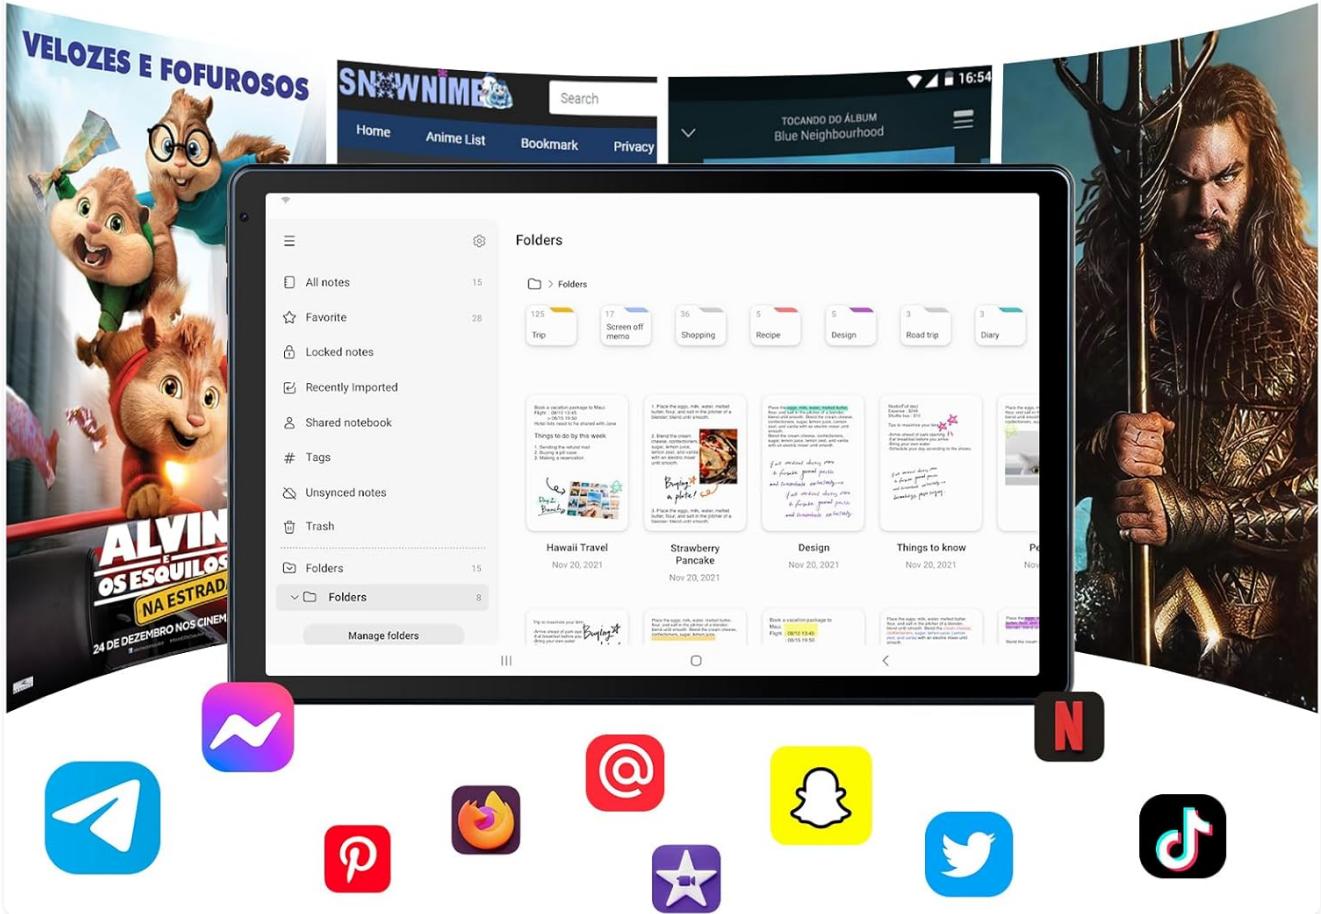


Image: A visual representation of the tablet's memory capabilities, highlighting 10GB RAM, 128GB internal storage (ROM), and the option for 1TB TF card expansion.

## 3. Cleaning

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Tablet not turning on	Low battery; system crash	Charge the tablet for at least 30 minutes. If still unresponsive, press and hold the Power button for 10-15 seconds to force a restart.
Slow performance	Too many apps running; low storage; outdated software	Close background apps. Clear app caches. Uninstall unused apps. Check for system updates (Settings > System > System update).

Problem	Possible Cause	Solution
Battery drains quickly	High screen brightness; excessive app usage; background processes	Reduce screen brightness. Close unused apps. Disable Wi-Fi/Bluetooth when not in use. Check battery usage in Settings to identify power-hungry apps.
Tablet overheating	Intensive use (gaming, video streaming); charging in hot environment	Stop intensive tasks. Disconnect charger if charging. Allow tablet to cool down. Avoid direct sunlight.
Screen unresponsive	Software glitch; temporary freeze	Force restart the tablet by holding the Power button. If issue persists, consider a factory reset (backup data first).

## SPECIFICATIONS

Feature	Detail
Screen Size	10 Inches
Screen Resolution	1280 x 800 pixels HD IPS
Operating System	Android 14
Processor	Octa-Core (A55 architecture, Allwinner)
RAM	10GB (4GB physical + 6GB expansion)
Internal Storage (ROM)	128GB
Expandable Storage	Up to 1TB via TF card (MicroSD)
Rear Camera	8 MP
Front Camera	5 MP
Battery	5000mAh Lithium Ion
Wireless Connectivity	Wi-Fi 6 (802.11ax), Bluetooth 5.0
Dimensions (LxWxH)	9.64 x 5.98 x 0.35 inches
Item Weight	1.81 pounds
Color	Gray
Model Number	C107

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official HiGrace website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may also refer to the seller's support channels on Amazon.com.

