

IHOM IVC-1001B

IHOM IVC-1001B Car Vacuum Cleaner User Manual

Model: IVC-1001B

1. INTRODUCTION

Thank you for choosing the IHOM IVC-1001B Car Vacuum Cleaner. This compact and powerful cordless vacuum is designed for efficient cleaning in various environments, particularly vehicles. This manual provides essential information for safe operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device. Please read this manual thoroughly before first use and retain it for future reference.



Image 1.1: The IHOM IVC-1001B Car Vacuum Cleaner, showcasing the main unit, crevice tool, brush attachment, and USB-C charging cable.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, please observe the following safety precautions:

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust cup and filter in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use an appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose an appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C (265°F) may cause explosion.
- Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present and undamaged:

- **IHOM IVC-1001B Cordless Vacuum Cleaner:** The main unit for suction.
- **Crevice Tool:** For reaching tight spaces and corners.
- **Brush Attachment:** For agitating and cleaning surfaces like upholstery and carpets.
- **Type-C Charging Cable:** For recharging the vacuum's internal battery.
- **User Manual:** This instruction booklet.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your IHOM IVC-1001B vacuum cleaner.

1. **Main Unit:** Contains the motor, battery, and controls.
2. **Dust Cup:** Transparent container for collecting debris.
3. **Filter Assembly:** Located inside the dust cup, captures fine particles.

4. **Power Button:** Controls power on/off and suction speed.
5. **Charging Port (Type-C):** For connecting the charging cable.
6. **Crevice Tool:** Narrow nozzle for reaching tight spots.
7. **Brush Attachment:** Tool with bristles for surface cleaning.

5. SETUP AND ASSEMBLY

The IHOM IVC-1001B is designed for quick and easy assembly.

1. **Initial Charge:** Before first use, fully charge the vacuum cleaner. Refer to the "Charging" section for details.
2. **Attaching Accessories:**
 - Select the desired attachment (crevice tool or brush attachment).
 - Align the attachment with the suction nozzle of the main unit.
 - Push firmly until it clicks securely into place.
 - The attachments can also be combined for extended reach or specific cleaning tasks.

6. OPERATION

Operating your IHOM IVC-1001B vacuum cleaner is straightforward.

1. **Power On/Off:** Press the power button once to turn on the vacuum at the standard suction level.
2. **Adjusting Suction Speed:** While the vacuum is on, press the power button a second time to switch to the higher suction level. Pressing it a third time will turn the vacuum off.
3. **Cleaning:** Direct the nozzle or attached accessory towards the area to be cleaned. Move the vacuum slowly over the surface to effectively pick up debris.
4. **Battery Indicator:** The indicator light will show the battery status. Refer to the "Charging" section for more details.

7. CHARGING

Ensure your vacuum is always ready for use by following proper charging procedures.

- **Connecting the Charger:** Insert the Type-C end of the charging cable into the vacuum's charging port and the USB-A end into a compatible USB power adapter (not included) or port.
- **Charging Indicator:** The indicator light will illuminate during charging. It will change color or turn off once fully charged.
- **Charging Time:** A full charge typically takes approximately 2.5 hours.
- **Runtime:** A fully charged battery provides up to 2 hours of runtime, depending on the suction mode used.
- **Battery Preservation:** For optimal battery life, avoid completely draining the battery before recharging.

8. MAINTENANCE

Regular maintenance ensures your IHOM IVC-1001B operates efficiently and extends its lifespan.

8.1 Emptying the Dust Cup

1. Ensure the vacuum is turned off.
2. Twist the dust cup counter-clockwise to detach it from the main unit.
3. Carefully empty the collected debris into a waste bin.
4. Reattach the dust cup by aligning it and twisting clockwise until secure.

8.2 Cleaning the Filter

The vacuum features a washable HEPA filter. Clean it regularly to maintain suction power.

1. With the dust cup detached, remove the filter assembly.
2. Tap the filter gently over a waste bin to remove loose dust.
3. Rinse the filter under cool running water until the water runs clear. Do not use detergents.
4. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum. Do not use the vacuum with a wet filter.
5. Once dry, reinsert the filter assembly into the dust cup and reattach the dust cup to the main unit.

9. TROUBLESHOOTING

If you encounter issues with your IHOM IVC-1001B, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the vacuum fully.
Low suction power.	Dust cup is full. Filter is clogged. Nozzle/hose is blocked.	Empty the dust cup. Clean or replace the filter. Check for and remove any blockages in the nozzle or attachments.
Vacuum stops unexpectedly.	Battery is low. Overheating protection activated.	Recharge the battery. Turn off the vacuum and allow it to cool down for 30 minutes before resuming use.
Charging indicator not working.	Charging cable or adapter faulty. Charging port dirty.	Try a different Type-C cable and USB power adapter. Ensure the charging port is clean and free of debris.

If the problem persists after attempting these solutions, please contact IHOM customer support for further assistance.

10. SPECIFICATIONS

Detailed technical specifications for the IHOM IVC-1001B Car Vacuum Cleaner:

Brand	IHOM
Model	IVC-1001B
Color	Black
Product Dimensions	5.49 x 5.49 x 27.48 cm
Item Weight	449 g
Capacity (Dust Cup)	1 Cup
Power/Wattage	90 watts
Voltage	11.1 Volts
Number of Speeds	2

Noise Level	80 Decibels
Runtime	Up to 2 hours
Special Features	Lightweight, Portable
Filter Type	Cartridge (Washable HEPA)
Power Source	Battery Powered
Cordless	Yes

11. SUPPORT

For technical support, warranty information, or any questions not covered in this manual, please contact IHOM customer service. Refer to the product packaging or the IHOM official website for contact details.