

Midea Front Loading Washing Machine MF100W70B/TT User Manual

Model: MF100W70B/TT | Brand: Midea

1. INTRODUCTION

Thank you for choosing the Midea Front Loading Washing Machine MF100W70B/TT. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read it thoroughly before using the washing machine and keep it for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the washing machine is properly grounded.
- Do not allow children to play on or in the appliance.
- Keep flammable materials away from the washing machine.
- Do not wash items that have been soiled with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Unplug the appliance before performing any maintenance or cleaning.
- Do not operate the machine if it is damaged or malfunctioning. Contact qualified service personnel.
- Ensure water inlet hoses are securely connected to prevent leaks.

3. PRODUCT OVERVIEW

The Midea MF100W70B/TT is a 7 KG front-loading washing machine featuring an Inverter Motor and a maximum spin speed of 1400 RPM. It includes advanced functions for efficient and hygienic washing.



Figure 3.1: Midea Front Loading Washing Machine MF100W70B/TT, Titanium Grey.

Key Features:

- **Steam Function:** Provides a more hygienic wash by using high-temperature steam to eliminate odors and reduce wrinkles.
- **Water Shield Filter:** Prevents dirt and debris from entering the washing machine, extending its lifespan.
- **Quick Wash 15:** A 15-minute washing cycle ideal for small loads or when quick cleaning is needed, saving energy and water.
- **Auto Clean:** Automatically cleans the drum and internal components, maintaining hygiene.
- **Inverter Motor:** Ensures quiet operation, energy efficiency, and durability.



Figure 3.2: Inverter Motor for efficient and quiet operation.



Figure 3.3: Steam function for hygienic washing and wrinkle reduction.

4. SETUP AND INSTALLATION

The Midea MF100W70B/TT is a freestanding appliance. Proper installation is crucial for optimal performance and safety.

4.1 Unpacking

- Remove all packaging materials, including the polystyrene base and any protective films.
- Remove the transit bolts from the rear of the machine. Keep these bolts for future transport.

4.2 Leveling the Machine

- Place the washing machine on a firm, level floor.
- Adjust the leveling feet at the bottom of the machine until it is perfectly stable and level. Use a spirit level to verify.

4.3 Water Connection

- Connect the inlet hose to a cold water tap with a 3/4-inch thread.
- Ensure all connections are tight to prevent leaks.

4.4 Drain Connection

- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during operation.
- The drain hose should be between 60 cm and 100 cm from the floor.

4.5 Electrical Connection

- Plug the power cord into a grounded electrical outlet.

- Ensure the voltage and frequency match the specifications of your local power supply.

5. OPERATING INSTRUCTIONS

Follow these steps for effective and safe operation of your washing machine.

5.1 Loading Laundry

- Open the door and load clothes into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. The maximum capacity is 7 KG.
- Close the door firmly.



Figure 5.1: Properly loading laundry into the drum.

5.2 Adding Detergent and Additives

- Pull out the detergent dispenser drawer.
- Add appropriate amounts of detergent to the main wash compartment and fabric softener to its designated compartment.
- Close the dispenser drawer gently.

5.3 Selecting a Wash Program

- Turn the control knob to select the desired wash program based on fabric type and soil level.
- The display will show the estimated wash time and default settings.



Figure 5.2: Control panel for program selection and monitoring.

5.4 Special Functions

- **Steam:** Activate the steam function for enhanced hygiene and wrinkle reduction on compatible programs.
- **Quick Wash 15:** Select this program for lightly soiled items or small loads requiring a fast wash cycle.



Figure 5.3: Quick Wash 15 for fast and efficient cleaning.

5.5 Starting the Wash Cycle

- Press the Start/Pause button to begin the selected wash program.
- The machine will automatically proceed through the wash, rinse, and spin cycles.

5.6 End of Cycle

- Once the cycle is complete, the machine will signal with an audible alert and/or display an 'End' message.
- Open the door and remove your laundry promptly to prevent wrinkles and odors.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

6.1 Cleaning the Water Shield Filter

- The Water Shield Filter helps prevent debris from entering the machine. Regularly check and clean this filter to maintain water flow and prevent blockages.
- Refer to the diagram below for the filter location and removal instructions.



Figure 6.1: Location of the Water Shield Filter for cleaning.

6.2 Auto Clean Function

- Utilize the Auto Clean function periodically to automatically clean the drum and internal components, preventing mold and odor buildup.
- Run this cycle without any laundry in the machine.

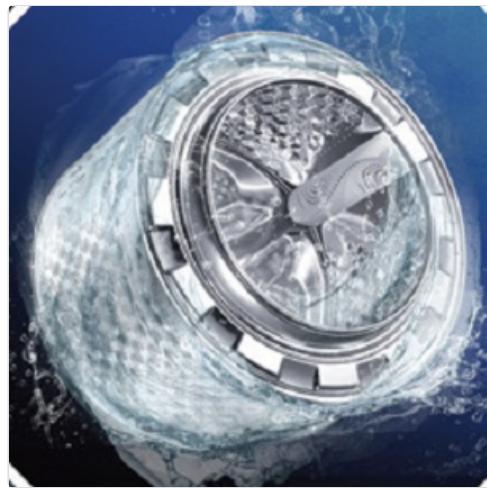


Figure 6.2: Auto Clean function for maintaining drum hygiene.

6.3 Cleaning the Detergent Dispenser

- Remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue.
- Clean the housing of the dispenser with a brush.

6.4 Cleaning the Door Seal

- Wipe the door seal and glass after each wash to prevent lint and residue buildup.
- Periodically check for any foreign objects trapped in the seal.

6.5 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Before contacting service, review the following common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Door not closed properly; Program not selected; Start button not pressed.	Check power connection; Ensure door is latched; Select a program; Press Start.
No water intake	Water tap closed; Water inlet hose kinked; Water supply cut off.	Open water tap; Straighten hose; Check household water supply.
Water not draining	Drain hose kinked or blocked; Drain filter clogged.	Straighten or clear drain hose; Clean the drain filter.
Excessive vibration/noise	Transit bolts not removed; Machine not level; Overloaded or unbalanced load.	Remove transit bolts; Adjust leveling feet; Redistribute laundry or reduce load.
Error codes on display	Specific malfunction.	Refer to the full user manual for specific error code meanings and solutions, or contact customer support.

8. SPECIFICATIONS

Detailed technical specifications for the Midea MF100W70B/TT washing machine.

Feature	Specification
Brand	Midea
Model Info	MF100W70B/TT
Product Dimensions (D x W x H)	56 x 60 x 85 cm
Item Weight	65 Kilograms
Efficiency	A+
Capacity	7 Kilograms
Max Spin Speed	1400 RPM
Installation Type	Freestanding
Special Features	Auto Clean, Inverter, Steam
Color	Silver
Control Console	Knob
Access Location	Front Load
Material Type	ABS

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Your Midea Front Loading Washing Machine MF100W70B/TT comes with a comprehensive warranty:

- Full Warranty:** 5 Years on the entire washing machine.
- Inverter Motor Warranty:** An impressive 10 Years on the Inverter Motor.

This warranty is designed to offer lasting satisfaction and reliability. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact Midea customer service. Contact details can typically be found on the Midea official website or your purchase documentation.

