

[Manuals.plus](#) /

› [Dreo](#) /

› Dreo DR-HTF007 Tower Fan and Portable Space Heater User Manual

Dreo DR-HTF007 (Tower Fan) / B0CTKSPMRH (Bundle)

Dreo DR-HTF007 Tower Fan and Portable Space Heater User Manual

Model: DR-HTF007 (Tower Fan) and Portable Space Heater (Bundle ASIN: B0CTKSPMRH)

Brand: Dreo

IMPORTANT SAFETY INSTRUCTIONS

Please read and save these important safety instructions before using the Dreo Tower Fan and Space Heater. Failure to follow these instructions may result in electric shock, fire, or serious injury.

General Safety Precautions:

- Always place the appliance on a firm, level surface.
- Do not operate any appliance with a damaged cord or plug.
- Keep the power cord away from heated surfaces.
- Do not use the appliance outdoors or in wet conditions.
- Unplug the appliance when not in use or before cleaning.
- Do not insert fingers or foreign objects into any openings.
- Ensure proper ventilation around the appliance.

Tower Fan Specific Safety:

- The fan is designed with fingertip pinch-proof grills to prevent accidental injury.
- Features a fused plug and built-in circuit protection for enhanced safety.
- This ETL-listed standing fan prioritizes user safety during operation.

Space Heater Specific Safety:

- Equipped with an innovative tilt-detection sensor for accurate tip-over protection.
- Constructed with V0 flame retardant materials for fire safety.
- Includes overheat protection and a safety plug.
- The heater is ETL certified, ensuring compliance with safety standards.
- Do not cover the heater or block its air inlets/outlets.

PRODUCT OVERVIEW

The Dreco Tower Fan and Portable Space Heater bundle provides versatile climate control for your indoor spaces. The tower fan offers powerful, quiet cooling with oscillation, while the space heater delivers efficient warmth with advanced safety features.



Image: The Dreco Tower Fan (left) and Portable Space Heater (right) shown together. The fan is black and tall, emitting blue air, with a remote control. The heater is compact, black and gold, emitting orange heat.

SETUP AND ASSEMBLY

Tower Fan Setup:

1. **Unpack:** Carefully remove the tower fan and its components from the packaging.
2. **Base Assembly (if required):** If the base is separate, align the fan body with the base and secure it according to the instructions provided in the fan's specific manual (not detailed here).
3. **Placement:** Place the tower fan on a stable, flat surface, ensuring it is at least 1 foot (30 cm) away from walls or other objects to allow for proper airflow and oscillation.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.



Image: A black Dreco Tower Fan standing upright, with blue air flowing from its grille. A black remote control is positioned next to its base. This image illustrates the fan's design and included remote.

Space Heater Setup:

1. **Unpack:** Remove the space heater from its packaging.

2. **Placement:** Position the heater on a stable, level, and heat-resistant surface. Ensure it is placed at least 3 feet (90 cm) away from combustible materials such as furniture, curtains, and bedding.
3. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet. Avoid using extension cords or power strips with the heater.



Image: A compact, cylindrical Dreco Space Heater with a black perforated body and a gold top panel. Orange light emanates from its grille, indicating heat output. This image shows the heater's design.

OPERATING INSTRUCTIONS

Both the tower fan and space heater can be operated via their respective touch control panels or the included remote control (for the fan).

Tower Fan Operation:

- **Power On/Off:** Press the power button on the control panel or remote to turn the fan on or off.
- **Speed Settings:** Cycle through 4 speed levels to adjust airflow intensity.
- **Modes:** Select from 4 operating modes (e.g., Normal, Natural, Sleep, Auto) to suit your preference. In Sleep mode, the display may auto-off and the fan may auto-mute for quiet operation.
- **Oscillation:** Activate the 90° oscillation feature to distribute air across a wider area.
- **Timer:** Set the 8-hour timer for automatic shut-off.
- **Remote Control:** Use the provided remote for convenient operation from a distance.



Image: A Dreo Tower Fan operating in a bedroom setting, with gentle blue airflow indicated. The image highlights the fan's quiet operation, suitable for sleeping environments.

Space Heater Operation:

- **Power On/Off:** Use the power button on the digital display to activate or deactivate the heater.
- **Temperature Control:** Set your desired temperature between 41-95°F (5-35°C) with $\pm 1^\circ\text{F}$ increments using the digital display. The enhanced NTC chipset provides precise temperature control.
- **Modes:** Choose between Eco Mode for energy efficiency and Fan Mode for air circulation without heat.
- **Timer:** Utilize the 1-12 hour timer for automatic shut-off.
- **Oscillation:** The heater also features oscillation for even heat distribution.



Image: A compact Dreco Space Heater placed on a coffee table in a living room, emitting warm orange light. The image emphasizes its ability to provide significant warmth despite its small size.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your Dreo appliances.

1. **Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior surfaces of both the fan and heater with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. **Tower Fan Grille and Impeller:** The tower fan features a removable rear grille and impeller wheel, making internal cleaning more accessible. Refer to the fan's specific manual for detailed instructions on how to remove and clean these components. Ensure all parts are dry before reassembly and use.
4. **Heater Air Inlets/Outlets:** Use a soft brush or vacuum cleaner with a brush attachment to gently remove dust from the air inlets and outlets of the heater.
5. **Storage:** When not in use for extended periods, store the fan and heater in a cool, dry place, preferably in their original packaging.

TROUBLESHOOTING

If you encounter issues with your Dreo Tower Fan or Space Heater, please refer to the following common troubleshooting steps:

- **Appliance Not Turning On:**
 - Ensure the power cord is securely plugged into a working 120V AC outlet.
 - Check if the circuit breaker has tripped.
 - For the heater, verify that the tip-over switch has not been activated (ensure it's on a flat surface).
- **Reduced Airflow (Fan) / Insufficient Heat (Heater):**
 - Check for any obstructions around the air inlets or outlets.
 - Clean the fan's grille and impeller, or the heater's vents, as dust buildup can restrict airflow/heat.
 - For the heater, ensure the thermostat setting is higher than the ambient room temperature.
- **Unusual Noise:**
 - Ensure the appliance is on a stable, level surface.
 - Check for any loose parts or foreign objects inside the fan or heater.
- **Remote Control Not Working (Fan):**
 - Replace the batteries in the remote control.
 - Ensure there are no obstructions between the remote and the fan's sensor.

If the problem persists after attempting these steps, please contact Dreo Customer Support for further assistance.

SPECIFICATIONS

Feature	Description
Brand	Dreo
Model (Fan)	DR-HTF007 (Nomad One)
Model (Bundle ASIN)	B0CTKSPMRH

Feature	Description
Color	Black
Power Source	Corded Electric
Voltage	120 Volts
Indoor/Outdoor Usage	Indoor
Control Method	Touch (and Remote for Fan)
Fan Design	Floor Fan, Tower Form Factor
Fan Air Velocity	Up to 24ft/s
Fan Oscillation	90°
Fan Speeds	4
Fan Modes	4 (e.g., Normal, Natural, Sleep, Auto)
Fan Timer	8 Hours
Heater Type	PTC Ceramic, Convection, Fan & Forced Air
Heater Wattage	1500W
Heater Temperature Range	41-95°F (5-35°C) with ±1°F increments
Heater Timer	1-12 Hours
Special Features	Overheat Protection, Tip-over Protection, ETL Listed, V0 Flame Retardant Materials
Recommended Room Type	Bedroom, Home Office, Study Room

WARRANTY AND SUPPORT

Dreo products are designed for reliability and performance. For specific warranty information regarding your Dreo Tower Fan and Space Heater, please refer to the warranty card included with your purchase or visit the official Dreo website.

For customer support, technical assistance, or to inquire about replacement parts, please contact Dreo Customer Service. You can find contact information and additional resources on the [Dreo Brand Store on Amazon](#) or the official Dreo website.