Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Amazon Basics /
- > Amazon Basics 13 Gallon Tall Kitchen Drawstring Trash Bags User Manual

Amazon Basics AMZB4-13GW-0.9DS-80-FRESH-PCR

Amazon Basics 13 Gallon Tall Kitchen Drawstring Trash Bags

Model: AMZB4-13GW-0.9DS-80-FRESH-PCR | Brand: Amazon Basics

INTRODUCTION

Thank you for choosing Amazon Basics Tall Kitchen Drawstring Trash Bags. These bags are designed for convenience and reliability in managing household waste. Made with 10% post-consumer recycled material, they offer a clean fresh scent and a strong drawstring closure for easy handling. This manual provides essential information for proper use and care of your trash bags.

SAFETY INFORMATION


Please read and adhere to the following safety guidelines:

- Suffocation Hazard: To avoid danger of suffocation, keep this plastic bag away from babies and children.
- Do not use this bag in cribs, beds, carriages, or playpens. This bag is not a toy.
- Store bags in a cool, dry place away from direct sunlight and heat sources.
- Keep out of reach of pets to prevent accidental ingestion.

SETUP AND USAGE

Follow these steps for optimal use of your Amazon Basics trash bags:

- 1. Remove a Bag: Carefully tear one bag from the roll along the perforated line.
- 2. **Insert into Can:** Open the bag and place it inside your 13-gallon tall kitchen trash can. Ensure the top edges of the bag are folded over the rim of the can to secure it in place.
- 3. **Fill the Bag:** Dispose of household waste into the bag. Avoid overfilling or placing sharp objects directly against the bag's sides to prevent punctures.
- 4. **Close and Tie:** Once the bag is full, pull the red drawstrings on either side upwards. Gather the top of the bag and tie the drawstrings together to secure the contents.
- 5. Dispose: Carry the tied bag by the drawstrings to your outdoor waste receptacle for disposal.

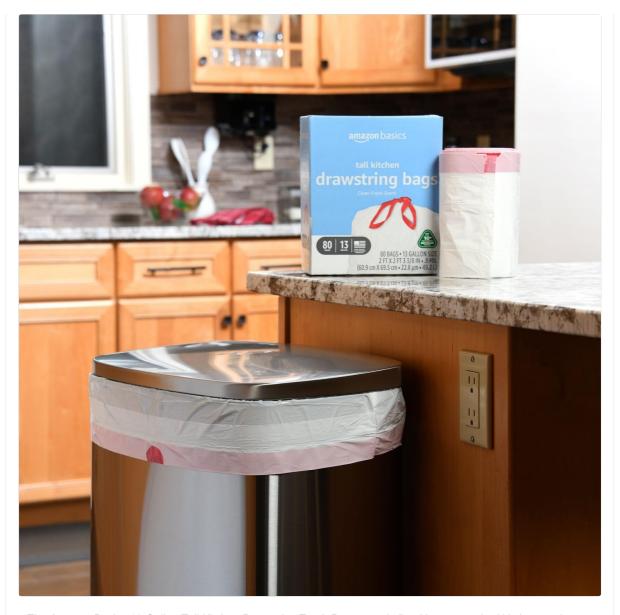

The Amazon Basics 13 Gallon Tall Kitchen Drawstring Trash Bag properly fitted into a standard kitchen trash can.

2 ft DRAWSTRING CLOSURE FITS TALL KITCHEN CANS DIMENSIONS 24" x 27.375" 60.9cm X 69.5cm

Detailed view of the trash bag, highlighting its 24-inch by 27 3/8-inch dimensions and the convenient drawstring closure.

MAINTENANCE AND CARE

These trash bags require minimal maintenance. Store the unused rolls in their original packaging in a cool, dry place to preserve their integrity and scent. Avoid exposing them to extreme temperatures or direct sunlight for prolonged periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bag tears easily	Overfilling or sharp objects inside.	Avoid overfilling. Wrap sharp items before disposal. Consider using two bags for very heavy or sharp waste.
Drawstrings break	Excessive force when tying or carrying.	Ensure the bag is not excessively heavy. Pull drawstrings smoothly and evenly.
Unpleasant odor persists	Strong waste odors or bag not tied properly.	Ensure the drawstring is tightly sealed. Dispose of particularly odorous waste promptly. The bags have a clean fresh scent to help mitigate odors.

SPECIFICATIONS

• Capacity: 13 Gallons

• Count: 80 bags per pack

• Individual Bag Dimensions: 24 inches (width) x 27 3/8 inches (height)

• Bag Thickness: 0.9 mil

• Material: Polyethylene (10% post-consumer recycled material)

• Color: White

• Scent: Clean Fresh

• Closure Type: Drawstring

• Item Model Number: AMZB4-13GW-0.9DS-80-FRESH-PCR

• Product Dimensions (Pack): 7.25 x 4 x 8.56 inches; 4.08 Pounds

• Manufacturer: Amazon.com Services LLC.

• Country of Origin: USA



The packaging for Amazon Basics 13 Gallon Tall Kitchen Drawstring Trash Bags, highlighting key features and count.



MADE WITH 10% POST-CONSUMER RECYCLED MATERIAL*

*garbage or waste that's been used by a consumer, disposed of, and diverted from landfills.

Certification logo confirming the use of 10% post-consumer recycled material in the trash bags.

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Amazon Basics product, please refer to the Amazon customer service portal or visit the official Amazon Basics store online. Information regarding returns and replacements can be found on your purchase receipt or Amazon order details page.

Online Support: Amazon Basics Store

© 2024 Amazon.com Services LLC. All rights reserved.

Related Documents - AMZB4-13GW-0.9DS-80-FRESH-PCR



Amazon Basics Enhanced Dog Waste Bags with Dispenser & Leash Clip - Quick Start Guide

Quick start guide for Amazon Basics Enhanced Dog Waste Bags with Dispenser and Leash Clip, Lavender Scented. Includes instructions on inserting bags, using the dispenser, and product information.

amazon basic



Amazon Basics Narrow Kitchen Trash Can User Manual

User manual for the Amazon Basics Narrow Kitchen Plastic Trash Can with Steel Pedal, Black, 40-Liter. Includes setup, usage, and cleaning instructions.

mazon basic



Amazon Basics Smart BR30 LED Light Bulb User Manual

User manual for the Amazon Basics Smart BR30 LED Light Bulb, a dimmable soft white 4-pack. Learn about setup, usage, troubleshooting, and specifications for this Alexa-compatible smart bulb.

amazon basics



Amazon Basics Premium Cat Scratching Post - Large, Wood - User Manual

User guide and assembly instructions for the Amazon Basics Premium Cat Scratching Post (Large, Wood). Includes safety warnings, cleaning and maintenance tips, a detailed parts list, and step-by-step assembly instructions.



Amazon Basics A19 Smart LED Bulb User Manual - Setup, Features, and Specifications

Comprehensive user manual for the Amazon Basics A19 Smart LED Bulb. Learn how to set up, troubleshoot, and understand the specifications of this color-changing, Alexa-compatible smart bulb.

amazon basics



Amazon Basics 4-Gallon 3 HP Wet/Dry Vacuum Cleaner Manual

Comprehensive user manual for the Amazon Basics 4-Gallon 3 HP Wet/Dry Vacuum Cleaner (Model VO407S). Includes setup, operation, cleaning, maintenance, safety instructions, and specifications.