

Majority Teton (1000002956)

Majority Teton Sound Bar User Manual

Model: Teton (1000002956)

Brand: Majority

INTRODUCTION

The Majority Teton Sound Bar is designed to enhance your home audio experience with powerful 120W stereo 2.1 channel sound and a built-in subwoofer. This manual provides detailed instructions for setting up, operating, and maintaining your sound bar, ensuring optimal performance and longevity.



Image: The Majority Teton Sound Bar in white, accompanied by its remote control.

WHAT'S IN THE BOX

Please check the contents of your package carefully. If any items are missing or damaged, please contact customer support.

- 1x Majority Teton Sound Bar
- 1x Remote Control
- 1x RCA Cable
- 1x Power Cable
- 1x AUX Cable
- 1x User Manual (this document)



MAJORITY Teton

H 8cm x L 81cm x W 8cm



Remote
Control



2 x AAA
Batteries



Mains
Power



RCA
Cable



AUX
Cable



Manual

Image: All components included in the Majority Teton Sound Bar package.

PRODUCT FEATURES

- **Crystal Clear Sound Quality:** Experience immersive audio with 120W powerful stereo 2.1 channel sound, perfect for movies, music, and gaming.
- **Built-in Subwoofer:** Enjoy rich, deep bass without the need for an external subwoofer, saving space and simplifying setup.
- **Multiple Connectivity Options:** Connect to your devices via HDMI ARC, Optical, Bluetooth, RCA, USB, and

AUX inputs for versatile audio playback.

- **Sleek and Modern Design:** The slim profile of the Teton sound bar fits seamlessly under your TV or on a desk, complementing any home decor.
- **Remote Control:** Easily adjust volume, equalizer settings, and switch input sources from the comfort of your couch.
- **Wall Mountable:** Designed for flexible placement, the sound bar can be wall-mounted for an even cleaner setup.



Image: The sound bar connected via Bluetooth to a smartphone.



Wall Mountable

Sleek design, immersive sound,
space-saving solution.

Image: The sound bar positioned under a TV, demonstrating its wall-mountable design.

SETUP GUIDE

1. Placement

Place the sound bar on a stable, flat surface directly in front of your TV, or wall-mount it below your TV. Ensure there are no obstructions in front of the sound bar for optimal sound dispersion.



MAJORITY



Designed in **Cambridge**, Majority's audio products are some of the **best-looking** and **best-sounding**.

The Telegraph.

Image: Proper placement of the sound bar on a media console.

2. Power Connection

1. Connect the power cable to the DC 18V input port on the back of the sound bar.
2. Plug the other end of the power cable into a wall outlet.
3. The sound bar will enter standby mode, indicated by a red LED light.



MAJORITY



Image: Rear view of the sound bar showing the power input and other connectivity ports.

OPERATING INSTRUCTIONS

Using the Remote Control

The included remote control allows full command over your sound bar's functions. Ensure batteries are correctly inserted.

- **Power Button:** Turns the sound bar On/Off or to Standby mode.
- **Input Button:** Cycles through input sources (HDMI ARC, Optical, Bluetooth, RCA, USB, AUX).
- **Volume +/-:** Adjusts the master volume level.
- **Pair Button:** Initiates Bluetooth pairing mode.
- **EQ Modes:** Selects preset equalizer settings (e.g., Movie, Music, Dialogue).

On-Unit Controls

The sound bar also features physical buttons on its side for basic control:

- **Power:** Turns the unit on or off.
- **Input/Source:** Changes the audio input source.

- **Vol+/Vol-:** Adjusts the volume.
- **Pair:** Activates Bluetooth pairing.
- **AUX In:** 3.5mm audio input jack.

CONNECTIVITY

HDMI ARC Connection

For the best audio quality and control, connect your TV to the sound bar using an HDMI ARC cable.

1. Connect one end of an HDMI cable (not included) to the HDMI ARC port on your TV.
2. Connect the other end to the HDMI ARC port on the sound bar.
3. Select "HDMI ARC" as the input source on the sound bar using the remote or on-unit controls.
4. Ensure your TV's HDMI ARC setting is enabled in its audio settings.

Optical Connection

Use an optical cable for high-quality digital audio transmission.

1. Connect an optical cable (not included) from your TV's optical output to the OPTICAL input on the sound bar.
2. Select "Optical" as the input source on the sound bar.
3. Ensure your TV's audio output is set to PCM (Pulse-Code Modulation) if you experience no sound.

Bluetooth Connection

Wirelessly stream audio from your Bluetooth-enabled devices.

1. Press the "Pair" button on the remote or the sound bar to enter Bluetooth pairing mode. The LED indicator will flash blue.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for "Majority Teton".
3. Select "Majority Teton" to connect. Once paired, the LED indicator will turn solid blue.



Image: A smartphone displaying a music app, connected wirelessly to the sound bar via Bluetooth.

RCA Connection

Connect older devices using the RCA stereo audio cable.

1. Connect the red and white plugs of the RCA cable to the corresponding RCA output ports on your device (e.g., DVD player).
2. Connect the other end of the RCA cable to the RCA input ports on the sound bar.
3. Select "RCA" as the input source on the sound bar.

USB Playback

Play audio files directly from a USB flash drive.

1. Insert a USB flash drive (FAT32 format, max 32GB) into the USB port on the sound bar.
2. The sound bar will automatically switch to USB mode and begin playing compatible audio files.

AUX Connection

Connect devices with a 3.5mm audio output using the AUX cable.

1. Connect one end of the 3.5mm AUX cable to the AUX IN port on the sound bar.
2. Connect the other end to the headphone jack or AUX output of your device.
3. Select "AUX" as the input source on the sound bar.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the sound bar. Do not use abrasive cleaners or solvents.
- **Ventilation:** Ensure proper ventilation around the sound bar. Do not block any ventilation openings.
- **Storage:** If storing the sound bar for an extended period, disconnect it from power and store it in a cool, dry place.

TROUBLESHOOTING

Problem	Solution
No power	Check if the power cable is securely connected to the sound bar and the wall outlet. Ensure the power outlet is active.
No sound	Verify the correct input source is selected on the sound bar. Increase the volume on both the sound bar and the connected device. For Optical/HDMI ARC, ensure your TV's audio output is set to PCM. Check cable connections for looseness or damage.
Bluetooth pairing issues	Ensure the sound bar is in Bluetooth pairing mode (flashing blue LED). Move your device closer to the sound bar (within 10 meters). Forget "Majority Teton" from your device's Bluetooth list and try pairing again. Disconnect any other Bluetooth devices connected to the sound bar.
Remote control not working	Check and replace the batteries. Ensure there are no obstructions between the remote and the sound bar's sensor.

SPECIFICATIONS

Feature	Detail
Model Name	Teton
Speaker Type	Soundbar
Special Feature	Bass Boost, Hi Res Audio
Recommended Uses For Product	Indoor
Compatible Devices	Smartphone, Television, Projector, Laptop
Controller Type	Remote Control

Feature	Detail
Surround Sound Channel Configuration	2.1
Color	White
Product Dimensions	35.8"D x 4.92"W x 5"H
Item Weight	3.3 pounds (1.5 Kilograms)
Is Waterproof	FALSE (Not Water Resistant)
Control Method	Remote
Wireless Communication Technology	Bluetooth
Speaker Size	3.27 Inches
Power Source	Corded Electric
Bluetooth Range	10 Meters
Subwoofer Connectivity Technology	Wired (Built-in)
Connectivity Protocol	Bluetooth, USB
Manufacturer	Izilla LTD
Item model number	1000002956
Date First Available	January 30, 2024
Speaker Maximum Output Power	120 Watts
Connectivity Technology	Auxiliary, HDMI, RCA, USB
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount

WARRANTY & SUPPORT

The Majority Teton Sound Bar comes with an **Extended Warranty**. For specific warranty terms and conditions, please refer to the warranty card included in your package or visit the official Majority website. For further assistance, technical support, or to register your product, please visit the [Majority Store on Amazon](#) or contact their customer service directly.