

## xTool xTool P2

# xTool P2 55W CO2 Laser Cutter User Manual

Model: xTool P2

## 1. INTRODUCTION

The xTool P2 is a versatile and intelligent desktop CO2 laser cutter and engraver, designed for both hobbyists and small businesses. Equipped with a powerful 55W laser tube and dual 16MP smart cameras, it offers exceptional precision for a wide range of materials and applications. Its advanced features include automatic 3D model construction for curved surface engraving, intelligent shape recognition for batch processing, and automatic passthrough for extra-long materials.

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your xTool P2 to ensure safe and efficient use.




Figure 1: The xTool P2 55W CO2 Laser Cutter.

# 600mm/s

Superior Engraving Efficiency



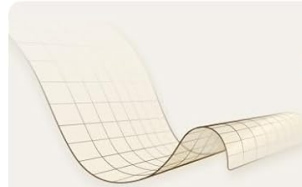 Enclosed Design  
Ensure Safety



## Curve Surface Engraving

3D Curve™ Engraving



### Dual HD Camera

Precision  
Captured

## 55W

The Most Powerful Desktop  
CO2 Laser Cutter



### Autofocus with 0.001" Precision

LiDAR Ranging System



Bed Size

### Cut Acrylic in All Colors



### AI Helps You Design



Material EasySet

Figure 2: Overview of xTool P2's key features and capabilities.

## Product Overview Video

Video 1: An overview of the xTool P2, showcasing its versatility in various creative projects and applications.

## 2. SETUP

Before operating your xTool P2, ensure proper setup by following these steps:

- 1. Unboxing and Placement:** Carefully remove the machine from its packaging. Place the xTool P2 on a stable, level surface in a well-ventilated area, away from flammable materials.
- 2. Remove Protective Materials:** Open the lid and remove all internal foam packaging and protective films from the machine's components.
- 3. Install Slats/Honeycomb Panel:** Place the provided slats or honeycomb panel into the working area.
- 4. Fill Coolant Reservoir:** Locate the coolant reservoir (typically at the back or side of the machine).

Unscrew the cap and carefully pour distilled water or recommended antifreeze (if ambient temperature is below 10°C/50°F) into the reservoir until it reaches the indicated fill line. Securely replace the cap.

5. **Connect Power and USB:** Plug the power cable into the machine and a grounded electrical outlet. Connect the USB cable from the xTool P2 to your computer.
6. **Software Installation:** Download and install the xTool Creative Space (XCS) software from the official xTool website. Follow the on-screen instructions for installation.
7. **Initial Power On:** Press the power button on the machine. The indicator lights should illuminate, and the laser head will perform an initialization sequence.

## 3. OPERATING INSTRUCTIONS


The xTool P2 offers intuitive operation for both cutting and engraving tasks. Familiarize yourself with its core functionalities:

### 3.1 Basic Operation Workflow

1. **Prepare Material:** Place your chosen material (e.g., wood, acrylic, leather) onto the working bed. Ensure it lies flat and is secured if necessary.
2. **Software Setup (XCS):** Open the XCS software. The dual HD cameras will provide a real-time preview of your material on the canvas.
3. **Import/Create Design:** Import your design file (SVG, DXF, PNG, JPG, etc.) or create a new design directly within XCS.
4. **Position and Adjust:** Drag and resize your design on the canvas to align it with your material. Utilize the precise positioning features of the dual cameras for accurate placement, especially for small objects.
5. **Set Parameters:** Select the material type from the software's library or manually set the laser power, speed, and pass count based on your material and desired effect (cutting, engraving, scoring).
6. **Start Processing:** Once all settings are configured, click the "Process" button in the software. The machine will begin its operation. Monitor the process through the transparent lid.

# Powerful 55W CO2 Laser

Cut thick material in one pass.

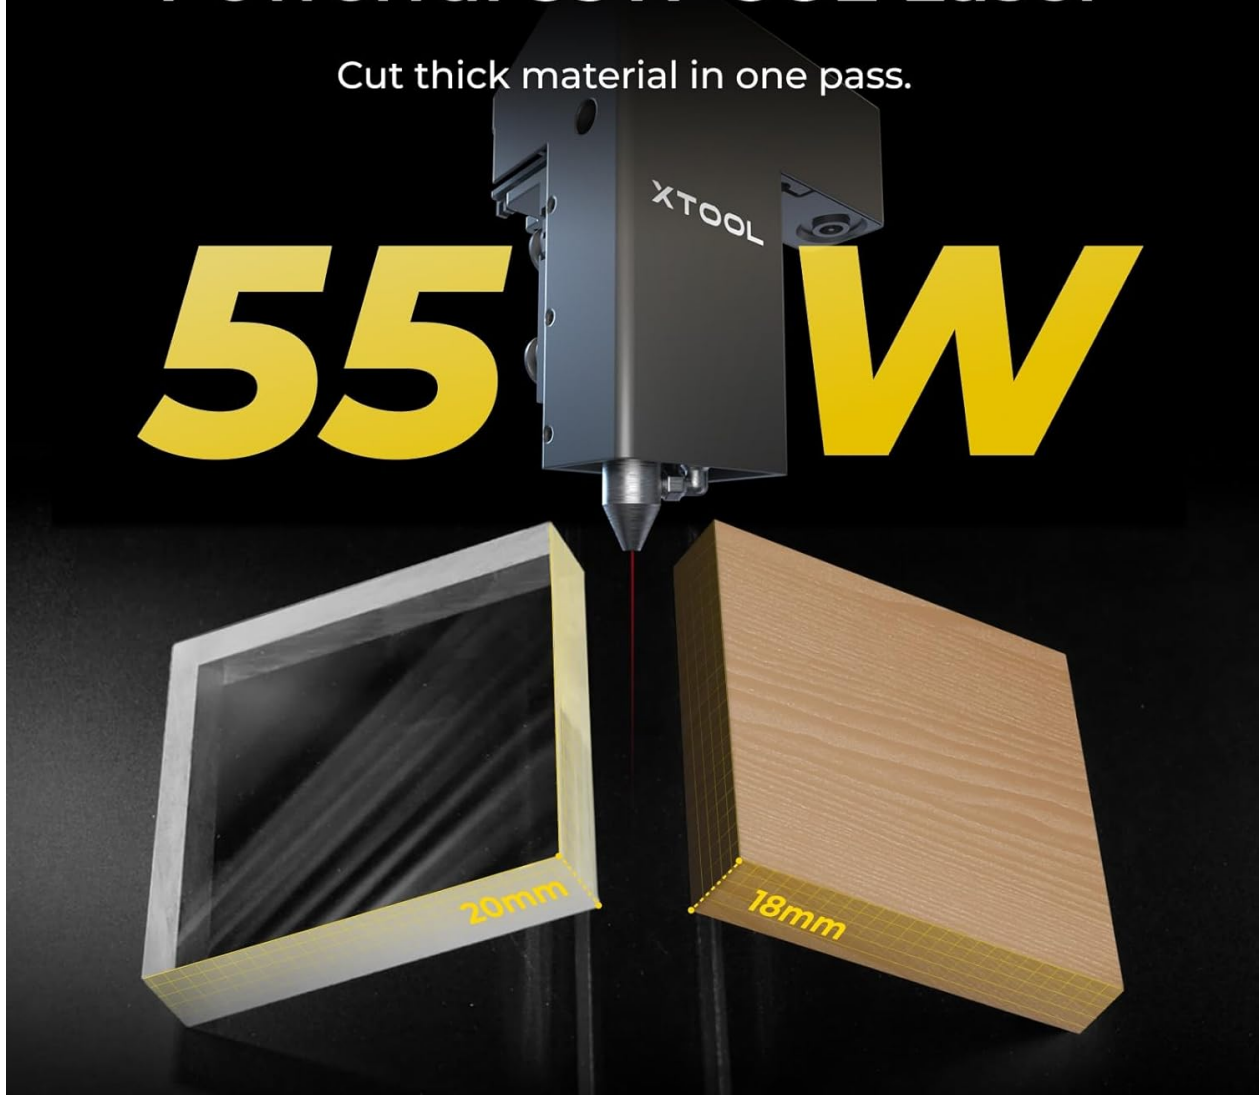 

*Figure 3: The powerful 55W CO2 laser cutting thick materials in a single pass.*

## 3.2 Advanced Features

- **Curved Surface Engraving:** The xTool P2 can automatically construct 3D models of curved objects using its smart cameras, allowing for precise engraving on non-flat surfaces. This feature ensures consistent results across varying contours.



CurveAce™

# Engrave with Ease on Curved Surfaces

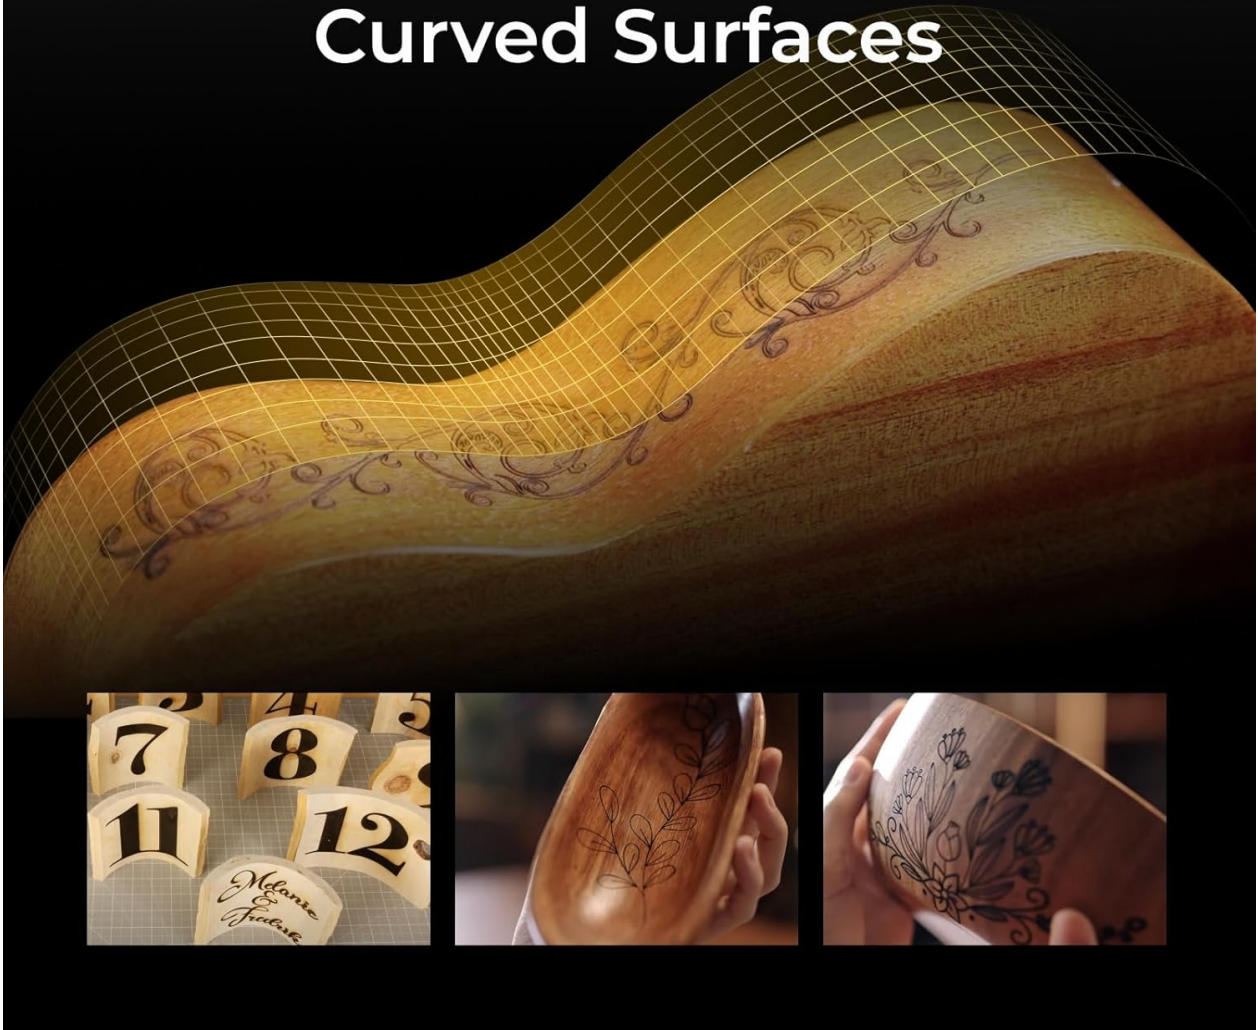 


Figure 4: Engraving intricate designs on curved surfaces with ease.

## Curved Surface Engraving Video

Video 2: Demonstration of the xTool P2's curved surface engraving capabilities.

- **Automatic Passthrough:** For extra-long materials, the xTool P2 supports an automatic conveyor feeder (sold separately) that allows continuous processing of materials up to 118 inches long. This is ideal for large-scale projects like signage.


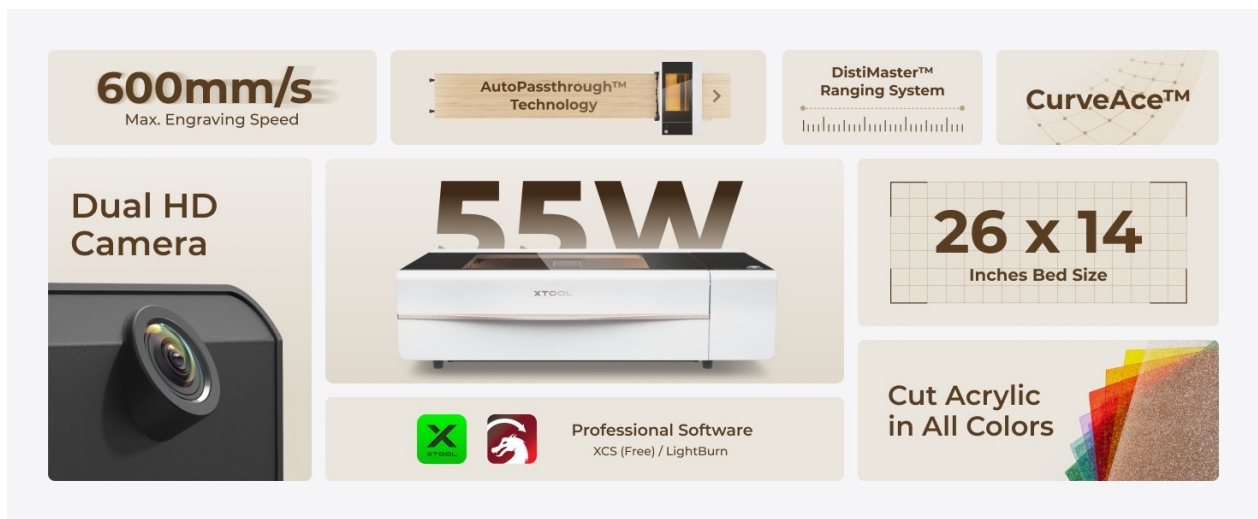 


Figure 5: The automatic passthrough feature for processing extended materials.

## Automatic Conveying Video

Video 3: Showcasing the automatic conveying feature for continuous material processing.

- **Dual HD Cameras:** The integrated 16MP cameras provide a panoramic view for overall design preview and a close-range view for ultra-fine detail positioning, ensuring accurate placement and minimizing material waste.

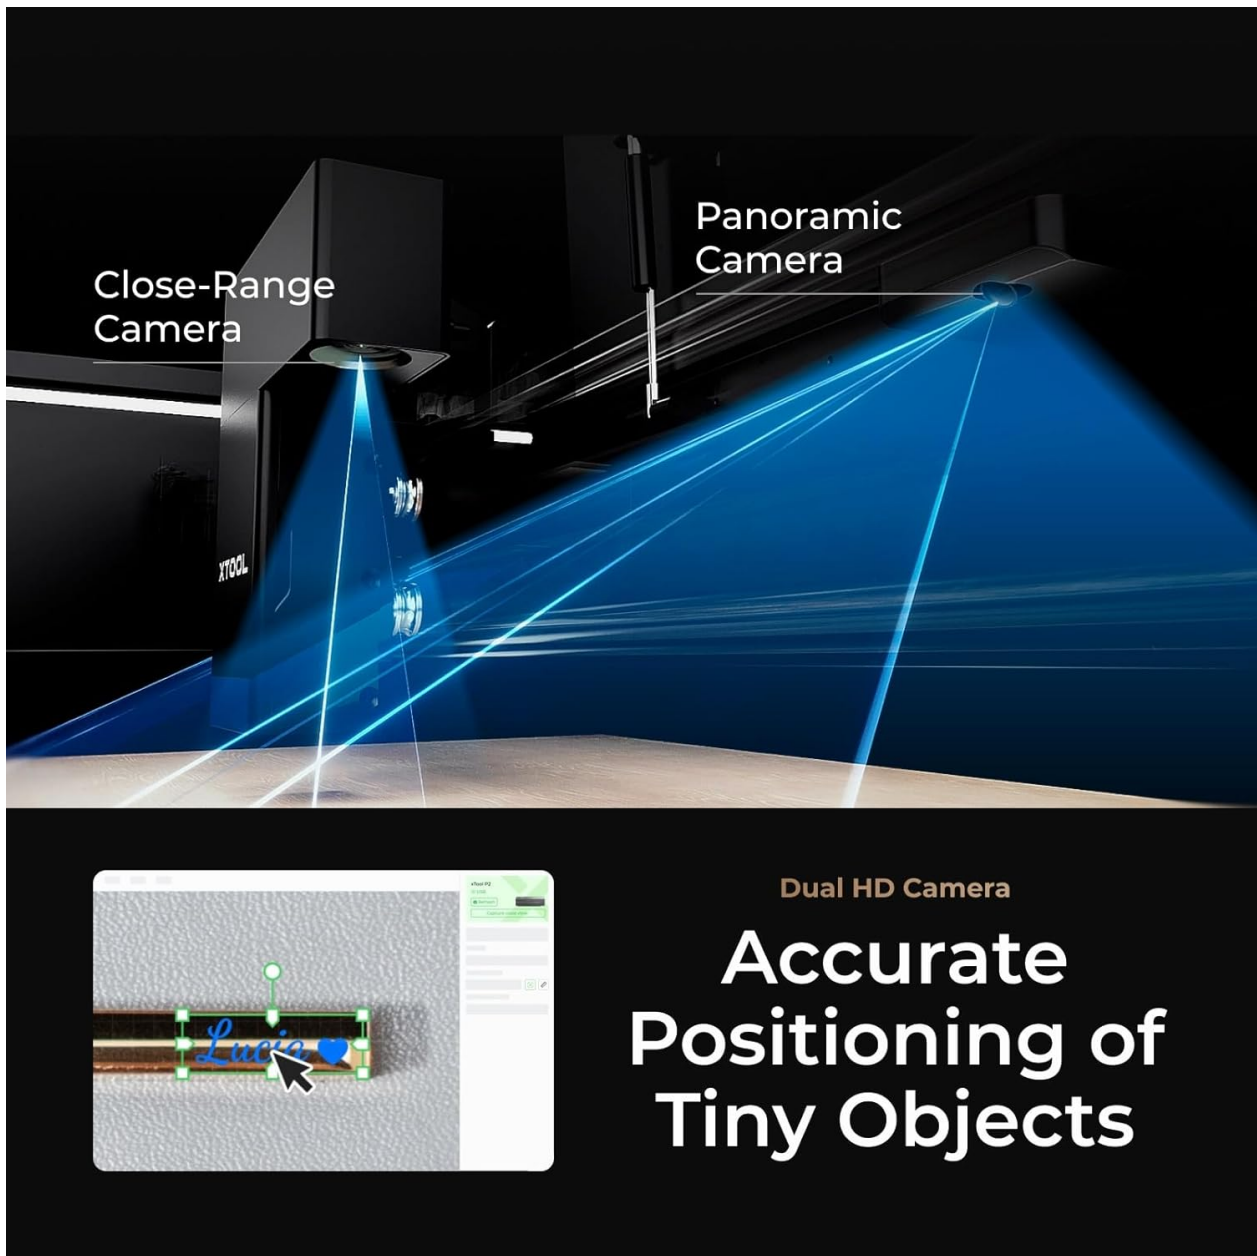 

*Figure 6: The dual HD camera system for precise object positioning.*

- **DistiMaster™ Ranging System:** This advanced LiDAR technology ensures precise auto-focus, delivering accurate distance measurements and consistent cut-through results every time.



DistiMaster™ Ranging System

# Never Miss the Focus, Cut-Through Everytime

It delivers precise distance measurements  
through rigorous radar analysis.



*Figure 7: The DistiMaster™ Ranging System for accurate auto-focus.*

### 3.3 Material Compatibility

The xTool P2 is compatible with a wide array of materials, including but not limited to:

- Wood (various types, including black walnut, basswood, MDF)
- Acrylic (all colors)
- Leather
- Rubber
- Fabric
- Glass (engraving only)
- Ceramic (engraving only)
- Slate (engraving only)
- Coated Metal (engraving only)
- Anodized Aluminum (engraving only)

### 3.4 Business Applications

The xTool P2 is an excellent tool for various business ventures, enabling the creation of custom products and signage.



*Figure 8: Example of an Event Planner utilizing the xTool P2.*



*Figure 9: Example of a Sign Maker utilizing the xTool P2.*



*Figure 10: Example of a Jewelry Designer utilizing the xTool P2.*



*Figure 11: Example of a Woodworker utilizing the xTool P2.*

## Easy Start Your Small Business Video

*Video 4: Showcasing how the xTool P2 can help easily start a small business.*

## 4. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your xTool P2.

- **Lens and Mirror Cleaning:** Regularly inspect and clean the laser lens and mirrors using a lint-free cloth

and lens cleaning solution. Refer to the detailed instructions in the official user manual for proper cleaning procedures.

- **Honeycomb Panel Cleaning:** The honeycomb panel can accumulate residue from cutting. Periodically remove and clean it to maintain efficient smoke exhaust and prevent material staining.
- **Coolant Level Check:** Monitor the coolant level in the reservoir. Refill with distilled water or appropriate antifreeze as needed, especially if operating in temperatures below 10°C (50°F).
- **Exhaust Fan Maintenance:** Ensure the exhaust fan is clear of debris to maintain proper ventilation and smoke extraction.

## 5. TROUBLESHOOTING

If you encounter issues with your xTool P2, consider the following common troubleshooting steps:

- **Machine Not Powering On:** Check the power cable connection to both the machine and the electrical outlet. Ensure the emergency stop button is not engaged.
- **Laser Not Firing/Cutting:** Verify that the lid is fully closed and latched. Check laser power and speed settings in the software; they might be too low for the material. Ensure the material is within the focal range.
- **Poor Cut/Engrave Quality:** This can be due to incorrect material settings, a dirty lens or mirrors, or improper focus. Clean optical components and recalibrate focus if necessary.
- **Software Connection Issues:** Ensure the USB cable is securely connected. Restart both the machine and the software. Try a different USB port or cable.
- **Overheating Warning:** Check the coolant level. Ensure the exhaust fan is working and not obstructed. Allow the machine to cool down before resuming operation.

For persistent issues, refer to the comprehensive troubleshooting guide in the official user manual or contact xTool customer support.

## 6. SPECIFICATIONS

Feature	Detail
Model	xTool P2 (MXP-K002-004)
Laser Power	55W (55000mW) CO2 Laser
Engraving Speed	Up to 600mm/s
Bed Size	26" x 14" (660mm x 355mm)
Max. Engraving Height	2.7" (68mm) (8.4" with Riser Base)
Cameras	Dual 16MP Smart Cameras (Panoramic & Close-range)

Autofocus	DistiMaster™ Ranging System (LiDAR)
Connectivity	USB, Wi-Fi
Product Dimensions	25 x 11 x 39.5 inches
Item Weight	126.4 pounds
Safety Features	Enclosed design, Automatic lock, Emergency stop button, Hydraulic support, Fire safety, Multiple warning systems

# Bed Size 50% Larger Than Others



xTool P2's bed size



Others

Figure 12: Comparison of xTool P2's bed size with other models.

## Why Choose xTool P2

xTool P2							
Power	Bed Size	Max. Working Height	Camera	Vision Precision	Software	Auto-Passthrough	Curved Surface Engraving
55W	26.8" × 14.2"	72mm <small>215mm with Riser Base</small>	16 MP × 2	0.3mm	XCS & LightBurn	✓	✓

Others							
Power	Bed Size	Max. Working Height	Camera	Vision Precision	Software	Auto-Passthrough	Curved Surface Engraving
50W	20.1" × 11.8"	51mm	5 MP	1mm	LightBurn	✗	✗

Figure 13: Detailed feature comparison of xTool P2 against competitors.

## 7. WARRANTY AND SUPPORT

xTool provides comprehensive support for its products:

- **Warranty:** The xTool P2 comes with a 1-year warranty. Please retain your proof of purchase for warranty claims.
- **Customer Support:** For technical assistance, troubleshooting, or any inquiries, you can reach xTool customer support through multiple channels:
  - Email support
  - Live chat on the official website
  - Phone support
  - Facebook group for community support and discussions

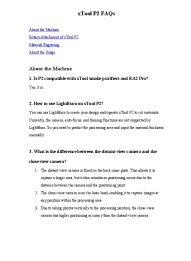







Figure 14: xTool's multi-channel service options for customer support.



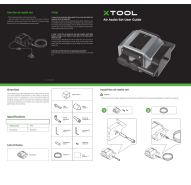Figure 15: The dedicated xTool technical service team.



	<p><a href="#">xTool P2 FAQs: Your Guide to the Smart Desktop Laser Cutter</a></p> <p>Frequently Asked Questions about the xTool P2 laser cutter and engraver, covering compatibility, operation, features, materials, and maintenance.</p>
	<p><a href="#">xTool P2 Laser Cutter Quick Start Guide</a></p> <p>A quick start guide for the xTool P2 laser cutter, covering unboxing, setup, component identification, and initial use instructions.</p>
	<p><a href="#">xTool M1 User Guide: Operate Laser Engraver with xTool Creative Space (XCS)</a></p> <p>Learn to use the xTool M1 10W laser engraver and cutter with this comprehensive guide. Covers XCS software setup, device connection, material preparation, design import, and project processing for wood, metal, and acrylic.</p>
	<p><a href="#">XTOOL Air Assist Set User Guide: Installation and Operation</a></p> <p>Comprehensive user guide for the XTOOL Air Assist Set, detailing installation, specifications, and FAQs for enhanced laser cutting and engraving performance with machines like the XTOOL D1.</p>
	<p><a href="#">Guide to Operating xTool F1 with xTool Creative Space (XCS)</a></p> <p>Learn how to use xTool Creative Space (XCS) software to operate the xTool F1 dual laser engraver. This guide covers installation, connection, material setup, design, parameter settings, preview, and processing.</p>
	<p><a href="#">xTool P2 Quick Start Guide</a></p> <p>A comprehensive quick start guide for the xTool P2 55W CO2 laser cutter and engraver, detailing unboxing, setup, preparation, and initial usage instructions.</p>