

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [COSORI](#) /

> [COSORI Clear Blaze & TurboBlaze Air Fryer Instruction Manual](#)

COSORI CAF-P652-KUS, CAF-DC601-KUS

COSORI Clear Blaze & TurboBlaze Air Fryer Instruction Manual

Models: CAF-P652-KUS (Clear Blaze 6.5 Qt), CAF-DC601-KUS (TurboBlaze 6.0 Qt)

INTRODUCTION

This manual provides essential instructions for the safe operation, maintenance, and troubleshooting of your COSORI Clear Blaze 6.5-Quart Air Fryer (Model: CAF-P652-KUS) and COSORI TurboBlaze 6.0-Quart Air Fryer (Model: CAF-DC601-KUS). Please read all instructions thoroughly before first use and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury. These include:

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- This appliance is for household use only.

PRODUCT OVERVIEW - COSORI CLEAR BLAZE (CAF-P652-KUS)



Image: COSORI Clear Blaze Air Fryer (CAF-P652-KUS) with a recipe book.

Watch your food cook within minutes.

Peek in through the large viewing window to witness powerful heating.



Image: COSORI Clear Blaze Air Fryer with a visible window, allowing monitoring of food during cooking.

Key Features:

- **Capacity:** 6.5-Quart.
- **Visible Window:** Allows monitoring of cooking progress without opening the basket.
- **12 One-Touch Functions:** Includes presets for Steak, Chicken, Seafood, Shrimp, Bacon, Frozen Foods, French Fries, Vegetables, Toast, Bake, Preheat, and Keep Warm.
- **Customizable Presets:** Users can save preferred cooking settings.
- **Nonstick and Dishwasher-Safe Components:** For easy cleaning.

12 Functions for Every Meal

Customizable



Oven Modes



Roast



Bake

Food Settings

Steak Chicken Seafood Bacon
Shrimp Frozen Food Vegetables
French Fries



Image: Control panel of the COSORI Clear Blaze Air Fryer, highlighting its 12 functions including customizable and oven modes.

PRODUCT OVERVIEW - COSORI TURBOBLAZE (CAF-DC601-KUS)



Image: COSORI TurboBlaze 6.0-Quart Air Fryer (CAF-DC601-KUS) with a recipe book and quick start guide.

Large 6-Quart Capacity



**FRENCH
FRIES**
2.5 lbs



**CHICKEN
WINGS**
14 pieces



STEAK
3 lbs



COOKIES
6 pieces



PIZZA
8.5 inches



Image: COSORI TurboBlaze Airfryer demonstrating its 6-quart capacity with examples of cooked food portions.

Key Features:

- **Capacity:** 6.0-Quart (5.7 L).
- **9 Functions:** Includes Air Fry, Roast, Bake, Broil, Dehydrate, Frozen, Proof, Reheat, and Keep Warm.
- **5-Speed Airflow System:** Ensures even cooking.
- **Efficient Cooking:** Designed for faster cooking times.
- **Easy to Clean:** Components are designed for simple cleaning.

9-in-1 Functionality

Cook with a setting for every meal type and a wide temperature range of 90°–450°F.

5 Fan Speeds*

9 Easy Functions

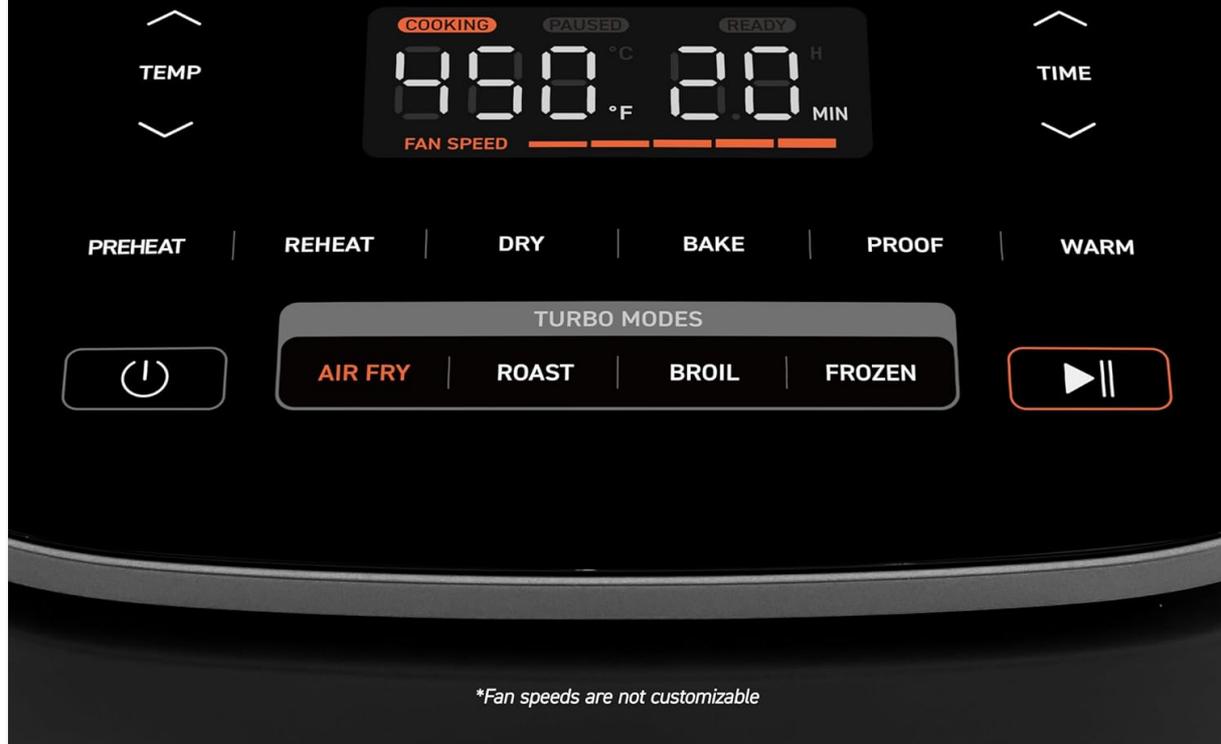


Image: Control panel of the COSORI TurboBlaze Airfryer, displaying its 9 functions and 5 fan speeds.

SETUP

1. **Unpacking:** Remove all packaging materials from the air fryer and its accessories.
2. **Cleaning:** Wipe the exterior of the air fryer with a damp cloth. Wash the basket and crisper plate with hot, soapy water. Rinse and dry thoroughly.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface, away from walls and other appliances to allow for proper air circulation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **Test Run:** Before cooking food, perform a test run to ensure the air fryer is functioning correctly and to eliminate any manufacturing odors. Refer to the specific instructions in your model's quick start guide for test run procedures.

OPERATING INSTRUCTIONS

General Operation:

1. **Prepare Food:** Place ingredients into the air fryer basket. Do not overfill.
2. **Insert Basket:** Slide the basket firmly into the air fryer.

3. **Power On:** Press the power button to turn on the air fryer.
4. **Select Function:** Choose a preset cooking function (e.g., Air Fry, Roast, Bake) or manually set the temperature and time.
5. **Adjust Settings:** Use the temperature and time adjustment buttons to modify settings as needed.
6. **Start Cooking:** Press the start/pause button to begin cooking.
7. **Shake Reminder (Clear Blaze):** Some presets may include a shake reminder. When prompted, remove the basket and shake its contents, then reinsert to resume cooking.
8. **Monitor Progress (Clear Blaze):** Utilize the visible window and internal light to check food without interrupting the cooking cycle.
9. **Completion:** The air fryer will beep when cooking is complete. Carefully remove the basket and transfer food.

Preheating:

For best results, preheating is recommended. Select the 'Preheat' function or manually set the desired temperature and allow the air fryer to heat up before adding food.

Customizing Settings:

Both models allow for manual adjustment of temperature and time. The Clear Blaze model also offers the ability to save custom cooking presets for frequently prepared dishes.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Basket and Crisper Plate:** The basket and crisper plate are nonstick and dishwasher-safe. For stubborn food residue, soak them in warm, soapy water before cleaning with a non-abrasive sponge.
3. **Interior:** Wipe the interior with a damp cloth. For tough stains, use a non-abrasive sponge and mild dish soap. Avoid abrasive cleaners or metal scouring pads.
4. **Exterior:** Wipe the exterior with a damp cloth. Do not immerse the air fryer body in water or any other liquid.
5. **Heating Element:** Clean the heating element with a cleaning brush to remove any food debris.
6. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------------------------|--|---|
| Air fryer does not turn on. | Not plugged in; power outlet issue; appliance malfunction. | Check power cord connection; try a different outlet; contact customer support. |
| Food is not cooked evenly. | Basket overcrowded; food not shaken/flipped; incorrect temperature/time. | Cook in smaller batches; shake/flip food halfway through; adjust temperature/time. |
| White smoke coming from appliance. | Grease residue from previous use; fatty foods cooking. | Clean basket and interior thoroughly; for fatty foods, add a small amount of water to the bottom of the outer pot to prevent smoke. |

| Problem | Possible Cause | Solution |
|---------------------|--|---|
| Food is not crispy. | Too much moisture; not enough oil; basket overcrowded. | Pat food dry before cooking; lightly spray with oil; cook in smaller batches. |

SPECIFICATIONS

| Feature | Clear Blaze (CAF-P652-KUS) | TurboBlaze (CAF-DC601-KUS) |
|-------------------|----------------------------|----------------------------|
| Capacity | 6.5 Qt | 6 Qt / 5.7 L |
| Temperature Range | 170°F–400°F | 90°F–450°F / 30°C–230°C |
| Time Range | 0-60 min | 1 min–24 hr |
| Rated Power | 1700W | 1725W |
| Power Supply | AC 120V, 60Hz | DC 120V, 60Hz |
| Weight | 12.6 lb / 5.7 kg | 13.2 lb / 6 kg |

WARRANTY AND SUPPORT

COSORI provides a limited warranty for this product. For detailed warranty information, please refer to the warranty card included with your product or visit the official COSORI website. If you encounter any issues or have questions regarding your air fryer, please contact COSORI customer support for assistance. Have your model number and purchase information ready when contacting support.