

YSSOA HIKETLELETRIC2LS01V1

YSSOA Stainless Steel Electric Tea Kettle User Manual

Model: HIKETLELETRIC2LS01V1

INTRODUCTION

Thank you for purchasing the YSSOA Stainless Steel Electric Tea Kettle. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and retain it for future reference.

This electric kettle is designed for rapid boiling of water, featuring a 1.8L capacity, automatic shut-off for safety, and a 360-degree rotational base for ease of use. Its durable stainless steel construction ensures longevity and easy cleaning.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before operating the kettle.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- The kettle is equipped with an automatic shut-off feature. Do not attempt to override this function.
- Ensure the lid is securely closed before operating the kettle.
- Do not fill above the maximum fill line to prevent boiling water from overflowing.

PRODUCT OVERVIEW AND COMPONENTS



Overall View: The YSSOA Stainless Steel Electric Tea Kettle, showcasing its sleek silver body, black handle, and base with a red indicator light.



Product Details: This image highlights the stainless steel inner cover, the stainless steel nozzle with an integrated filter, and the LED light indicator on the base.



The on/off button:
Automatically shut off
after boiling.



Collectible Cord:
Convenient storage
saves kitchen space.



One Touch Lid:
The one-touch lid makes
adding water easy.



Key Features: Details of the on/off button for automatic shut-off, the convenient collectible cord storage in the base, and the one-touch lid for easy filling.



Leak Proof
Design



Auto
Shut-off



Dry-boil
Protection



360° Rotating
Base

Base Features: Illustrates the leak-proof design, automatic shut-off, dry-boil protection, and the 360-degree rotating base for easy placement and lifting.

Components:

- **Kettle Body:** Stainless steel construction with a 1.8L capacity.
- **Lid:** One-touch open lid for easy filling.
- **Handle:** Ergonomic, stay-cool handle for safe pouring.
- **Power Base:** 360-degree rotational base with cord storage.
- **On/Off Switch:** Located on the handle, with an integrated LED indicator light.
- **Spout with Filter:** Integrated filter to prevent limescale from entering your cup.

SETUP

1. **Unpack:** Carefully remove the kettle and its power base from the packaging. Retain packaging for future

storage or disposal.

2. **Initial Cleaning:** Before first use, fill the kettle with clean water up to the maximum fill line. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a flat, stable, heat-resistant surface. Ensure the power cord is not dangling where it can be pulled or tripped over.
4. **Power Connection:** Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS



Family-Size Capacity: The kettle has a 1.8L capacity, suitable for multiple servings. Boiling time ranges from 3-8 minutes depending on water volume.



Easy One-Touch Operation: This kettle offers quick boiling, is BPA-free, and operates with a simple one-click action.

1. **Fill the Kettle:** Open the one-touch lid and fill the kettle with the desired amount of fresh water. Do not fill below the minimum mark or above the maximum fill line (1.8L).

- 2. **Place on Base:** Place the kettle securely onto its 360-degree rotational power base.
- 3. **Start Boiling:** Press the on/off switch located on the handle downwards. The LED indicator light will illuminate, indicating that the kettle is heating.
- 4. **Automatic Shut-off:** The kettle will automatically shut off once the water has reached a rolling boil. The LED indicator light will turn off.
- 5. **Pouring:** Carefully lift the kettle from the base using the stay-cool handle and pour the hot water. The cordless design allows for easy pouring.
- 6. **Re-boiling:** If you need to re-boil water immediately after it has shut off, wait a few seconds for the internal thermostat to reset before pressing the switch again.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your electric kettle.

- **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- **Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads as they may scratch the stainless steel finish.
- **Interior Cleaning (Hand Wash):** The stainless steel inner pot is designed for easy cleaning. Rinse the interior with clean water. For stubborn stains, use a soft sponge.
- **Descaling:** Mineral deposits (limescale) can build up inside the kettle over time, especially in hard water areas. To descale:
 - a. Fill the kettle with 1 part white vinegar and 2 parts water.
 - b. Bring the mixture to a boil and let it stand for at least 30 minutes, or longer for heavy buildup.
 - c. Empty the kettle and rinse thoroughly with fresh water several times.
 - d. Alternatively, you can use a solution of baking soda (1 tablespoon) dissolved in water. Boil and rinse as above.
- **Filter Cleaning:** The filter in the spout can be removed for cleaning. Rinse it under running water and use a soft brush if necessary to remove any deposits. Ensure it is properly re-inserted before use.
- **Storage:** When not in use, store the kettle in a clean, dry place. The cord can be neatly stored in the base.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in. Power outlet is not working. Kettle not properly seated on base. Automatic shut-off activated (if recently boiled).	Ensure the kettle is securely plugged into a working outlet. Check the circuit breaker or try another outlet. Ensure the kettle is correctly placed on the power base. Wait a few seconds for the thermostat to reset, then try again.
Water is not boiling.	Insufficient water. Lid is not closed properly.	Ensure water level is above the minimum mark. Close the lid firmly.

Problem	Possible Cause	Solution
Kettle shuts off too soon.	Limescale buildup. Kettle is empty (dry-boil protection).	Descale the kettle as per the "Maintenance and Cleaning" section. Ensure there is sufficient water in the kettle.
Water has an unusual taste/smell.	First use residues. Limescale buildup.	Perform initial cleaning steps (boil and discard water several times). Descale the kettle.

SPECIFICATIONS

PRODUCT DIMENSIONS



Product Dimensions: The kettle measures approximately 6.49 inches in width at the base, 7.9 inches in length, and 9 inches in height.

Feature	Detail
Brand	YSSOA
Model Name	HIKETLELETRIC2LS01V1
Capacity	1.8 Liters (approx. 1.9 Quarts)
Power	1000 Watts
Material	Stainless Steel (inner pot & housing), PP (handle & base)
Product Dimensions	6.5"L x 9.06"W x 7.99"H
Item Weight	1.28 Pounds
Cord Length	70 cm (approx. 27.5 inches)

Feature	Detail
Special Features	Automatic Shut-off, Boil-Dry Protection, 360° Rotational Base, Cordless Design, LED Indicator Light
Care Instructions	Hand Wash
UPC	198401000184

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact YSSOA customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.

Please have your model number (HIKETLELETRIC2LS01V1) and purchase date ready when contacting support. For more information about YSSOA products, you can visit the official YSSOA store on Amazon:[YSSOA Store](#)

© 2024 YSSOA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question