

## EUHOMY B0CTMH479C

# EUHOMY Ice Maker Instruction Manual

Model: B0CTMH479C

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- Ensure the voltage matches the rating label on the appliance.
- Do not immerse the power cord, plug, or any part of the appliance in water or other liquids.
- Unplug the appliance from the outlet when not in use, before cleaning, and before servicing.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for assistance.
- Do not use outdoors. This appliance is for indoor household use only.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Use only potable water in the water reservoir.
- Do not clean the ice maker with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## 2. PRODUCT OVERVIEW

The EUHOMY Ice Maker is designed for convenient and efficient ice production. Familiarize yourself with its components:

- **Control Panel:** Features indicator lights for 'ICE FULL' and 'ADD WATER', and an 'ON/OFF' button.
- **Transparent Window:** Allows observation of the ice making process and ice level.
- **Ice Basket:** Removable basket for collecting and storing ice cubes.
- **Ice Scoop:** For easy removal of ice from the basket.
- **Water Reservoir:** Located beneath the ice basket, where water is stored for ice production.
- **Drain Plug:** Located at the bottom for draining water.
- **Portable Handle:** For easy transportation of the unit.



Figure 2.1: Front view of the EUHOMY Ice Maker, showing its compact design, transparent lid, and integrated handle.

# TRAGBAR - IDEAL FÜR CAMPING & WOHNMOBILE(RV)



90W



11,8 KG



1,2 L



Figure 2.2: Side view of the EUHOMY Ice Maker, highlighting its dimensions (29.4cm H, 29cm D, 22.2cm W) and key features such as 90W power consumption, 1.2L water tank capacity, and BPA-free materials.

## 3. SETUP

1. **Unpacking:** Carefully remove the ice maker from its packaging. Remove all packing materials, including any tape or labels.
2. **Placement:** Place the ice maker on a stable, level surface away from direct sunlight and other heat sources (e.g., stove, furnace, radiator). Ensure there is at least 10 cm (4 inches) of space around the unit for proper ventilation.
3. **Initial Cleaning:** Before first use, clean the interior of the ice maker. Wipe the ice basket and water reservoir with a soft cloth dampened with warm water and a mild detergent. Rinse thoroughly and dry.
4. **First Use:** For the first three cycles of ice production, discard the ice cubes. This ensures any residual manufacturing odors or particles are flushed out, preparing the unit for safe use.

## 4. OPERATING INSTRUCTIONS

Follow these steps to operate your EUHOMY Ice Maker:

1. **Add Water:** Open the lid and remove the ice basket. Fill the water reservoir with potable water up to the 'MAX' fill line. Do not overfill.
2. **Power On:** Close the lid and plug the power cord into a grounded electrical outlet. Press the 'ON/OFF' button to

start the ice making cycle. The 'POWER' indicator light will illuminate.

3. **Ice Production:** The ice maker will begin producing ice. Each cycle takes approximately 6 minutes to produce 9 bullet-shaped ice cubes. The unit can produce up to 12 kg of ice in 24 hours.
4. **Ice Cube Size:** The ice maker produces bullet-shaped ice cubes. There are typically two sizes available: Small (S) and Large (L). Refer to the control panel or manual for specific instructions on how to select the desired size, if applicable to your model.
5. **Indicators:**
  - **'ADD WATER' Indicator:** If this light illuminates, it means the water level in the reservoir is too low. Add more water and the ice maker will automatically resume operation.
  - **'ICE FULL' Indicator:** This light indicates that the ice basket is full. The ice maker will pause operation until some ice is removed. Once ice is removed, the unit will automatically resume.
6. **Removing Ice:** Use the provided ice scoop to remove ice from the basket.
7. **Power Off:** To stop the ice maker, press the 'ON/OFF' button. Unplug the unit when not in use for extended periods.



Figure 4.1: Illustration of the ice production process, showing 9 ice cubes formed in approximately 6 minutes. The ice basket can hold 65-85 pieces, and the machine produces up to 12 kg of ice per 24 hours.

# 2 Würfelgrößen zur Auswahl

Sie können die Eisgröße nach Ihren Bedürfnissen auswählen.



Figure 4.2: Visual representation of the two available ice cube sizes: Small (S) with dimensions 22mm diameter x 24mm length, and Large (L) with dimensions 25mm diameter x 26mm length. Users can select their preferred size.



Figure 4.3: The ice maker in operation, showcasing its transparent lid and the ice cubes being produced. This image emphasizes its large capacity, quick ice production, self-cleaning feature, and portable design.

## 5. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and longevity of your ice maker.

### 5.1 Automatic Self-Cleaning Function

1. Ensure the water reservoir is filled with clean water.
2. Press and hold the 'ON/OFF' button for 5 seconds. The self-cleaning program will start and run for approximately 30 minutes.
3. Once the cleaning cycle is complete, unplug the unit.
4. Remove the drain plug at the bottom of the unit to drain the dirty water.
5. Replace the drain plug securely.



Figure 5.1: Steps for activating the automatic cleaning function. Press and hold the ON/OFF button for 5 seconds to start the 30-minute cleaning cycle, then remove the drain plug to empty the water.

### 5.2 Manual Cleaning

- **Exterior:** Wipe the exterior of the ice maker with a soft cloth and a mild cleaning solution. Do not use abrasive cleaners or solvents.

- **Interior:** For thorough cleaning, remove the ice basket. Drain any remaining water from the reservoir using the drain plug. Clean the interior surfaces, including the water reservoir, with a soft cloth and a solution of warm water and vinegar or a mild, food-safe detergent. Rinse thoroughly with clean water.
- **Ice Basket and Scoop:** Wash the ice basket and scoop in warm, soapy water, rinse, and dry completely before placing them back into the unit.
- **Storage:** If storing the ice maker for an extended period, ensure it is completely dry. Leave the lid slightly ajar to allow for air circulation and prevent mold or mildew growth.

## 6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Ice maker does not turn on.	No power.	Check if the power cord is securely plugged into a working outlet. Check the circuit breaker.
'ADD WATER' indicator is on.	Water reservoir is empty or low.	Add potable water to the reservoir up to the 'MAX' line.
'ICE FULL' indicator is on.	Ice basket is full.	Remove ice from the basket. The unit will resume operation automatically.
Ice cubes are small or not forming properly.	Water temperature is too high; ambient temperature is too high; insufficient water.	Use colder water. Place the ice maker in a cooler environment. Ensure the water reservoir is adequately filled.
Unusual noise during operation.	Unit is not level; internal components vibrating.	Ensure the ice maker is on a stable, level surface. If noise persists, contact customer support.

## 7. SPECIFICATIONS

- **Model:** B0CTMH479C
- **Dimensions (L x W x H):** 29 x 22.2 x 29.4 cm
- **Weight:** 6.71 kg
- **Power:** 90 Watts
- **Voltage:** 220 Volts
- **Water Tank Capacity:** 1.2 Liters
- **Ice Production Capacity:** Up to 12 kg per 24 hours
- **Ice Basket Capacity:** Up to 0.6 kg
- **Ice Production Cycle:** 9 ice cubes in approximately 6 minutes
- **Material:** Stainless Steel
- **Refrigerant:** R600a
- **Noise Level:** <45 dB
- **UPC:** 850052496883

## 8. WARRANTY AND SUPPORT

This EUHOMY Ice Maker comes with a **12-month warranty** from the original date of purchase, covering manufacturing defects. Additionally, we provide **lifetime technical support** for your product.

If you have any questions regarding the use of your ice maker, require technical assistance, or need to make a warranty claim, please contact our customer service team. Our support is available to assist you.

Please retain your proof of purchase for warranty purposes.

