

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LETSACTIV](#) /

› [LETSACTIV Wireless TV Headphones M98 User Manual with Charging Station for Seniors and Hard of Hearing](#)

LETSACTIV M98

LETSACTIV Wireless TV Headphones M98 User Manual

Model: M98 | Brand: LETSACTIV

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your LETSACTIV M98 Wireless TV Headphones. Designed for enhanced home entertainment, these headphones offer a private listening experience with low latency audio, making them ideal for seniors and individuals with hearing impairments. Please read this manual thoroughly before use to ensure proper functionality and longevity of your device.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, humidity, or liquids.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified service personnel.
- Keep out of reach of children.
- Prolonged listening at high volumes may cause hearing damage. Adjust volume to a comfortable level.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1x LETSACTIV M98 Wireless TV Headphones
- 1x Transmitter / Charging Station
- 1x 3.5mm Audio Cable
- 1x RCA Adapter Cable
- 1x Optical Audio Cable
- 1x USB-C Charging Cable

- 1x Power Adapter
- 1x User Manual

PRODUCT OVERVIEW

The LETSACTIV M98 system consists of wireless headphones and a transmitter that also functions as a charging station.



Image: The LETSACTIV M98 Wireless TV Headphones resting on their charging station. The headphones are black with comfortable earcups and an adjustable headband. The charging station is a compact black base.

Headphone Components:

- **Power/Volume Control:** Located on the earcup for easy access.
- **Charging Port:** On the earcup for direct cable charging.
- **LED Indicator:** Displays power and connection status.
- **Adjustable Headband:** For a comfortable fit.
- **Protein Leather Earcups:** Designed for comfort and breathability.

Transmitter/Charging Station Components:

- **Charging Pins:** For docking the headphones.
- **Power Input:** Connects to the power adapter.
- **Audio Inputs:** Optical, AUX (3.5mm), RCA ports for connecting to a TV or other audio source.
- **Status LED:** Indicates transmitter power and connection status.

SETUP

1. Powering the Transmitter

1. Connect the provided power adapter to the transmitter's power input.
2. Plug the power adapter into a wall outlet. The transmitter's status LED will illuminate.

2. Charging the Headphones

Before first use, fully charge the headphones.

- **Using the Charging Station:** Place the headphones onto the charging pins of the transmitter. Ensure the charging contacts align. The headphone LED will indicate charging status. A full charge takes approximately 2 hours.
- **Direct Charging:** Connect the USB-C charging cable to the headphone's charging port and a USB power source.

3. Connecting the Transmitter to your TV/Audio Source

The transmitter supports Optical, AUX (3.5mm), and RCA audio inputs. Choose the appropriate cable based on your TV's available output ports.

Breite Kompatibilität



Unterstützte Sender:
Optischer RCA AUX

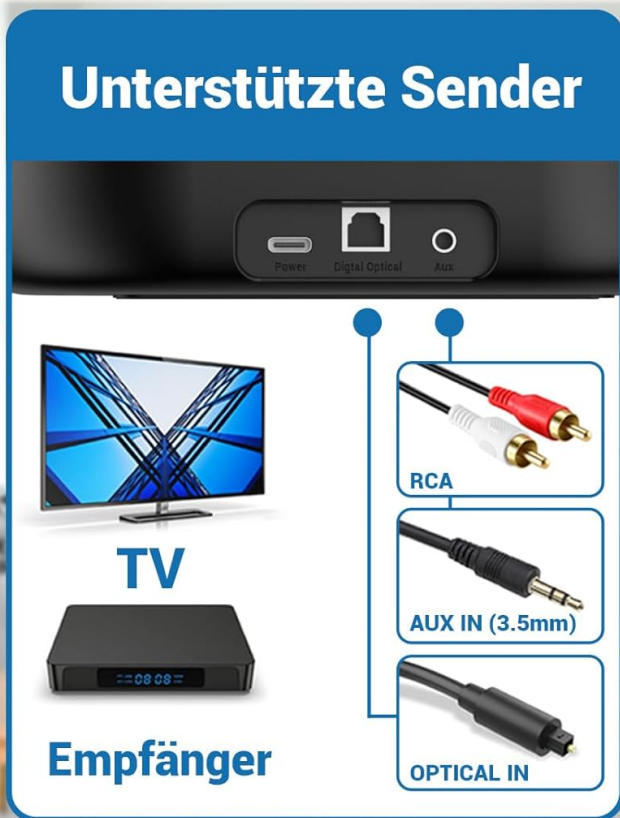


Image: A diagram illustrating the broad compatibility of the transmitter, showing connections for Optical, RCA, and AUX 3.5mm audio inputs from a TV to the transmitter. The transmitter has clearly labeled ports for Power, Digital Optical, and Aux.

1. Optical Connection (Recommended for best audio quality):

Connect one end of the optical audio cable to your TV's Optical Digital Audio Out port and the other end to the transmitter's Optical IN port. Ensure the protective caps are removed from the cable ends.

2. AUX (3.5mm) Connection:

Connect one end of the 3.5mm audio cable to your TV's 3.5mm Audio Out (headphone jack) and the other end to the transmitter's AUX IN port.

3. RCA Connection:

Connect the RCA adapter cable to your TV's RCA Audio Out ports (red and white). Then, connect the 3.5mm end of the RCA adapter cable to the transmitter's AUX IN port.

Important: After connecting, you may need to adjust your TV's audio output settings to send sound through the selected port (e.g., set audio output to 'External Speakers' or 'Optical Out').

4. Powering On and Automatic Pairing

The LETSACTIV M98 headphones are designed for 'Plug and Play' operation, meaning they should automatically pair with the transmitter once both are powered on.

1. Ensure the transmitter is powered on and connected to your TV.

2. Turn on the headphones by pressing and holding the Power button on the earcup.
3. The headphones and transmitter will automatically establish a connection. The LED indicators on both devices will confirm a successful connection (refer to the LED indicator section in the full manual for specific light patterns).

OPERATING

Wearing the Headphones

Adjust the headband for a comfortable and secure fit. The protein leather earcups are designed for extended wear.

Bequeme, individuelle Passform

Angenehm zu tragen mit Ohrstöpseln aus Memory-Schaum



Porosität

Image: A close-up view of the headphone earcup, highlighting the breathable protein leather material and memory foam for comfortable, individual fit.

Volume Control

Use the volume control knob/buttons on the headphone earcup to adjust the listening volume to your preference. You can also control the TV's volume independently if your TV settings allow.

Low Latency Audio

The headphones utilize Bluetooth 5.2 technology to provide an ultra-low latency audio experience (less than 40ms). This ensures perfect synchronization between audio and video, preventing noticeable lip-sync delays.



Image: A person exercising while watching TV with the LETSACTIV headphones, demonstrating the real-time synchronization and low audio delay (less than 40ms) for an immersive experience.

Extended Connection Range

The wireless connection range extends up to 90 meters (295 feet), allowing you to move freely around your home without losing audio signal.

Verbindungsreichweite bis zu 295 Fuß oder 90 Meter

Die TV-Kopfhörer spielen hochwertigen Klang mit einer Reichweite von 295 Fuß oder 90 Meter



Image: A person wearing the headphones and walking away from a TV, illustrating the extended connection range of up to 90 meters (295 feet) from the transmitter.

Battery Life

The headphones provide up to 45 hours of playtime on a single full charge. When not in use, simply place them on the charging station for convenient recharging.

45 Stunden Spielzeit



Image: A graphic displaying the impressive battery life of the headphones, indicating 45 hours of playtime and a 2-hour charging time via USB-C.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones and charging station. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the headphones on the charging station or in a cool, dry place.
- **Battery Care:** To prolong battery life, avoid fully discharging the headphones frequently. Charge them regularly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No sound from headphones	Headphones not powered on; Not paired; TV audio output incorrect; Cable loose/incorrect.	Ensure headphones are on and charged. Check transmitter power. Verify TV audio output settings. Reconnect audio cables securely.
Audio delay/lip-sync issues	Rare, but can occur with certain TV settings or external devices.	Ensure no other Bluetooth devices are interfering. Check TV audio delay settings if available. Restart both devices.
Headphones not charging	Improper placement on charging station; Faulty cable/adapter.	Ensure headphones are correctly seated on the charging pins. Check USB-C cable and power adapter.
Poor sound quality/static	Out of range; Interference; Low battery.	Move closer to the transmitter. Avoid strong electromagnetic interference. Charge headphones fully.

SPECIFICATIONS

Feature	Detail
Model Name	M98
Connectivity Technology	Wireless (Bluetooth 5.2)
Wireless Communication Technology	Bluetooth
Audio Latency	< 40ms
Connection Range	Up to 90 meters (295 feet)
Battery Life	Up to 45 hours playtime
Charging Time	Approx. 2 hours (USB-C)
Battery Composition	Lithium-ion
Audio Inputs (Transmitter)	Optical, AUX 3.5mm, RCA
Ear Placement	Over-Ear (Circum-Aural)
Material	Premium Protein Leather (earcups)
Control Type	Volume Control, Push Button
Color	Pure Black
Compatible Devices	TVs, Smartphones, Laptops, Bluetooth-compatible devices

WARRANTY AND SUPPORT

LETSACTIV products are designed for reliability and performance. For warranty information, please refer to the documentation included with your purchase or contact LETSACTIV customer support.

If you encounter any issues or have questions not covered in this manual, please contact our customer support team for assistance. Contact details can typically be found on the product packaging or the official LETSACTIV website.