

HP 15t-fd

HP 15.6" Anti-Glare HD Business Laptop (Model 15t-fd)

User Instruction Manual

1. INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your HP 15.6" Anti-Glare HD Business Laptop. This laptop features an Intel Core i7-1355U processor, 16GB DDR4 RAM, and a 256GB PCIe SSD, running on Windows 11 Home. Please read this manual thoroughly to ensure proper use and care of your device.

2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- HP 15.6" Anti-Glare HD Business Laptop
- Power Adapter
- Dockzorm Portable USB Hub
- Documentation (this manual)

3. PRODUCT OVERVIEW

Familiarize yourself with the components and ports of your HP laptop.

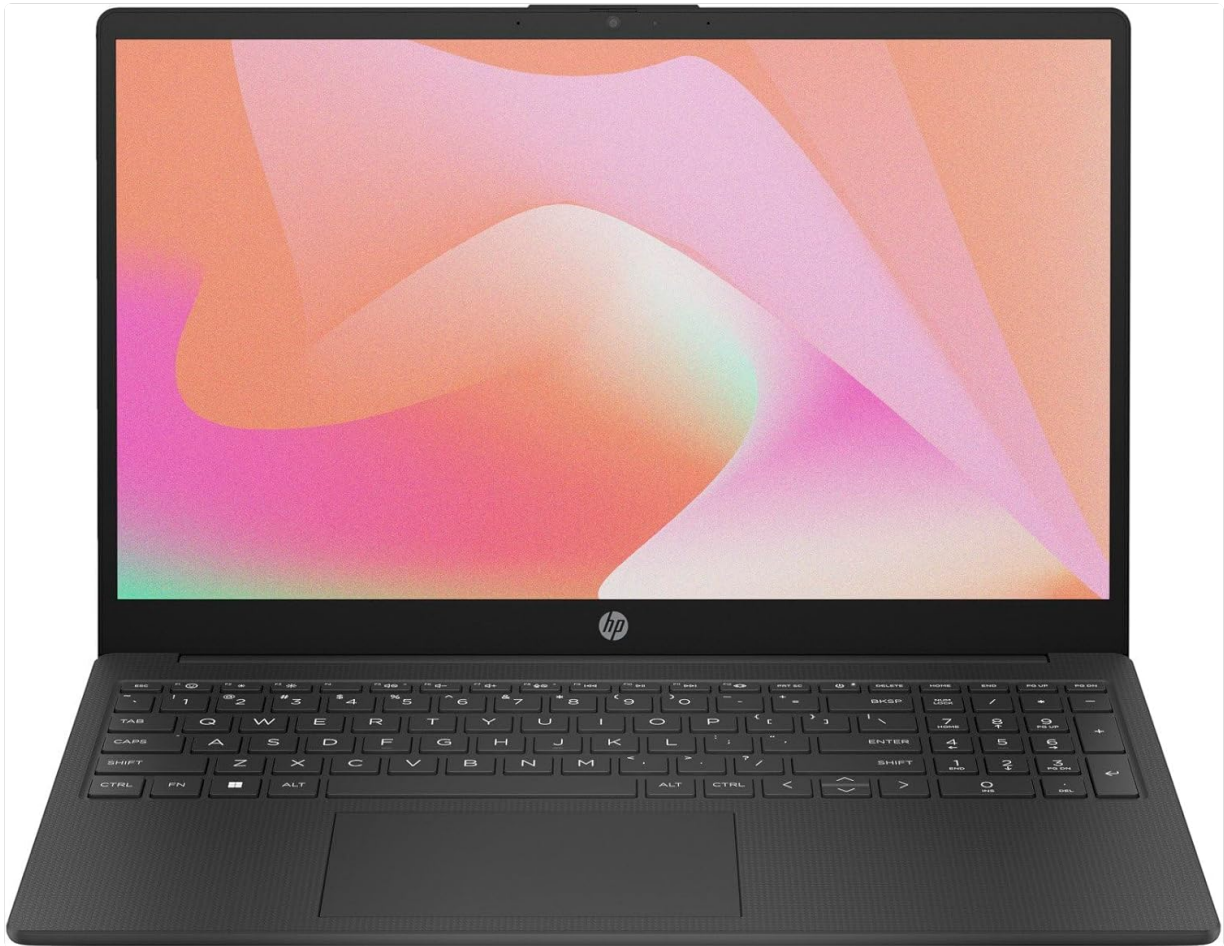


Figure 3.1: Front view of the HP 15.6 inch laptop, showing the screen, keyboard, and touchpad.



Figure 3.2: Left side ports including USB Type-A, HDMI, USB Type-C, and headphone/microphone combo jack.



Figure 3.3: Right side ports including USB Type-A and power connector.



Figure 3.4: Dockzorm Portable USB Hub.

4. SETUP

4.1 Initial Power-On

1. **Connect the Power Adapter:** Plug the power adapter into the laptop's power port and then into a wall outlet.
2. **Charge the Battery:** Allow the laptop to charge for at least 30 minutes before initial use, or until the battery indicator shows sufficient charge.
3. **Power On:** Open the laptop lid and press the power button, typically located above the keyboard or on the side.
4. **Windows 11 Setup:** Follow the on-screen instructions to complete the Windows 11 initial setup, including language, region, network connection, and user account creation.

4.2 Connecting the Dockzorm Portable USB Hub

The included Dockzorm Portable USB Hub can expand your connectivity options:

1. Locate an available USB port on your laptop (preferably a USB Type-C port if available on the hub).
2. Plug the Dockzorm Hub's cable into the laptop's USB port.
3. Connect your USB devices (e.g., external drives, mouse, keyboard) to the available ports on the Dockzorm Hub.

5. OPERATING INSTRUCTIONS

5.1 Power Management

- **Power On:** Press the power button.
- **Shut Down:** Click the Start button, then Power > Shut down.
- **Restart:** Click the Start button, then Power > Restart.

- **Sleep:** Close the lid or click the Start button, then Power > Sleep.

5.2 Using the Keyboard and Touchpad

- **Keyboard:** The laptop features a standard QWERTY keyboard. Function keys (F1-F12) often have secondary actions (e.g., volume, brightness) accessible by pressing the **Fn** key simultaneously.
- **Touchpad:** Use the touchpad for cursor control. Tap to click, two-finger tap for right-click, and pinch-to-zoom are common gestures.

5.3 Wireless Connectivity

- **Wi-Fi:** Click the Wi-Fi icon in the taskbar, select your network, enter the password, and click Connect.
- **Bluetooth:** To pair a Bluetooth device, go to **Settings > Bluetooth & devices**, turn on Bluetooth, and select your device to pair.

5.4 External Displays

Connect an external monitor or projector using the HDMI port. Press **Windows key + P** to cycle through display modes (Duplicate, Extend, Second screen only).

6. MAINTENANCE

6.1 Cleaning

- **Screen:** Use a soft, lint-free cloth slightly dampened with water or a screen cleaner. Avoid harsh chemicals.
- **Keyboard and Chassis:** Use a soft cloth to wipe surfaces. A can of compressed air can remove debris from between keys.

6.2 Software Updates

Regularly check for and install Windows updates to ensure system stability and security. Go to **Settings > Windows Update**.

6.3 Battery Care

- Avoid extreme temperatures.
- Do not fully discharge the battery frequently.
- If storing the laptop for an extended period, ensure the battery is charged to about 50%.

7. TROUBLESHOOTING

- **Laptop not powering on:** Ensure the power adapter is securely connected and the battery has sufficient charge. Try a different power outlet.
- **No display:** Connect an external monitor to check if the issue is with the laptop's screen. Restart the laptop.
- **Wi-Fi connectivity issues:** Check if Wi-Fi is enabled. Restart your router and laptop. Ensure drivers are up to date.
- **Slow performance:** Close unnecessary applications. Check for malware. Ensure sufficient free storage space.
- **Peripheral not recognized:** Try connecting the device to a different USB port or another computer to rule out device malfunction. Ensure necessary drivers are installed.

8. SPECIFICATIONS

Feature	Specification
Brand	HP
Model Name	15t-fd
Operating System	Windows 11 Home
CPU Model	Intel Core i7-1355U
CPU Speed	1.7 GHz (up to 5 GHz)
RAM Memory Installed Size	16 GB DDR4 SO-DIMM
Memory Storage Capacity	256 GB PCIe NVMe SSD
Graphics Coprocessor	Intel UHD Graphics (Integrated)
Screen Size	15.6 Inches Anti-glare HD
Display Resolution Maximum	1366 x 768 pixels
Connectivity Technology	Bluetooth 5.3, HDMI, USB, Wi-Fi 6 (802.11ax)
Ports	HDMI, USB 3.2 Type-C, USB Type-A, Headphone/Microphone Combo Jack
Built-In Media	Webcam
Battery	3-Cell 41 WHr
Item Dimensions (WxLxH)	14 IN x 9 IN x 0.65 IN
Item Weight	3.5 Pounds
Color	Jet Black

9. WARRANTY INFORMATION

This HP laptop comes with a 1-year manufacturer warranty. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty documentation included with your product or visit the official HP support website.

10. SUPPORT

For technical assistance, driver downloads, or further information regarding your HP 15.6" Anti-Glare HD Business Laptop, please visit the official HP support website. You can typically find support resources, FAQs, and contact options there.

