

[Manuals.plus](#) /

› [Mega Bloks](#) /

› MEGA BLOKS Disney Celebration Castle (Model HXP10) Instruction Manual

Mega Bloks HXP10

MEGA BLOKS Disney Celebration Castle (Model HXP10) Instruction Manual

For ages 12 months and up

INTRODUCTION

This manual provides instructions for the assembly, use, and care of your MEGA BLOKS Disney Celebration Castle building set, Model HXP10. This set is designed to encourage imaginative play and develop motor skills in young children.

IMPORTANT SAFETY INFORMATION

WARNING: This product contains or may generate small parts that can cause choking. Adult supervision is recommended during play, especially for children under 3 years old.

Please inspect all pieces before and after each use for any damage. Discard any broken or damaged parts immediately.

PACKAGE CONTENTS

Your MEGA BLOKS Disney Celebration Castle set includes 96 large building blocks and special pieces, along with four Disney character figures. Please verify all components are present before beginning assembly.

- 96 large building blocks and special castle pieces
- 1 Mickey Mouse figure
- 1 Minnie Mouse figure
- 1 Dumbo figure
- 1 Tinker Bell figure
- Castle base with rotating platform
- Slide piece
- Teacup accessories



Image: Product packaging displaying the complete set contents, including blocks and figures.

SETUP AND ASSEMBLY

The MEGA BLOKS Disney Celebration Castle is designed for easy assembly, allowing young builders to construct their own magical world. Follow these general steps to build your castle:

1. **Unpack all components:** Carefully remove all blocks and figures from the packaging.
2. **Identify the base:** Locate the large green base piece, which includes the rotating platform.
3. **Build the main castle structure:** Use the larger blocks to construct the castle walls, towers, and archway. Refer to the images on the packaging or the included instruction sheet for guidance on the castle design.
4. **Attach special features:** Integrate the slide piece and teacup accessories into the castle structure as desired.
5. **Place the figures:** Position Mickey, Minnie, Dumbo, and Tinker Bell figures within the castle or on the rotating platform.



©2023 MEGA Brands.

©Disney

Image: A fully assembled Disney Celebration Castle, showcasing its various sections and character placement.



©2023 MEGA Brands.

©Disney

Image: Individual Disney character figures (Mickey, Minnie, Dumbo, Tinker Bell) and various MEGA BLOKS pieces, illustrating their design.

OPERATING AND PLAY

Once assembled, the Disney Celebration Castle offers multiple interactive play opportunities:

- **Character Play:** Use the Mickey, Minnie, Dumbo, and Tinker Bell figures to create stories and adventures within the castle.
- **Rotating Platform:** Place figures in the teacups on the green base and manually spin the platform for a fun ride.
- **Slide Fun:** Send figures down the castle slide for an exciting descent.
- **Creative Building:** The large, easy-to-grasp blocks are designed for small hands, allowing children to build and rebuild the castle in various configurations, fostering creativity and imagination.



©2023 MEGA Brands.

©Disney

Image: The rotating teacup platform in action, with Dumbo and Tinker Bell figures enjoying the ride.



Image: Two young children engaging in imaginative play with the assembled Disney Celebration Castle, demonstrating its interactive features.

MAINTENANCE AND CARE

To ensure the longevity and hygiene of your MEGA BLOKS Disney Celebration Castle, follow these care instructions:

- **Cleaning:** Wipe blocks and figures with a damp cloth and mild soap. Rinse thoroughly with water and air dry. Do not immerse electronic components (if any) in water.
- **Storage:** Store the blocks and figures in a clean, dry place away from direct sunlight and extreme temperatures to prevent warping or discoloration.
- **Inspection:** Regularly check all pieces for wear and tear, cracks, or damage. Replace any damaged parts to maintain safety.

TROUBLESHOOTING

If you encounter any issues with your MEGA BLOKS Disney Celebration Castle, consider the following:

- **Difficulty connecting blocks:** Ensure blocks are aligned correctly. Apply gentle, even pressure. If blocks are consistently difficult to connect, check for any debris or manufacturing defects.
- **Missing pieces:** Carefully check all packaging materials. If a piece is genuinely missing, contact customer support (see "Warranty and Support" section).
- **Figures not standing:** Ensure figures are placed on flat surfaces or properly inserted into designated slots (e.g., teacups).

SPECIFICATIONS

Model Number	HXP10
Brand	Mega Bloks
Number of Pieces	96
Material Type	Plastic
Color	Multicolor
Recommended Age	12 months and up
Product Dimensions	30.48 x 50.8 x 40.64 cm (12 x 20 x 16 inches)
Product Weight	890 g (1.96 lbs)
Educational Objectives	Imagination development, Motor skills, Creative thinking
Batteries Required	No

WARRANTY AND SUPPORT

For warranty information, details on replacement parts, or further assistance, please refer to the official Mega Bloks website or contact their customer service department. Warranty terms and conditions may vary by region. You can visit the official Mega Bloks store for more information:[Mega Bloks Store](#)

© 2023 MEGA Brands. All rights reserved. Disney elements © Disney.
This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question