

[Manuals.plus](#) /

› [JBL](#) /

› JBL Xtreme 4 Portable Bluetooth Speaker User Manual

JBL JBL Xtreme 4

JBL Xtreme 4 Portable Bluetooth Speaker User Manual

Model: JBL Xtreme 4

1. INTRODUCTION

The JBL Xtreme 4 is a portable Bluetooth speaker designed to deliver powerful sound with deep bass. It features a rugged, waterproof, and dustproof design, making it suitable for various environments. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your JBL Xtreme 4 speaker.



Figure 1: JBL Xtreme 4 Portable Bluetooth Speaker (Blue)

This image displays the JBL Xtreme 4 portable Bluetooth speaker in its blue color variant, showcasing its cylindrical shape and fabric grille.

2. WHAT'S IN THE BOX

Verify that all items are present in the packaging:

- 1 x JBL Xtreme 4 Speaker
- 1 x PD adaptor (plug type varies by region)

- Quick Start Guide
- Safety Sheet
- Warranty Card

3. PRODUCT OVERVIEW AND CONTROLS

Familiarize yourself with the speaker's layout and control buttons.



NEXT LEVEL MASSIVE JBL PRO SOUND

Figure 2: Top Panel Controls

This image shows the top panel of the JBL Xtreme 4 speaker, highlighting the control buttons: Auracast, Power, Bluetooth, Volume Down, Play/Pause, and Volume Up.

- **Power Button:** Press to turn the speaker on or off.
- **Bluetooth Button:** Press to enter Bluetooth pairing mode.
- **Volume Buttons (+/-):** Adjust the playback volume.
- **Play/Pause Button:** Control music playback.

- **Auracast Button:** Initiate Auracast multi-speaker connection.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the JBL Xtreme 4. The speaker has a built-in power bank function, allowing you to charge external devices via its USB-C port.

- Connect the provided PD adaptor to the speaker's charging port.
- A full charge takes approximately 3.5 hours.
- The battery indicator will show charging status.

4.2 Power On/Off

Press the Power button located on the top panel to turn the speaker on or off.

4.3 Bluetooth Pairing

To connect your device to the JBL Xtreme 4:

1. Turn on the JBL Xtreme 4.
2. Press the Bluetooth button on the speaker. The Bluetooth indicator will flash.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select 'JBL Xtreme 4' from the list to pair. The Bluetooth indicator will turn solid once connected.

4.4 JBL Portable App

Download the JBL Portable app for additional features, updates, and product support. The app allows you to fine-tune sound with EQ presets or a customizable equalizer.

5. OPERATING INSTRUCTIONS

5.1 Basic Playback

- Press the Play/Pause button to play or pause music.
- Use the Volume +/- buttons to adjust the audio level.

5.2 Auracast and Multi-Speaker Connection

The JBL Xtreme 4 supports Auracast for connecting multiple compatible JBL speakers wirelessly, creating a wider sound stage or party experience. It is also compatible with JBL PartyBoost for connecting with older JBL PartyBoost-compatible speakers.

- **Auracast:** Press the Auracast button on all desired speakers to connect them.
- **PartyBoost:** Use the JBL Portable app to pair the Xtreme 4 with other JBL PartyBoost-compatible speakers.

5.3 AI Sound Boost

The AI Sound Boost feature analyzes the audio signal in real-time, optimizing loudspeaker movement and power response. This enhances dynamic range, reduces distortion at high volumes, and maximizes bass output and overall loudness.



**24 HOUR PLAYTIME PLUS
6 HOURS WITH PLAYTIME BOOST**

Figure 3: Internal Speaker Components

This image provides an exploded view of the JBL Xtreme 4, illustrating its internal woofers, tweeters, passive radiators, and the central processing unit responsible for sound optimization.

5.4 Shoulder Strap

The JBL Xtreme 4 includes a convenient shoulder strap for easy portability. Attach the strap to the integrated loops on the speaker.



Figure 4: Speaker with Shoulder Strap

This image shows the JBL Xtreme 4 speaker with its adjustable shoulder strap attached, demonstrating how it can be carried for portability.

5.5 Waterproof and Dustproof (IP67)

The JBL Xtreme 4 is rated IP67, meaning it is fully waterproof and dustproof. It can be submerged in up to 1 meter of water for 30 minutes. Ensure all ports are securely closed before exposing the speaker to water or dust.

6. MAINTENANCE

6.1 Cleaning

To clean your speaker, use a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish or fabric.

6.2 Battery Replacement

The JBL Xtreme 4 features a replaceable battery. If the battery life diminishes significantly over time, a new rechargeable battery can be purchased separately and replaced in three simple steps. Refer to the JBL Portable app or JBL's official support website for detailed instructions on battery replacement.

7. TROUBLESHOOTING

If you encounter issues with your JBL Xtreme 4, refer to the following common problems and solutions:

- **No Power:** Ensure the speaker is charged. Connect it to the power adaptor and allow it to charge for a few minutes before attempting to power on.
- **No Sound:** Check the volume levels on both the speaker and your connected device. Ensure the speaker is properly paired via Bluetooth.
- **Bluetooth Pairing Issues:** Make sure the speaker is in pairing mode (Bluetooth indicator flashing). Try unpairing and re-pairing the speaker from your device's Bluetooth settings. Ensure no other devices are actively connected to the speaker.
- **Distorted Sound:** Reduce the volume on both the speaker and your device. Ensure the audio source is of good quality.
- **Auracast/PartyBoost Connection Failure:** Ensure all speakers are compatible and within range. Follow the connection steps precisely. For PartyBoost, use the JBL Portable app.

For further assistance, consult the JBL Portable app or visit the official JBL support website.

8. SPECIFICATIONS

Key technical specifications for the JBL Xtreme 4 speaker:



Figure 5: Product Dimensions

This image illustrates the physical dimensions of the JBL Xtreme 4 speaker, showing its length, width, and height measurements.

Feature	Specification
Model Name	JBL Xtreme 4
Product Dimensions (D x W x H)	11.69" x 5.55" x 5.87"
Item Weight	2.1 Kilograms (4.62 pounds)

Feature	Specification
Water Resistance Level	IP67 (Waterproof and Dustproof)
Connectivity Technology	Bluetooth
Power Source	Battery Powered
Battery Type	1 Lithium Ion battery (included)
Charging Time	3.5 Hours
Playtime	Up to 24 hours (plus 6 hours with Playtime Boost)
Speaker Maximum Output Power	25 Watts
Frequency Response	20000 Hz
Special Features	Bass Boost, Built-In Powerbank, Portable, Stereo Pairing, Waterproof
Included Components	1 x JBL Xtreme 4, 1 x PD adaptor, Quick Start Guide, Safety Sheet, Warranty Card

9. WARRANTY AND SUPPORT

The JBL Xtreme 4 comes with a limited warranty. Please refer to the included Warranty Card for detailed terms and conditions.

For product support, FAQs, and additional resources, please visit the official JBL support website or use the JBL Portable app.

Online Support: www.jbl.com/support

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question