

COLAMY 107D-C-001

COLAMY Wood Dining Chairs Instruction Manual

Model: 107D-C-001

1. SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Retain this manual for future reference.

- **Maximum Weight Capacity:** Each chair is designed to support a maximum weight of 275 pounds (125 kg). Do not exceed this limit.
- **Stability:** Ensure all bolts are securely tightened before use. Periodically check and re-tighten fasteners to maintain stability.
- **Proper Use:** Do not stand on the chair. Do not use the chair as a step stool.
- **Children:** Keep small parts and packaging materials away from children during assembly.
- **Placement:** Place chairs on a level, stable surface.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.



Image: Components included in the package, illustrating the chair back frame, seat cushion, two front legs, and a bag containing screws and tools.

List of Components

Item	Description	Quantity (per chair)
A	Chair Back Frame	1
B	Seat Cushion	1
C	Front Leg	2
D, E, F, G, H, I	Screw Bag (Bolts, Washers, Allen Key)	1

3. ASSEMBLY INSTRUCTIONS

Place all parts on a clean, soft surface to prevent scratches. Do not fully tighten bolts until all components are aligned, then tighten them securely.



Image: Step-by-step assembly guide for the dining chair.

Step 1: Attach Seat Cushion to Chair Back Frame

Attach the seat cushion (B) to the chair back frame (A).
Use two M8*35mm bolts (D), four M8*50mm bolts (E), spring washers (F), and flat washers (G).
Insert the bolts through the designated holes and loosely tighten them with the Allen key (I). Do not fully tighten yet.

Step 2: Insert Front Legs

Insert the front legs (C) into the seat cushion (B).
Secure them using four M6*35mm bolts (H), spring washers (F), and flat washers (G).
Loosely tighten these bolts with the Allen key (I).

Step 3: Final Tightening and Leveling

Once all components are assembled, place the chair upright on a level surface.
Gradually tighten all bolts securely. Ensure the chair is stable and does not wobble.
Install the adjustable levelers onto the bottom of the front legs. Adjust them as needed to ensure the chair sits evenly on your floor.

4. PRODUCT CARE AND MAINTENANCE

Proper care will extend the life and appearance of your COLAMY dining chairs.

- **Cleaning:** Wipe clean with a damp cloth. For upholstered fabric, spot clean with a mild detergent and a damp cloth. Vacuum regularly to remove dust and debris.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or strong chemical solutions, as these can damage the wood finish or fabric.
- **Spills:** Blot spills immediately with a clean, dry cloth to prevent staining.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading of the fabric and wood finish.
- **Temperature and Humidity:** Maintain a stable room temperature and humidity to prevent wood warping or cracking.
- **Regular Inspection:** Periodically check all bolts and fasteners and re-tighten if necessary to ensure structural integrity.

5. TROUBLESHOOTING

If you encounter any issues with your dining chairs, refer to the following common problems and solutions:

Common Issues and Solutions		
Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Chair wobbles after assembly.	Bolts are not tightened evenly or fully. Uneven floor surface.	Ensure all bolts are fully and evenly tightened. Adjust the foot levelers on the front legs until the chair is stable.
Difficulty inserting bolts.	Parts are not aligned correctly.	Loosen all bolts slightly, realign the parts, and then try inserting the difficult bolt. Ensure not to cross-thread.
Missing parts.	Packaging error.	Carefully check all packaging materials. If still missing, contact COLAMY customer support with your purchase details.
Fabric appears stained or dirty.	Accumulated dirt or spills.	Spot clean with a mild detergent and a damp cloth. Vacuum regularly. For stubborn stains, professional cleaning may be required.

6. SPECIFICATIONS

Detailed product specifications for the COLAMY Wood Dining Chairs.



Image: Detailed dimensions and weight capacity of the dining chair.

Product Specifications

Feature	Detail
Brand	COLAMY
Model Name	107D-C-001
Color	Grey
Product Dimensions (D x W x H)	21.85" x 18.5" x 37.99" (55.5cm x 47cm x 96.5cm)
Seat Depth	21.85 inches (55.5 cm)
Chair Backrest Width	18.5 inches (47 cm)
Item Weight	Approximately 15.04 pounds (6.82 kg) per chair
Maximum Weight Recommendation	275 Pounds (125 kg)

Feature	Detail
Material	Natural Rubberwood Frame, Foam Fill, Fabric Upholstery
Finish Type	Natural Rubberwood Finish
Assembly Required	Yes
Special Feature	Ergonomic Design, Anti-Slip Protectors

7. WARRANTY AND SUPPORT

COLAMY is committed to providing high-quality products. For warranty information, product support, or to report missing/damaged parts, please contact COLAMY customer service.

- **Customer Service:** Refer to your purchase documentation or the COLAMY official website for contact details.
- **Proof of Purchase:** Please have your order number and proof of purchase ready when contacting support.

© 2024 COLAMY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CTQ1DJ6G>

More documents and user manuals: <https://manuals.plus/>