

- › [Epson](#) /
- › [Epson EW-456A Colorio A4 Inkjet Multifunction Printer User Manual](#)

## Epson EW-456A

# Epson EW-456A Colorio A4 Inkjet Multifunction Printer User Manual

Comprehensive guide for setup, operation, maintenance, and troubleshooting.

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Epson EW-456A Colorio A4 Inkjet Multifunction Printer. Please read this manual thoroughly before using the product and keep it for future reference.



Figure 1: Front view of the Epson EW-456A printer with paper loaded in the output tray.

## Product Overview

The Epson EW-456A is a compact A4 inkjet multifunction device offering print, copy, and scan functionalities. It features Wi-Fi connectivity, automatic duplex printing, and uses four independent ink cartridges for economical operation. This model is designed for ease of use in home or small office environments.

## 2. SETUP

### 2.1 Unboxing and Initial Placement

Carefully remove the printer from its packaging. Ensure all protective tapes and packing materials are removed from the exterior and interior of the printer. Place the printer on a stable, flat surface with adequate space around it for ventilation and operation.

### 2.2 Connecting the Power

1. Connect the power cord to the power input port on the rear of the printer.
2. Plug the other end of the power cord into a wall outlet.
3. Press the power button to turn on the printer.



Figure 2: Rear view of the printer, indicating power and USB connection points.

### 2.3 Installing Ink Cartridges

The Epson EW-456A uses four independent ink cartridges (Black, Yellow, Magenta, Cyan). Follow the on-screen instructions on the printer's LCD panel to install the cartridges. Ensure each cartridge clicks into place securely.

# 独立インクカートリッジで 経済的



Figure 3: Independent ink cartridges for the EW-456A, showing individual replacement capability.

## 2.4 Loading Paper

Open the paper support and load paper into the rear paper feeder. Adjust the paper guides to fit the width of the paper. The printer supports various paper types and sizes, including A4 plain paper, glossy photo paper, and envelopes.

## 2.5 Software Installation and Connectivity

Install the printer software from the included software disc or download the latest drivers from the official Epson website. For wireless connectivity, follow the instructions on the printer's 1.44-inch color LCD panel to connect to your Wi-Fi network. You can also connect via USB or use the Epson Smart Panel app for smartphone setup and operation.

# — スマホで操作 — すぐにプリント!

## 基本操作からメンテナンスまで!



※アプリ画像はイメージです。  
※本媒体上の他者商標の帰属先は、エプソンのホームページをご確認ください。

Figure 4: Smartphone integration with the Epson Smart Panel app for easy printing.

## 3. OPERATING INSTRUCTIONS

### 3.1 Basic Printing

To print from a computer, select the Epson EW-456A as your printer in your application's print dialog. Adjust settings such as paper size, print quality, and duplex printing as needed. For smartphone printing, use the Epson Smart Panel app.

### 3.2 Copying Documents

Place the document face-down on the scanner glass. Use the printer's control panel and the 1.44-inch color LCD to select the copy function. Adjust settings like number of copies, paper size, and color/monochrome, then press the Start button.

# 明るく見やすい カラー1.44型 液晶パネル搭載

操作も迷わずカンタン！



Figure 5: The 1.44-inch color LCD panel for intuitive printer operation.

### 3.3 Scanning Documents

Place the document face-down on the scanner glass. From your computer, open the Epson Scan software or use the Epson Smart Panel app on your smartphone. Select scan settings (e.g., resolution, destination) and initiate the scan.

### 3.4 Automatic Duplex Printing

The EW-456A supports automatic two-sided printing. When printing from your computer or smartphone, select the duplex printing option in the print settings. This feature helps save paper.



# コンパクトボディに 自動両面印刷機能を搭載



Figure 6: The compact design of the EW-456A, featuring automatic double-sided printing.

## 3.5 Voice Control Functionality

The printer supports voice control through compatible smart speakers. Refer to the Epson website or the smart speaker's manual for specific commands and setup instructions to print using voice commands.



Figure 7: Example of using voice commands with a smart speaker to operate the Epson printer.

## 4. MAINTENANCE

### 4.1 Replacing Ink Cartridges

When an ink cartridge is low or empty, a message will appear on the LCD screen. Open the printer cover and replace only the empty cartridge with a new genuine Epson cartridge. Refer to the on-screen instructions for the replacement process.



## 対応インク



**メダマヤキ®**

染料3色、顔料1色 独立 / カートリッジタイプ

**対応型番** MED-4CL / MED-BK / MED-C  
MED-M / MED-Y

Figure 8: Epson genuine ink cartridges (MED-4CL) recommended for the EW-456A.

## 4.2 Print Head Cleaning

If print quality declines (e.g., missing lines, streaking), perform a print head cleaning. This can be initiated from the printer's control panel or through the printer software on your computer. Follow the prompts to complete the cleaning cycle.

## 4.3 Waste Ink Pad

The printer contains a waste ink absorption pad that collects excess ink during operations like print head cleaning and borderless printing. When the waste ink pad approaches its capacity limit, a warning message will appear. If this occurs during borderless printing, an error may be displayed. For borderless printing, the printer absorbs discarded ink. If you are printing with borders, you may be able to continue using the printer. However, it is recommended to contact Epson support for service when this warning appears to prevent potential ink overflow.

## 5. TROUBLESHOOTING



## 5.1 Common Issues and Solutions

- **Printer Not Responding:**  
Check power connections, USB cable (if used), and Wi-Fi connection. Ensure the printer is turned on and not in an error state. Restart both the printer and your computer/smartphone.
- **Poor Print Quality:**  
Perform a print head cleaning and nozzle check. Ensure genuine Epson ink cartridges are used and not expired. Check paper type settings match the loaded paper.
- **Paper Jams:**  
Carefully remove any jammed paper from the paper feeder, output tray, or internal areas as indicated by the printer's display. Avoid tearing the paper.
- **Wi-Fi Connection Issues:**  
Verify your Wi-Fi network name (SSID) and password. Ensure the printer is within range of your wireless router. Restart your router and printer.

## 6. SPECIFICATIONS

Feature	Specification
Model Name	EW-456A
Functions	Print, Copy, Scan
Print Technology	Inkjet
Maximum Print Resolution (Color/Mono)	4800 x 1200 dpi
Duplex Printing	Automatic
Connectivity	USB, Wi-Fi
Sheet Size	A4
Maximum Paper Capacity	150 sheets
Scanner Type	Photo
Display	1.44-inch Color LCD
Product Dimensions (W x D x H)	37.5 x 30 x 17 cm
Product Weight	4.3 kg
Included Components	Ink cartridges (setup), Start Guide, Software Disc, Warranty Card, Power Cord



Figure 9: Physical dimensions of the Epson EW-456A printer.

## 7. WARRANTY AND SUPPORT

### 7.1 Limited Warranty

Your Epson EW-456A printer comes with a limited warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

### 7.2 Extended Service Support

Epson offers an extended service support program called "Colorio Smile Plus" for enhanced peace of mind. This 5-year service support can be purchased within the product's initial warranty period. For details on coverage and how to purchase, please visit the official Epson website or contact Epson customer service.

### 7.3 Customer Support

For further assistance, technical support, or to download the latest drivers and software, please visit the official Epson support website. You can also find contact information for customer service in your region on the website.


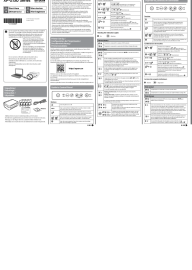

© 2024 Epson Corporation. All rights reserved.

## Related Documents - EW-456A



### [Epson EcoTank L15150 A3 Color Multifunction Printer](#)

Detailed specifications and features of the Epson EcoTank L15150, an A3 color multifunction printer with low-cost printing, PrecisionCore Heat-Free Technology, and versatile paper handling. Includes information on printing, copying, scanning, faxing, connectivity, and paper management.

 <p>WF-3720/WF-4720/ WF-4730/WF-4740 Series</p> <p><b>Quick Guide</b></p> <p>This guide includes basic information about your product and troubleshooting tips for the common issues to address your concerns.</p> <p><b>Support</b></p> <ul style="list-style-type: none"><li>• For more information, visit the Epson website at <a href="http://www.epson.com">www.epson.com</a>.</li><li>• For more information, visit the Epson website at <a href="http://www.epson.com">www.epson.com</a>.</li></ul> <p><b>User's Guide</b></p> <ul style="list-style-type: none"><li>• For more information, visit the Epson website at <a href="http://www.epson.com">www.epson.com</a>.</li><li>• For more information, visit the Epson website at <a href="http://www.epson.com">www.epson.com</a>.</li></ul> <p><b>Notes</b></p> <ul style="list-style-type: none"><li>• For more information, visit the Epson website at <a href="http://www.epson.com">www.epson.com</a>.</li><li>• For more information, visit the Epson website at <a href="http://www.epson.com">www.epson.com</a>.</li></ul> <p>EPSON</p>	<p><a href="#">Epson WF-3720/WF-4720/WF-4730/WF-4740 Series Quick Guide</a></p> <p>A quick guide for Epson WF-3720, WF-4720, WF-4730, and WF-4740 series printers, covering basic information, setup, troubleshooting, and support resources.</p>
 <p>XP-2150 Series</p> <p><b>Quick Start Guide and Setup Instructions</b></p> <p>EPSON</p>	<p><a href="#">Epson XP-2150 Series: Quick Start Guide and Setup Instructions</a></p> <p>Comprehensive guide for setting up and using the Epson XP-2150 Series printer, including unpacking, installation, control panel functions, ink cartridge replacement, and basic troubleshooting.</p>
 <p><b>SERVICE MANUAL</b></p> <p>L350/L351/L300/L301/L355/L358/L210/L211/L110/L111</p> <p>EPSON</p>	<p><a href="#">Epson L350 Series Color Inkjet Printer Service Manual</a></p> <p>Comprehensive service manual for Epson L350, L351, L300, L301, L355, L358, L210, L211, L110, and L111 color inkjet printers. Covers troubleshooting, disassembly, reassembly, adjustments, and maintenance procedures.</p>
 <p>EPSON</p> <p>XP-2150 Series</p> <p><b>User's Guide</b></p> <p>EPSON</p>	<p><a href="#">Epson XP-2150 Series User's Guide</a></p> <p>Comprehensive user guide for the Epson XP-2150 Series printer, covering setup, operation, maintenance, troubleshooting, network connectivity, printing, copying, and scanning.</p>
 <p>EPSON</p> <p>WF-C579R</p> <p><b>User's Guide</b></p> <p>EPSON</p>	<p><a href="#">Epson WF-C579R User's Guide</a></p> <p>Comprehensive user guide for the Epson WF-C579R multifunction printer, covering setup, product basics, printing, scanning, faxing, networking, troubleshooting, and technical specifications.</p>