

[Manuals.plus](#) /

› [Nexus](#) /

› Nexus Tornado 87913 Medium Rotating and Vibrating Butt Plug User Manual

Nexus 87913

Nexus Tornado 87913 User Manual

Medium Rotating and Vibrating Butt Plug with Remote Control

1. INTRODUCTION

Thank you for choosing the Nexus Tornado 87913. This manual provides detailed instructions for the safe and effective use, maintenance, and care of your device. Please read this manual thoroughly before first use and retain it for future reference.

2. SAFETY INFORMATION

- **Hygiene:** Always clean the device thoroughly before and after each use with warm water and a toy cleaner or mild soap. Ensure it is completely dry before storage.
- **Lubrication:** Use only water-based lubricants with this device. Oil-based lubricants can damage the silicone material.
- **Material Safety:** The device shaft is made from 100% body-safe silicone. Discontinue use immediately if you experience any irritation or discomfort.
- **Medical Conditions:** Consult a healthcare professional before use if you have any medical conditions, are pregnant, or have recently undergone surgery.
- **Charging:** Use only the provided charging cable. Do not use the device while it is charging.
- **Storage:** Keep out of reach of children. Store in a cool, dry place away from direct sunlight and extreme temperatures.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Nexus Tornado 87913 Device
- 1 x Wireless Remote Control
- 1 x USB Charging Cable
- 1 x User Manual (this document)



Image: The Nexus Tornado 87913 device, remote control, and USB charging cable displayed within its retail packaging.

4. PRODUCT OVERVIEW

The Nexus Tornado 87913 features a contoured design with a textured, rotating shaft and a broad base for secure use. It is controlled wirelessly via a remote control.





Image: Front view of the Nexus Tornado 87913, showcasing its ergonomic shape and textured shaft.



Image: Angled view of the device's base, highlighting the DC 5V charging port and integrated control buttons.

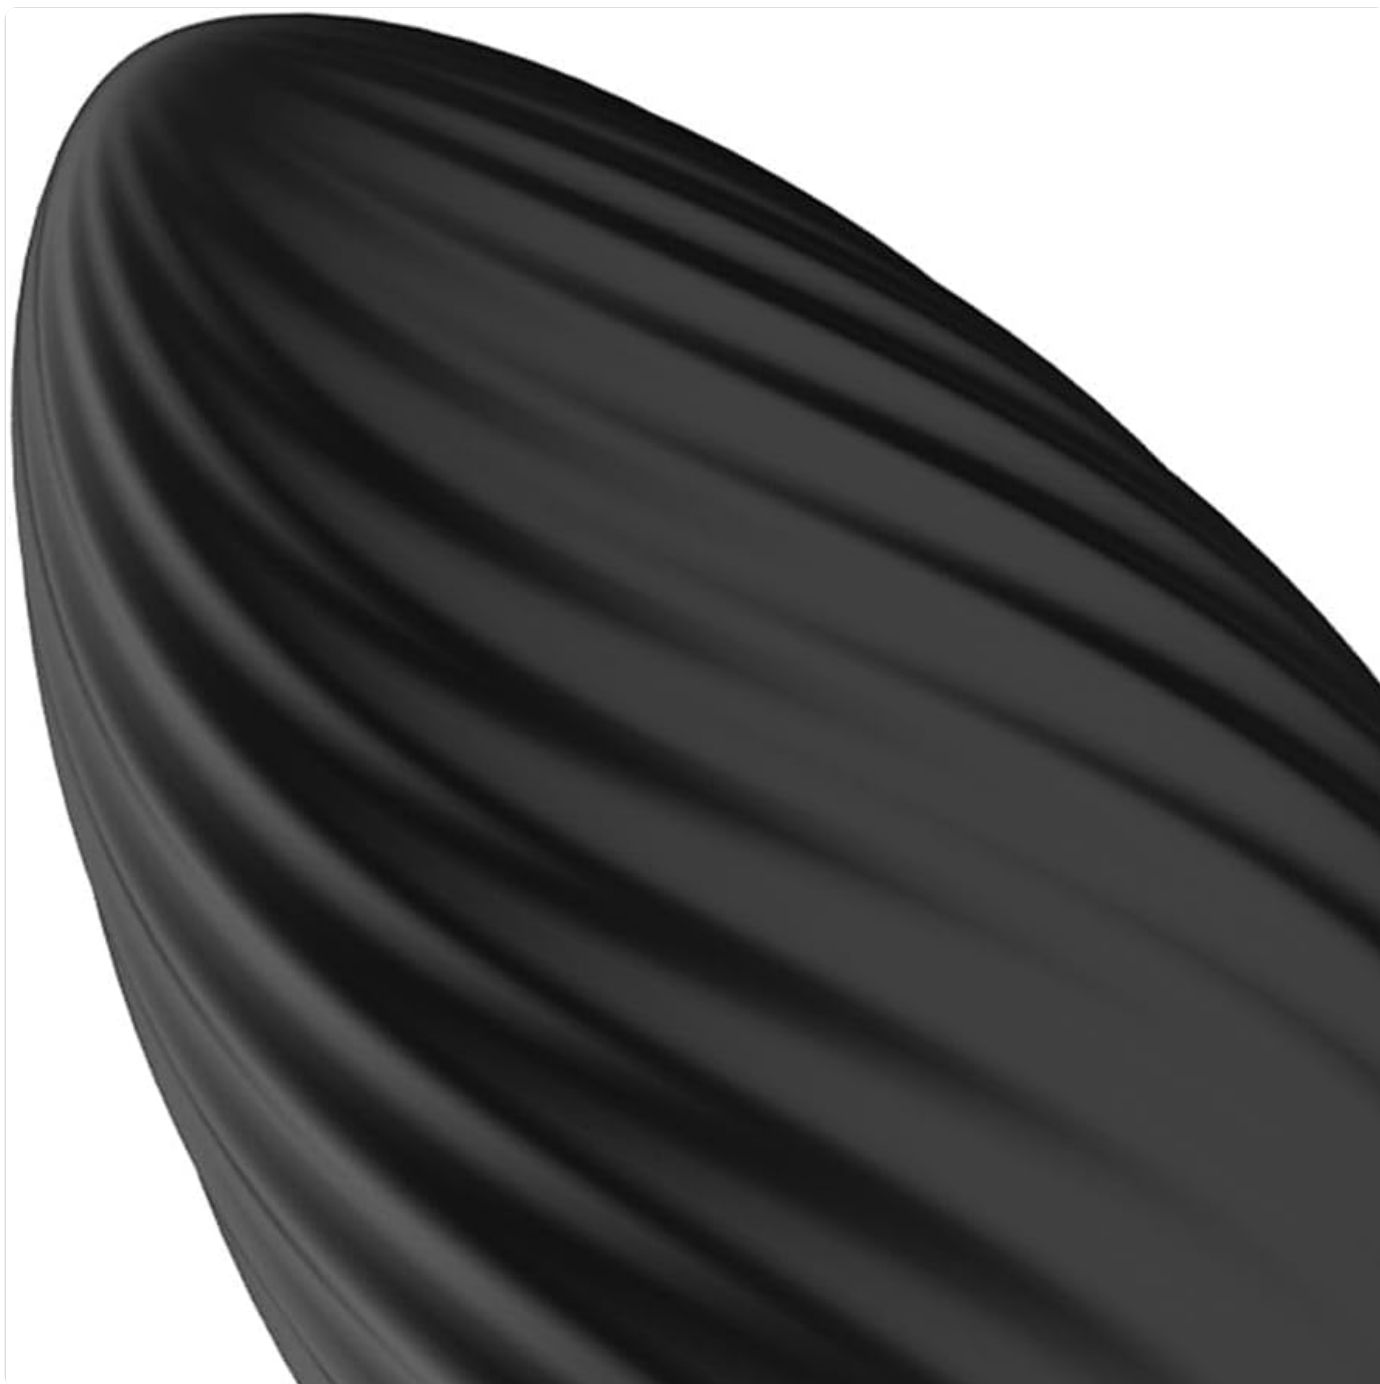


Image: Detailed view of the control panel on the device's base, featuring the power button, rotation mode button, and vibration mode button.



Image: The wireless remote control, featuring power, rotation, and vibration control buttons.

5. CHARGING

Both the Nexus Tornado device and its remote control are rechargeable. Ensure both are fully charged before initial use.

5.1 Device Charging

1. Locate the DC 5V charging port on the base of the device.
2. Connect the small end of the provided USB charging cable to the device's charging port.
3. Connect the USB-A end of the cable to a standard USB power adapter (not included) or a computer USB port.
4. The indicator light will illuminate during charging and turn off or change color when fully charged (refer to specific light behavior in the quick start guide if available).
5. Charging typically takes approximately 2-3 hours for a full charge.

5.2 Remote Control Charging

1. Locate the charging port on the remote control.
2. Connect the USB charging cable to the remote control.

3. Connect the USB-A end to a power source.
4. The indicator light will show charging status.





Image: The Nexus Tornado 87913 device shown connected to its USB charging cable, illustrating the charging process.

6. SETUP

After fully charging both the device and the remote control, the unit is ready for use. No complex pairing is typically required as the remote is pre-paired with the device.

1. Ensure the device and remote are fully charged.
2. Press and hold the power button on the device's base for 2-3 seconds to turn it on. An indicator light will confirm it is active.
3. Press and hold the power button on the remote control for 2-3 seconds to turn it on.
4. The device and remote are now ready for operation.

7. OPERATING INSTRUCTIONS

The Nexus Tornado 87913 offers both rotation and vibration functions, controlled independently via the remote or directly on the device.

7.1 Power On/Off

- **Device:** Press and hold the power button on the device's base for 2-3 seconds to turn on or off.
- **Remote:** Press and hold the power button on the remote for 2-3 seconds to turn on or off.

7.2 Rotation Modes

The device features 3 distinct rotation speeds. Press the rotation button (circular arrow icon) on the remote or device to cycle through the speeds.

- Press once for Speed 1.
- Press twice for Speed 2.
- Press three times for Speed 3.
- Press a fourth time to turn rotation off.

7.3 Vibration Modes

The device offers 6 vibration pulsation and escalation modes. Press the vibration button (wavy line icon) on the remote or

device to cycle through the modes.

- Press repeatedly to explore the 6 different patterns.
- Press a seventh time to turn vibration off.

7.4 Combined Operation

The rotation and vibration functions can be used independently or simultaneously, offering 27 combinations of pleasure. Experiment with different settings to find your preferred experience.

7.5 Remote Control Range

The wireless remote control can operate the device from up to 8 meters away, providing flexibility for solo or partner use.

8. MAINTENANCE AND CLEANING

Proper care ensures the longevity and hygiene of your Nexus Tornado 87913.

- **Cleaning:** Always clean the device immediately after each use. Wash with warm water and a toy cleaner or mild, antibacterial soap. Rinse thoroughly.
- **Drying:** Pat dry with a lint-free cloth or allow to air dry completely before storage.
- **Waterproof:** The device and remote control are waterproof/submersible, allowing for easy cleaning and use in wet environments. However, avoid prolonged submersion in deep water.
- **Avoid:** Do not use harsh chemicals, alcohol-based cleaners, or petroleum-based products, as these can damage the silicone.

9. STORAGE

Store your Nexus Tornado 87913 in a clean, dry, and dust-free environment. Keep it away from direct sunlight, extreme temperatures, and other toys made of different materials to prevent potential reactions or damage to the silicone.

10. TROUBLESHOOTING

If you encounter any issues with your device, please refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. Press and hold the power button for 2-3 seconds.
- **Remote not responding:** Ensure the remote is fully charged and turned on. Make sure you are within the 8-meter operating range. If issues persist, try turning both the device and remote off and on again.
- **Weak vibration/rotation:** The battery may be low. Recharge the device.
- **Charging indicator not working:** Ensure the charging cable is securely connected to both the device/remote and the power source. Try a different USB port or power adapter.

If these steps do not resolve the issue, please contact customer support.

11. SPECIFICATIONS

Feature	Detail
Model Number	87913
Brand	Nexus
Material	100% Silicone Shaft
Color	Black
Rotation Modes	3 Speeds
Vibration Modes	6 Pulsation and Escalation Modes
Total Combinations	27
Remote Control Range	Up to 8 meters
Waterproof Rating	Waterproof/Submersible (Device & Remote)
Rechargeable	Yes (Device & Remote)
Insertable Length	87.3 mm (3.44 inches)
Shaft Diameter (widest)	39.8 mm (1.57 inches)
Product Dimensions	6.06 x 5.98 x 1.85 inches
Item Weight	7.87 ounces

12. WARRANTY AND SUPPORT

Nexus products are manufactured to high-quality standards. For specific warranty information, please refer to the packaging or contact your retailer. If you experience any issues or have questions not covered in this manual, please contact Nexus customer support through their official website or the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CTQ5BK14>

More documents and user manuals: **<https://manuals.plus/>**