

MAXHUB 6927433605166

MAXHUB MTR Xcore KIT User Manual

Model: 6927433605166

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your MAXHUB MTR Xcore KIT. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage. The MAXHUB MTR Xcore KIT is a versatile surveillance camcorder designed for various applications, featuring advanced capabilities such as touchscreen interface and motion detection.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Camera Body
- USB Cable
- User Manual (this document)



Figure 1: The MAXHUB MTR Xcore KIT main unit, a compact grey device with ventilation grilles on the sides.

SETUP

1. Initial Power-Up

1. Connect the provided USB cable to the USB-C port on the device.
2. Connect the other end of the USB cable to a compatible power adapter (not included) or a computer's USB port.
3. The device will power on automatically or require a press of the power button (refer to device for exact location).

2. Memory Card Installation

The device supports SD flash memory. Locate the SD card slot and insert a compatible SD card for recording and storage. Ensure the card is inserted in the correct orientation.

3. Connecting to Display

Use an HDMI cable to connect the device's HDMI output port to a monitor or display for live view and playback.

OPERATING INSTRUCTIONS

1. Navigating the Touchscreen

The MAXHUB MTR Xcore KIT features a touchscreen interface. Tap icons and swipe to navigate menus and settings.

2. Recording Video

- From the main screen, select the video recording mode.
- Press the record button (usually a red circle icon) to start recording.
- Press the record button again to stop recording. Videos are saved in MP4 format.
- The device supports video capture resolutions up to 4K, and also 1920 x 1080 px (Full HD). Adjust resolution settings in the menu as needed.

3. Motion Sensor Activation

The built-in motion sensor can be configured to automatically start recording when motion is detected. Access the motion sensor settings through the device's menu to enable or disable this feature and adjust sensitivity.

4. Playback

Access the playback gallery from the main menu to view recorded videos and images. Use the touchscreen to select and play files.

MAINTENANCE

1. Cleaning the Device

Wipe the device with a soft, dry cloth. For stubborn marks, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners.

2. Firmware Updates

Periodically check the MAXHUB official website for firmware updates. Updating the firmware can improve performance and add new features. Follow the instructions provided with the firmware update package carefully.

3. Storage Management

Regularly back up important recordings from the 8 GB internal memory or SD card to an external storage device. Format

the SD card periodically to maintain optimal performance (this will erase all data on the card).

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	No power supply; faulty cable.	Ensure USB cable is securely connected and power source is active. Try a different USB cable or power adapter.
Cannot record video.	Insufficient storage; memory card error.	Check available storage. Format or replace the SD card. Ensure the card is inserted correctly.
Touchscreen unresponsive.	Temporary software glitch; physical damage.	Restart the device. If the issue persists, contact customer support.
No image on external display.	HDMI cable issue; incorrect input on display.	Check HDMI cable connection. Ensure the display is set to the correct HDMI input.

SPECIFICATIONS

- Brand:** MAXHUB
- Model:** 6927433605166
- Type:** Webcam / Surveillance Camcorder
- Color:** Multicoloured
- Dimensions (L x W x H):** 34.7 x 11 x 10 inches
- Weight:** 16.5 pounds
- Video Capture Resolution:** Up to 4K (also supports 1920 x 1080 px Full HD)
- Video Capture Format:** MP4
- Internal Memory:** 8 GB
- Flash Memory Type:** SD
- Photo Sensor Technology:** BSI CMOS
- Supported Audio Format:** AAC, MP3, PCM
- Connectivity:** HDMI, USB-C
- Special Features:** Motion Sensor, Touchscreen

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official MAXHUB website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims. For further assistance, you may visit the [MAXHUB Store on Amazon](#).