

VINABTY RM-C3363

VINABTY RM-C3363 Voice Remote Control User Manual

Model: RM-C3363

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your VINABTY RM-C3363 Voice Remote Control. This remote is designed as a replacement for various JVC and KONKA Smart Android TV models, including RM-C3329, RM-C3369, 40H33A, 65U55A, 50Q75A, 55U55A, 32H31A, 75U55A, and 43U55A. Please read this manual carefully to ensure proper use and to maximize your remote control's functionality.

2. PRODUCT OVERVIEW

The VINABTY RM-C3363 is a voice-enabled remote control designed for seamless interaction with compatible JVC and KONKA Smart Android TVs. It features dedicated buttons for popular streaming services and a voice search function for convenient content discovery.





Figure 2.1: Front view of the VINABTY RM-C3363 Voice Remote Control, showing all buttons including power, input, Netflix, YouTube, media controls, navigation, volume, channel, number pad, and voice search button.



6.89inch



Figure 2.2: Image illustrating the dimensions of the VINABTY RM-C3363 Voice Remote Control. The remote measures approximately 6.89 inches in length and 1.85 inches in width.

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.





Figure 3.1: Back view of the remote control, indicating the location of the battery compartment.

3.2. Pairing the Remote Control

The RM-C3363 remote control is designed for easy pairing with compatible JVC and KONKA Smart Android TVs. Follow your TV's specific instructions for pairing a new Bluetooth remote control. Generally, the process involves:

1. Ensure your TV is powered on.
2. Navigate to your TV's **Settings** menu.
3. Look for options such as **Remotes & Accessories**, **Bluetooth Settings**, or **Add Device**.
4. Follow the on-screen prompts to put your TV into pairing mode.
5. On the RM-C3363 remote, press and hold the **OK** button and the **Volume Down (-)** button simultaneously for a few seconds until an indicator light on the remote flashes or your TV detects the remote.
6. Select the detected remote control (e.g., "RM-C3363" or "Bluetooth Remote") on your TV screen to complete the pairing process.

If pairing is unsuccessful, ensure the batteries are correctly installed and try the process again. Refer to your TV's user manual for specific pairing instructions if needed.

4. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your RM-C3363 Voice Remote Control.

- **Power Button (red circle with vertical line):** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Netflix Button:** Direct access to the Netflix application.
- **YouTube Button:** Direct access to the YouTube application.
- **Media Control Buttons (Record, Play/Pause, Stop, Rewind, Fast Forward, Previous, Next):** Control

media playback.

- **Mute Button:** Mutes or unmutes the TV audio.
- **S.MODE / GUIDE / P.MODE Buttons:** Access specific TV functions (e.g., Sound Mode, Electronic Program Guide, Picture Mode).
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigate through menus and confirm selections.
- **Back Button (curved arrow):** Returns to the previous screen or menu.
- **Home Button (house icon):** Returns to the TV's home screen.
- **Menu Button (three horizontal lines):** Opens the TV's main menu or context menu.
- **Volume Up/Down (VOL +/-):** Adjusts the TV's volume.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Voice Search Button (microphone icon):** Activates the voice search function. Press and hold to speak your command or search query.
- **Number Pad (0-9):** Directly enter channel numbers or other numerical inputs.
- **INFO Button:** Displays information about the current program or content.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV application or context.



Figure 4.1: The RM-C3363 remote control positioned next to a television, demonstrating its intended use.

5. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact. Dropping the remote can damage internal components.

6. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

- **Remote not responding:**
 - Check if the batteries are correctly installed with the correct polarity.
 - Replace the batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote and the TV's sensor.
 - Re-pair the remote control with your TV (refer to Section 3.2).
- **Voice search not working:**
 - Ensure the remote is properly paired via Bluetooth. Voice search functionality typically requires a Bluetooth connection.
 - Check your TV's internet connection, as voice search often requires online services.
 - Ensure the microphone on the remote is not obstructed.
 - Speak clearly and hold the remote closer to your mouth when using voice commands.
- **Specific buttons not working:**
 - Clean the remote's surface, especially around the non-functional buttons, to remove any dirt or debris.
 - If only certain app buttons (e.g., Netflix, YouTube) are not working, ensure the apps are installed and updated on your TV.

If the problem persists after trying these steps, please contact the seller or manufacturer for further assistance.

7. SPECIFICATIONS



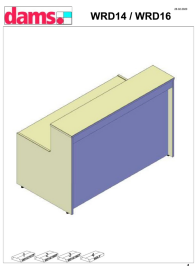

Model Number	RM-C3363
Brand	VINABTY
Compatible Devices	JVC TVs (RM-C3329, RM-C3369), KONKA Smart Android TVs (40H33A, 65U55A, 50Q75A, 55U55A, 32H31A, 75U55A, 43U55A)
Special Feature	Voice Search

Battery Type	2 x AAA batteries (not included)
Color	Black
Product Dimensions	6.8 x 2 x 0.7 inches (approximately 17.3 x 5.1 x 1.8 cm)
Item Weight	2.3 ounces (approximately 65 grams)

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

Related Documents - RM-C3363

	<p>Návod k použití Robot univverzál ní 3 rychlosti 20 l 230 V RM 200H - RM Gastro</p> <p>Kompletní návod k použití pro robot univverzál ní RM 200H od RM Gastro. Obsahuje technická data, instalační pokyny, bezpečnostní opatření, návod k obsluze a údržbě.</p>
	<p>RM Gastro RM 30H Universal Planetary Mixer Instruction Manual</p> <p>Comprehensive instruction manual for the RM Gastro RM 30H Universal Planetary Mixer (30L, 400V). Covers technical data, installation, operation, safety, cleaning, and maintenance for professional use.</p>
	<p>Dams WRD14 / WRD16 Assembly Instructions</p> <p>Assembly instructions for the Dams WRD14 and WRD16 reception desk. Includes parts list, tools required, and step-by-step assembly guidance.</p>
	<p>Dometic Americana & Americana Plus RV Refrigerator Diagnostic Service Manual</p> <p>Comprehensive diagnostic service manual for Dometic Americana and Americana Plus RV refrigerators (RM 2351, RM 2354, RM 2451, RM 2454, RM 2551, RM 2554, RM 2652, RM 2662, RM 2663, RM2852, RM2862, NDR1062). Covers operation, troubleshooting, AC/DC voltage, LP gas components, cooling unit, wiring, and ice maker service.</p>



[Interroll Conveyor Lines: Medium and Heavy Duty Solutions Catalog](#)

Explore Interroll's comprehensive catalog of medium and heavy-duty conveyor lines, including roller conveyors, belt conveyors, and sorting/distributing systems. Find detailed specifications, model numbers, and ordering information for industrial material handling solutions.



[Dometic Americana & Americana Plus Refrigerators Diagnostic Service Manual](#)

Comprehensive diagnostic service manual for Dometic Americana and Americana Plus RV refrigerators (models RM 2351, RM 2354, RM 2451, RM 2454, RM 2551, RM 2554, RM 2652, RM 2662, RM 2663, RM2852, RM2862, NDR1062). Covers operation, troubleshooting, AC/DC voltage, LP gas, cooling unit, wiring, and ice maker systems.