

[Manuals.plus](#) /

› [Nictemaw](#) /

› Nictemaw N5577-3 Portable Washing Machine Instruction Manual

Nictemaw N5577-3

Nictemaw N5577-3 Portable Washing Machine Instruction Manual

Model: N5577-3

1. PRODUCT OVERVIEW

The Nictemaw N5577-3 is a full-automatic portable washing machine designed for efficiency and convenience in compact living spaces. With a 20 lbs (2.8 Cu.ft) capacity, it offers 10 washing programs and 8 water levels to cater to various laundry needs. Its compact design, powerful motor, and user-friendly features make it an ideal solution for apartments, RVs, homes, and dormitories.

20LBS LARGER CAPACITY

More laundry space for all types of clothes!



SHIRTS

25 PCS



JEANS

15 PCS



THICK

4 COATS



SHEETS

3 PCS

Product Size

19.3 X 20.1 X 35 inch

Height after opening: **45.7** inch

Wash/Spin Capacity

9kg / 20lbs



Image: The Nictemaw N5577-3 Portable Washing Machine, highlighting its 20 lbs capacity, capable of washing up to 25 shirts, 15 jeans, 4 thick coats, or 3 sheets. Dimensions are 19.3 x 20.1 x 35 inches.

2. SETUP INSTRUCTIONS

Proper setup ensures optimal performance and prevents issues. Follow these steps carefully:

1. **Unpacking:** Carefully remove the washing machine from its packaging. Inspect for any damage during transit.
2. **Positioning:** Place the machine on a flat, stable surface. Use the adjustable leveling legs to ensure the unit is perfectly balanced to prevent severe vibrations during operation.
3. **Water Inlet Connection:** Connect the water inlet hose to a suitable water source (e.g., kitchen faucet, bathroom faucet). Ensure the connection is tight to prevent leaks. The machine supports both manual water filling and direct faucet connection.
4. **Drain Hose Setup:** Attach the extended drain hose securely to the machine's drain outlet. Position the drain hose to

direct wastewater into a sink, bathtub, or other appropriate drainage system. The powerful built-in drain pump allows for drainage to low or high places.

5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

2RD GENERATION UPGRADED MOTOR

Washing cleaner & drainage more thorough!



Silent Laundry




Energy Saving



Strong Power



Run Smoothly

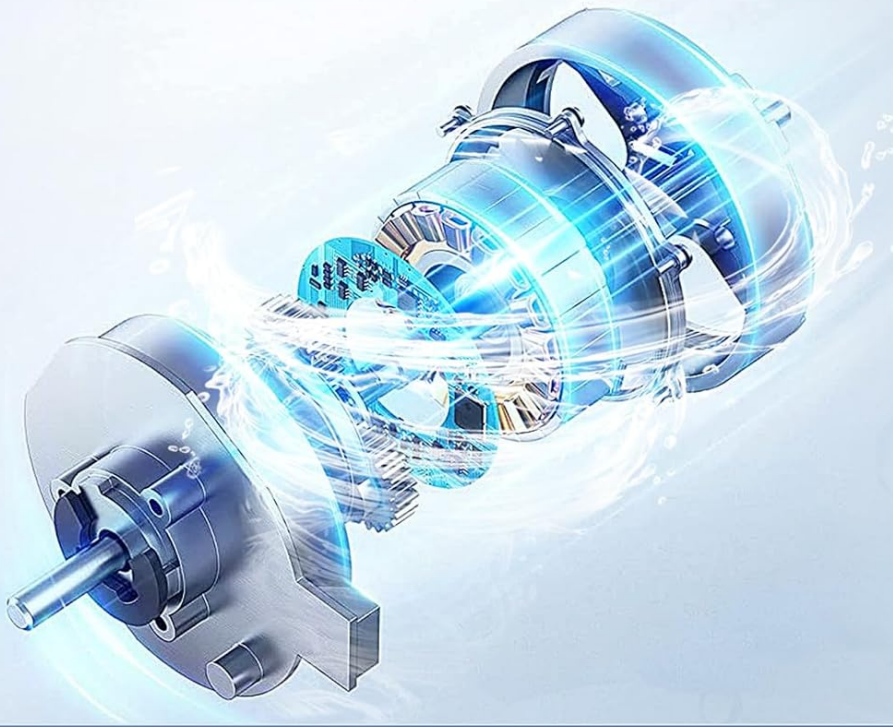

Ordinary Motor Chip



Upgraded Motor Chip

Provide precise cleaning and care capabilities
Energy saving, smooth elution, vibration and noise reduction

Image: A detailed view of the washing machine's side, illustrating the extended drain hose connection, convenient side handle for portability, and adjustable feet for stable placement.

EASY INSTALLATION - QUICK USE



Image: Visual guide demonstrating the simple process of connecting the water inlet hose to various faucet types using provided adapters, ensuring a secure fit for water supply.

3. OPERATING INSTRUCTIONS

The Nictemaw N5577-3 features a user-friendly control panel for easy operation:

1. **Power On:** Press the 'Power' button to turn on the machine. The LED display will illuminate.
2. **Load Laundry:** Open the transparent cover and load your clothes into the stainless steel inner tank. Do not overload the machine beyond its 20 lbs capacity.
3. **Add Detergent:** Add the appropriate amount of detergent to the dispenser.
4. **Select Water Level:** Use the 'Water Level' button to choose from 8 available water levels (1-2L, 3-4L, 5-6L, 7-8L) based on your laundry load size.
5. **Choose Program:** Press the 'Program' button repeatedly to select one of the 10 washing programs (Standard, Spin, Quick Wash, Blanket, Air Dry, Soak, Wash, Tub Clean, Water Recycle, Rinse Spin). The LED indicator light will display the selected program.
6. **Delayed Start (Optional):** To set a delayed start, use the 'Delay Start' function. The 24-hour delayed start function allows you to schedule washing cycles at your convenience.
7. **Start Cycle:** Press the 'Start/Pause' button to begin the washing cycle. The LED display will show the remaining washing time.
8. **Child Lock:** Activate the child lock function for added safety by pressing and holding the designated button. This prevents accidental operation by children.

The 3D butterfly flow pulsator ensures thorough cleaning, reduces tangling, and enhances stretchability of clothes. The washing and dehydration functions can be used independently.

10 WASHING PROGRAMS

Improve washing efficiency & enjoy relaxing moments!



Put In Clothes



One-Button Start



Full-Auto Laundry



Standard



Spin



Quick Wash



Blanket



Air Dry



Soak



Wash



Tub Clean



Water Recycle




Rinse Spin

Image: The multifunctional control panel of the Nictemaw washing machine, displaying options for 10 programs and 8 water levels, along with an LED timer and one-touch operation buttons.

8 WATER LEVELS

 Low soak & high rinse, more even and full laundry!

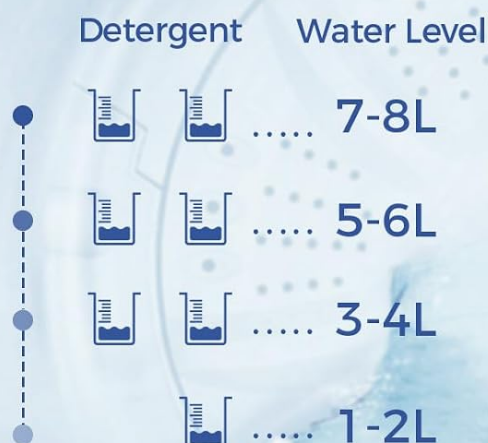

Low Water
Level Flush

High Water
Level Rinse



The spin drying effect of the same clothes
95% moisture content drop



Image: A visual representation of the 8 water levels for detergent and washing, alongside a comparison showing 95% moisture content drop after spin drying, demonstrating efficient water removal.

4. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your washing machine:

- **Tub Self-Cleaning:** Utilize the 360° tub self-cleaning function to remove stubborn stains and maintain a healthy laundry environment.
- **Fluff Stain Filter:** Regularly clean the fluff stain filter to effectively remove lint and hair from clothes and prevent blockages.
- **Stainless Steel Inner Tank:** The honeycomb-shaped stainless steel inner tank is designed to protect clothes and reduce wear. Periodically wipe it clean.
- **Air Drying:** The independent air-drying function, achieved through high-speed rotation, helps keep the tub dry and

prevents mildew.

 
3D Butterfly Flow




Child Lock




Filter Box

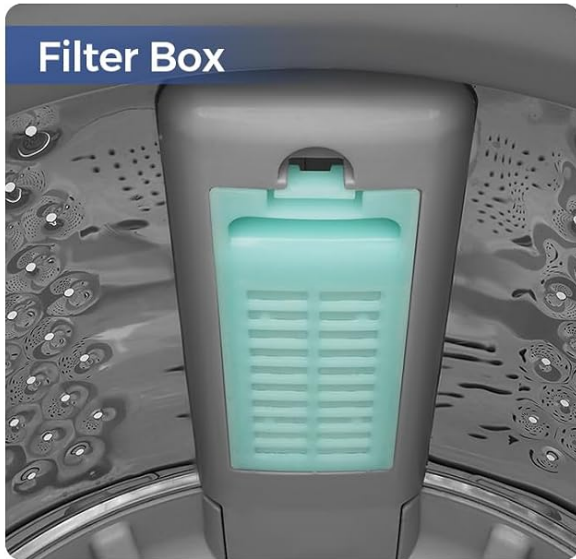

Transparent Cover

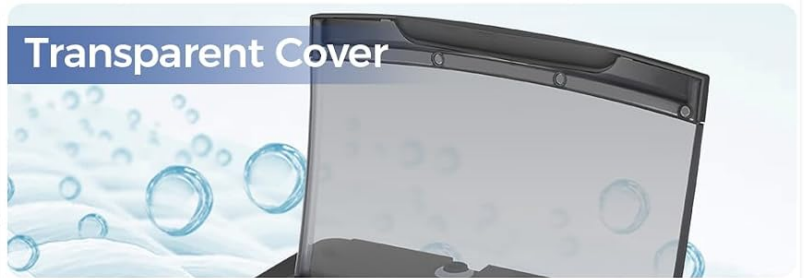 

Side Handle

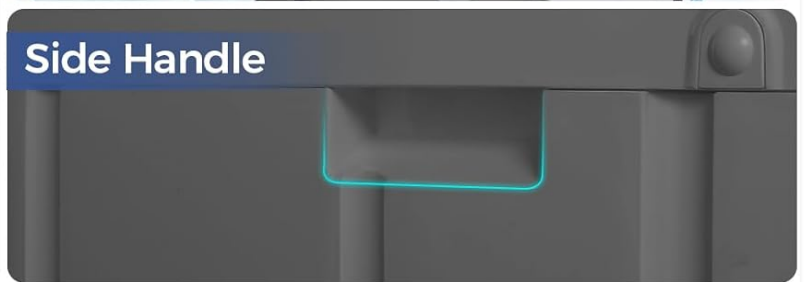 

Extended Drain Pipe



Adjusting Feet



Image: A collage showcasing key features such as the 3D butterfly water flow for effective washing, child lock for safety, a removable filter box for lint collection, a transparent cover to monitor laundry, side handles for easy movement, an extended drain pipe, and adjustable feet for stability.

TUB AIR DRY SELF-CLEANING

Antibacterial pulsator - protect pure laundry space!



Tub Self-Clean
water flow scours away dirt



Tub Air-Dry
avoid water damage and mildew



Flushing
water



Flip
washing



Lift
water



Image: An animated diagram demonstrating the tub air dry self-cleaning process, which uses water flow to scour away dirt and prevent water damage and mildew, ensuring an antibacterial laundry space.

5. TROUBLESHOOTING

If you encounter any issues with your Nictemaw Portable Washing Machine, please refer to the following common troubleshooting tips:

- **Machine Not Starting:** Ensure the power cord is securely plugged in and the power button has been pressed. Check if the lid is properly closed.
- **Water Leakage:** Verify that all water inlet and drain hose connections are tight and correctly installed. Ensure the drain hose is not kinked or blocked.
- **Excessive Vibration/Noise:** Check if the machine is placed on a level surface and adjust the leveling feet if necessary. Ensure laundry is evenly distributed inside the tub. The Automatic Unbalance Detection (AUD) function

helps mitigate severe vibrations.

- **Poor Drainage:** Confirm the drain hose is positioned correctly and not obstructed. Clean the fluff stain filter if it's clogged.
- **Clothes Not Clean:** Ensure the correct washing program and water level are selected for the load size and fabric type. Check detergent levels.

For persistent issues, please contact Nictemaw customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	Nictemaw
Model Name	Nictemaw 17.8Lbs Capacity Full-Automatic Washer Machine
Model Number	N5577-3
Capacity	20 lbs / 2.8 Cubic Feet
Operation Mode	Fully Automatic
Number of Programs	10
Water Levels	8
Max Rotational Speed	1300 RPM
Special Features	Adjustable Leveling Legs, Child Lock, Delay Start, Drum Clean, Drain Pump
Controls Type	Touch
Display	LED
Material	Plastic, Stainless Steel (Drum)
Color	Dark Grey

7. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase. If you require technical assistance, have questions about operation, or need to report an issue, please contact Nictemaw customer support through the official brand channels or your retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CTQCZWCK>

More documents and user manuals: <https://manuals.plus/>