



[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny 5-Piece Outdoor Dining Set Instruction Manual

Outsunny B0CTQDLPM

Outsunny 5-Piece Outdoor Dining Set Instruction Manual

Model: B0CTQDLPM

INTRODUCTION

Thank you for choosing the Outsunny 5-Piece Outdoor Dining Set. This manual provides essential information for the safe assembly, operation, maintenance, and care of your new patio furniture. Please read these instructions thoroughly before assembly and retain them for future reference.



Image: The complete Outsunny 5-piece outdoor dining set, featuring four chairs and a square table, suitable for various outdoor settings.

SAFETY GUIDELINES

To ensure safe use and prevent injury or damage, please adhere to the following safety guidelines:

- Always follow the assembly instructions carefully to prevent tip-over hazards.
- Do not exceed the weight limits: 264 lbs for each chair and 154 lbs for the table.
- Keep small parts and assembly hardware away from children to avoid choking hazards.
- Inspect all components for sharp edges or defects before and after assembly.
- Ensure all bolts and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Place the dining set on a flat, stable surface to prevent wobbling or tipping.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged:

- 4 x Armchairs with cushions

- 1 x Square Dining Table
- Assembly Hardware (bolts, washers, wrench, etc.)



FIVE-PIECE DINING SET

Ideal for family dinner or entertaining guests



4 X Armchair



1 X Square Dining Table

Image: Illustration of the five-piece dining set components: four armchairs and one square dining table.

ASSEMBLY INSTRUCTIONS

Assembly is required for this dining set. It is recommended to assemble the furniture on a soft, clean surface to prevent scratches. Two people are recommended for easier assembly.

Chair Assembly:

1. Attach the chair backrest to the seat frame using the provided bolts and washers. Do not fully tighten yet.
2. Connect the chair legs to the seat frame. Ensure all legs are oriented correctly.
3. Once all components are loosely attached, place the chair on a flat surface and gently rock it to ensure it is level.
4. Evenly tighten all bolts using the provided wrench. Avoid over-tightening.
5. Place the cushion onto the chair seat.

Table Assembly:

1. Attach the table legs to the tabletop using the provided bolts and washers. Do not fully tighten yet.
2. Ensure all legs are securely aligned with the tabletop.
3. Place the table upright on a flat surface.
4. Evenly tighten all bolts using the provided wrench. Avoid over-tightening.

After assembling all pieces, ensure they are stable and all connections are secure before use.

USAGE

This Outsunny dining set is designed for outdoor use, providing a comfortable and functional space for dining and conversation. The set includes four chairs and a square table, ideal for small gatherings.

- Use the table for serving meals, drinks, or playing board games.
- The chairs feature soft padded cushions for comfort and armrests for support.
- Position the set in your garden, backyard, deck, or patio area.



Image: An overhead view of the dining set arranged on a patio, ready for use.

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your outdoor dining set.

- **Cleaning:** Wipe clean the table and rattan surfaces with a damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly. Avoid harsh chemicals or abrasive cleaners.
- **Cushion Care:** The cushions are water-repellent for temporary cleaning. They feature zippers for easy removal and washing. Follow the care instructions on the cushion tags for specific washing guidelines.
- **Weather Protection:** While the PE rattan is weather-resistant and the steel frames are powder-coated for durability, it is recommended to cover the set during prolonged periods of harsh weather or when not in use to maximize its lifespan.
- **Inspection:** Periodically check all bolts and connections to ensure they remain tight. Re-tighten as needed.



Image: Detail of the hand-woven PE rattan, emphasizing its durability and easy maintenance.



Image: Detail of the cushion, featuring a zipper for cleaning and water-repellent fabric.

TROUBLESHOOTING

If you encounter any issues with your dining set, refer to these common solutions:

- **Wobbling Chairs/Table:** Ensure all bolts are fully and evenly tightened. If the surface is uneven, consider using furniture levelers or shims under the legs.
- **Difficulty Assembling:** Review the assembly instructions carefully. Ensure all parts are correctly oriented before tightening bolts. Do not force components together.
- **Damaged Parts:** If any parts are damaged or missing upon arrival, do not proceed with assembly. Contact customer support for assistance.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	BOCTQDLFXM
Brand	Outsunny

Feature	Detail
Color	Beige
Material Type	PE Wicker, Galvanized Steel, Polyester, PP
Table Dimensions (L x W x H)	31" x 31" x 29.5"
Chair Dimensions (W x D x H)	21.25" x 26.5" x 33.75"
Chair Seat Height	17.75"
Chair Weight Capacity	264 lbs
Table Weight Capacity	154 lbs
Item Weight	55 Pounds
Assembly Required	Yes



Image: Detailed dimensions for the table and chairs of the dining set.

WARRANTY AND CUSTOMER SUPPORT

This Outsunny product comes with a 1-year warranty against manufacturer defects. Please retain your proof of purchase for warranty claims.

For any questions, missing parts, or warranty inquiries, please contact Outsunny customer support. Refer to the contact information provided with your purchase documentation or visit the official Outsunny website.