

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [MAXGROOM](#) /

> MAXGROOM Body Hair Trimmer User Manual

MAXGROOM RFCD-9087

MAXGROOM Body Hair Trimmer User Manual

Model: RFCD-9087

Brand: MAXGROOM

PRODUCT OVERVIEW

The MAXGROOM Body Hair Trimmer is designed for efficient and safe grooming of body hair. It features advanced technology for a comfortable and precise trimming experience.

- **Safe & Gentle Trimming:** Hypoallergenic stainless-steel and ceramic blades minimize skin irritation. Ergonomic R-shaped blade with rounded tips for a smooth, tug-free glide.
- **Powerful Motor But Low Noise:** High-performance 7000 RPM motor for efficient trimming. Low-noise design ensures a quiet grooming experience.
- **IPX7 Waterproof for Wet & Dry Use:** Fully waterproof for use in or out of the shower. Easy to clean under running water.
- **Built-in LED Light for Precision:** Integrated LED light illuminates fine hairs for precise trimming. Rechargeable battery offers up to 2 hours of runtime.
- **Compact, Portable & Travel-Friendly:** Lightweight and easy to carry. Includes a travel pouch for organized storage.



Figure 1: MAXGROOM Body Hair Trimmer and included accessories, including the travel case and guide combs.

SAFETY INFORMATION

- Always keep the trimmer away from water sources while in use, unless specifically designed for wet use (this model is IPX7 waterproof).
- Avoid using it on infants or children.
- Follow the recommended cleaning and maintenance procedures to ensure safe and proper functioning.
- Always unplug the trimmer from the power source before cleaning or storing.
- Do not use the trimmer if the blade is damaged or worn out.
- Always supervise children when they are using the trimmer.

SETUP

Charging the Trimmer

Before first use, fully charge the trimmer. The trimmer is powered by a rechargeable battery and can be charged via USB-C.

1. Connect the provided USB-C cable to the charging port at the bottom of the trimmer.
2. Plug the other end of the USB cable into a compatible USB charger, laptop, car charger, or power bank.
3. Allow approximately 1.5 hours for a full charge. A full charge provides up to 2 hours of shaving time.



Figure 2: The trimmer being charged using the USB-C cable, compatible with various USB power sources.

Attaching Guide Combs

The trimmer comes with two guide combs (3.0mm and 6.0mm) for different hair lengths.

1. Select the desired guide comb (3.0mm or 6.0mm).
2. Align the comb with the trimmer blade and gently push it until it clicks into place.
3. To remove, gently pull the comb away from the blade.

TRAVEL POUCH Organizes Everything



Figure 3: The travel pouch neatly stores the trimmer, charging cable, cleaning brush, and guide combs.

OPERATING INSTRUCTIONS

General Usage

1. Ensure the trimmer is charged.
2. Attach the desired guide comb if you wish to maintain a specific hair length, or use without a comb for a closer trim.
3. Press the power button to turn on the trimmer. The integrated LED light will illuminate.
4. Gently glide the trimmer against the direction of hair growth. The R-shaped ceramic blade is designed for sensitive areas.
5. The IPX7 waterproof design allows for both wet and dry trimming.

BELOW THE BELT TRIMMER




Figure 4: The trimmer is suitable for sensitive areas, providing a safe and gentle experience.



**WHOLEBODY
WATERPROOF DESIGN**

You can shave in the shower

Figure 5: The trimmer's waterproof design allows for convenient use and cleaning in the shower.

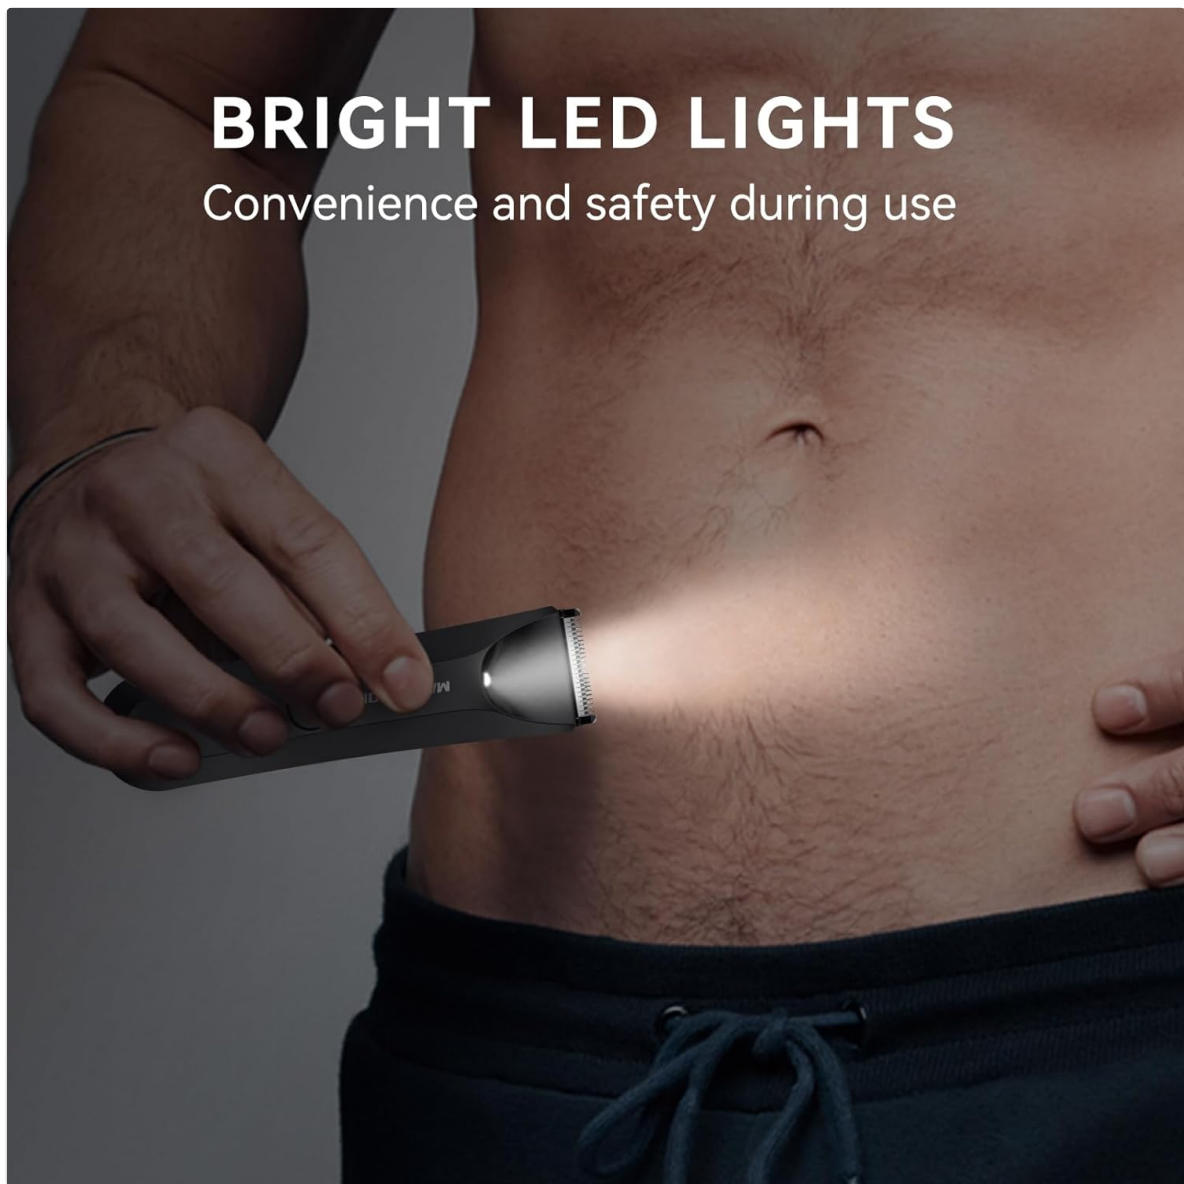

BRIGHT LED LIGHTS

Convenience and safety during use

Figure 6: The built-in LED light provides clear visibility for precise trimming, even in low-light conditions.

Recommended Usage Areas

The MAXGROOM Body Hair Trimmer is versatile and can be used on various parts of the body:

- Underarms
- Chest
- Pubic Area & Groin
- Legs
- Arms
- Neck
- Back

7 AREAS OF BODY GROOMING



Figure 7: Visual guide to the various body areas suitable for grooming with the MAXGROOM trimmer.

Official Product Videos

Your browser does not support the video tag.

Video 1: MAXGROOM Hair Trimmer for Men. This video provides a general overview of the trimmer's features and benefits.

Your browser does not support the video tag.

Video 2: MAXGROOM Body Pubic Hair Trimmer for Men. This video demonstrates the trimmer's effectiveness in sensitive areas.

Your browser does not support the video tag.

Video 3: MAXGROOM Ball & Groin Hair Trimmer for Men. A detailed demonstration of grooming in delicate areas.

Your browser does not support the video tag.

Video 4: MAXGROOM Mens Body Hair Trimmer. A comprehensive video showcasing the trimmer's capabilities for full body grooming.

MAINTENANCE

Cleaning the Trimmer

Regular cleaning ensures optimal performance and hygiene.

1. After each use, turn off the trimmer and remove any attached guide combs.
2. Rinse the trimmer head and blades under running water. The IPX7 waterproof design allows for easy cleaning.
3. Use the provided cleaning brush to remove any trapped hairs from the blades.
4. Allow the trimmer to air dry completely before storing or recharging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Low battery or power button not pressed correctly.	Charge the trimmer fully. Ensure the power button is pressed firmly.
Trimmer pulls hair or cuts poorly.	Blades are dull, dirty, or hair is too long.	Clean the blades thoroughly. If blades are dull, consider replacement (contact support). Trim longer hair with a higher comb setting first.
LED light not working.	Malfunction or low battery.	Charge the trimmer. If the issue persists, contact customer support.

SPECIFICATIONS

- **Product Dimensions:** 6.79 x 3.25 x 2.05 inches; 4.06 ounces
- **Item Model Number:** RFCD-9087
- **Batteries:** 1 C batteries required (included)
- **Manufacturer:** MAXGROOM
- **ASIN:** B0CTQMB52L
- **Country of Origin:** China
- **Recommended Uses:** Ball, Chest, Groin, Whole Body, Pubic, Neck, Private Part, Under Arm, Leg
- **Color:** Black
- **Hair Type:** All
- **Item Weight:** 115 Grams
- **Waterproof Grade:** IPX7
- **Power:** 5 watts

WARRANTY AND SUPPORT

MAXGROOM offers a 12-month free replacement service and lifetime product support for this trimmer. For any questions or concerns, please reach out to MAXGROOM customer service.

Contact information can typically be found on the product packaging or the official MAXGROOM website.