

[Manuals.plus](#) /

› [YOTON](#) /

› YOTON MP3 Player with Bluetooth 5.2, 64GB Mini HiFi-Music Player with Sports Clip, Portable MP3 Player for Kids with Independent Volume Button, FM Radio, Earphones Included black

YOTON YM03 M3

YOTON MP3 Player User Manual

Model: YM03 M3 | Brand: YOTON

1. INTRODUCTION

Thank you for choosing the YOTON MP3 Player. This manual provides detailed instructions to help you get started and make the most of your device's features. The YM03 is a compact and versatile music player designed for on-the-go use, featuring Bluetooth 5.2, HiFi sound, FM radio, voice recording, and a built-in sports clip.



Image: YOTON MP3 Player (YM03) - Front and side view with included 64GB Micro SD card.

2. What's in the Box

- 1 * YOTON MP3 Player YM03
- 1 * 64GB TF Card (inserted in the mp3 already)
- 1 * Wired Earphones
- 1 * Quick Guide
- 1 * USB Type C Cable

3. PRODUCT OVERVIEW

3.1 Device Layout

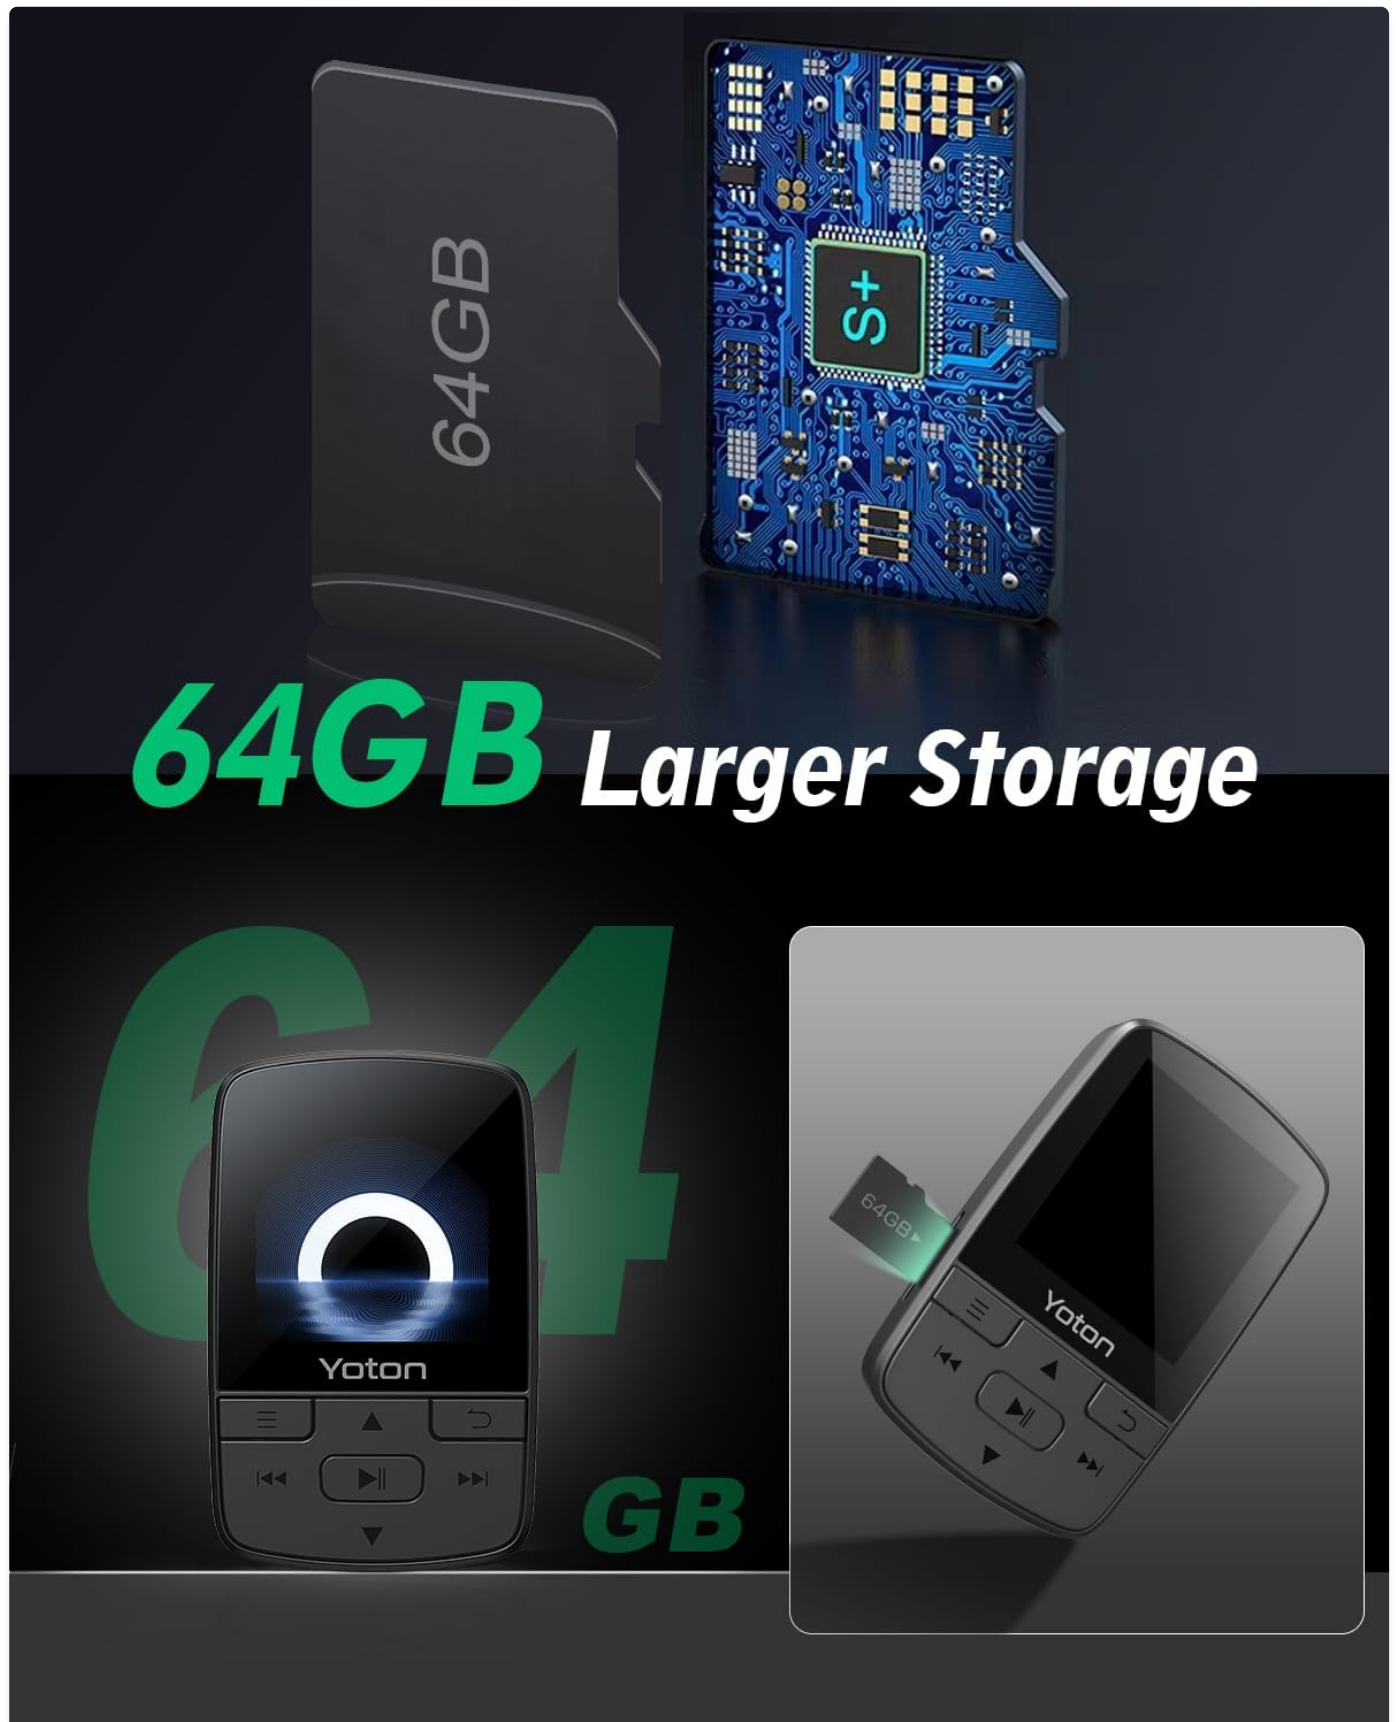


Image: YOTON MP3 Player - Side view showing volume rocker and power button.

The YM03 features a compact design with intuitive controls. On the side, you will find the volume rocker (+/-) and the power button. The device also includes a sturdy sports clip on the back for easy attachment to clothing or bags.

Not Just a Music Player

Multiple Functions



Image: YOTON MP3 Player - Bottom view showing USB-C port, microphone, and Micro SD card slot.

At the bottom, there is a USB-C port for charging and data transfer, a built-in microphone for recording, and a Micro SD card slot for expandable storage. The top of the device features a 3.5mm headphone jack.

3.2 Control Buttons

- **Menu Button:** Access main menu options.
- **Back Button:** Return to the previous screen.
- **Up/Down Buttons:** Navigate through menu options.

- **Play/Pause Button:** Control media playback.
- **Previous/Next Track Buttons:** Skip tracks or fast-forward/rewind.

4. SETUP

4.1 Initial Charge

Before first use, fully charge your YOTON MP3 Player. Connect the provided USB Type-C cable to the player's charging port and plug the other end into a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging progress.

4.2 Inserting Micro SD Card

The 64GB TF card is pre-inserted into the MP3 player. If you need to remove or replace it, gently push the card into the slot until it clicks, then release to eject. Insert the card with the gold contacts facing down.

HiFi Lossless Sound



Image: YOTON MP3 Player - Illustrating the included 64GB Micro SD card.

4.3 Powering On/Off

To power on the device, press and hold the power button on the side for approximately 3 seconds until the YOTON logo appears. To power off, press and hold the power button again until the screen turns off.

4.4 Initial Settings (Date, Time, Language)

Upon first power-on, you may be prompted to set the language, date, and time. Use the navigation buttons to select your

preferences and confirm. The device supports multiple languages.

5. OPERATING INSTRUCTIONS

5.1 Music Playback

Navigate to the 'Music' icon on the main menu and press the Play/Pause button to enter. You can browse your music by artist, album, genre, or all songs. The player supports various audio formats and delivers HiFi-grade sound. The 64GB internal storage can hold over a thousand songs and is expandable up to 128GB via the Micro SD card slot.

5.2 Bluetooth Connectivity

Select the 'Bluetooth' icon to access Bluetooth settings. Turn on Bluetooth and search for available devices. Select your Bluetooth headphones or speaker from the list to pair. The device features Bluetooth 5.2 for stable and seamless connections.

Video: YOTON MP3 Player YM03 - This video provides a general overview of the MP3 player's features and usage, including Bluetooth connectivity.

5.3 FM Radio

To use the FM radio function, plug in the wired earphones. The earphones act as an antenna for signal reception. Select 'FM Radio' from the menu, then scan for available stations.

5.4 Voice Recorder

The YM03 includes a built-in microphone for voice recording. Select the 'Recorder' icon to start a new recording. Recordings are saved to the device's storage.

5.5 Pedometer

Activate the 'Pedometer' function to track your steps. The lightweight design (0.988 ounces) and sports clip make it ideal for active lifestyles.

5.6 Stopwatch

Use the 'Stopwatch' feature for timing activities. It provides standard stopwatch functionality.

5.7 File Management (Folder)

The 'Folder' option allows you to browse all files stored on the device and the Micro SD card. You can manage your music, recordings, and pictures directly from here.

5.8 Viewing Pictures

The MP3 player supports viewing pictures. Transfer image files to the device and access them via the 'Pictures' icon or through the 'Folder' menu.

Video: Brief Introduction to Yoton MP3 Player - A short video demonstrating the basic functions and interface of the YM03.

6. MAINTENANCE

- Keep the device dry and away from extreme temperatures.

- Clean the screen and body with a soft, dry cloth.
- Avoid dropping the device or exposing it to strong impacts.
- For optimal battery life, avoid fully discharging the battery frequently.

7. TROUBLESHOOTING

- **Device not turning on:** Ensure the battery is charged. If not, connect to a power source.
- **Cannot transfer files:** Check the USB cable connection. Ensure the device is in data transfer mode if prompted.
- **Bluetooth connectivity issues:** Ensure Bluetooth is enabled on both devices. Try unpairing and re-pairing.
- **No sound:** Check volume levels. Ensure earphones are properly plugged in (for wired) or Bluetooth is connected (for wireless).
- **FM Radio static:** Ensure wired earphones are fully plugged in as they act as the antenna.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	0.7 x 1.5 x 2.3 inches
Item Weight	0.988 ounces
Manufacturer	YOTON
Item Model Number	YM03 M3
Batteries	1 Lithium Ion batteries required (included)
Special Features	Voice Recorder, Equalizer, Built-In Clip, Hi-Res Audio, FM Radio
Connectivity Technology	Bluetooth, USB
Memory Storage Capacity	32 GB (expandable up to 128GB with TF card)
Screen Size	1.4 Inches

9. WARRANTY AND SUPPORT

YOTON offers comprehensive after-sale support for your MP3 player:

- 24-hour Prompt Response
- 30-day Return Policy
- Repairable within a year
- Lifetime Professional Support

For any inquiries or support, please contact YOTON directly via their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question