



Manuals.plus /

- › Fresh 'n Rebel /
- › Fresh 'n Rebel Bold M2 Bluetooth Speaker User Manual

Fresh 'n Rebel BOLD M2

Fresh 'n Rebel Bold M2 Bluetooth Speaker User Manual

Model: Bold M2

Your guide to portable, powerful sound.

INTRODUCTION

The Fresh 'n Rebel Bold M2 is a portable Bluetooth speaker designed for robust sound and ultimate portability. With its durable, waterproof, and dustproof design, extended battery life, and versatile connectivity options, it's ready for any adventure. This manual provides essential information for setting up, operating, and maintaining your Bold M2 speaker.

WHAT'S IN THE BOX



IN DER BOX

- Bold M2 kabellose Bluetooth-Lautsprecher
- USB-C Ladekabel
- Tragekabel
- Benutzerhandbuch

The Fresh 'n Rebel Bold M2 package includes:

- Bold M2 Wireless Bluetooth Speaker
- USB-C Charging Cable
- Carrying Strap
- User Manual

Image: A visual representation of the Bold M2 speaker, USB-C charging cable, carrying strap, and user manual, as typically found inside the product packaging.

SETUP

1. Charging Your Speaker

Before first use, fully charge your Bold M2 speaker. Use the provided USB-C cable to connect the speaker to a power source (e.g., a USB wall adapter or computer USB port).

- The LED battery indicator lights will show the charging status.
- A full charge provides up to 24 hours of playtime.



Image: A person holding the Bold M2 speaker, with text overlay highlighting "24 Hours Playtime," demonstrating the speaker's long battery life.

2. Powering On/Off

Press and hold the power button located on the top panel of the speaker to turn it on or off.

3. Bluetooth Pairing

1. Turn on your Bold M2 speaker. It will automatically enter Bluetooth pairing mode, indicated by a blinking LED light.
2. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select "Bold M2" from the list of devices.
4. Once connected, the LED light on the speaker will turn solid, and you will hear a confirmation sound.

OPERATING INSTRUCTIONS

Volume Control Ring

The Bold M2 features an intuitive volume control ring on its top panel. Rotate the ring clockwise to increase the volume and counter-clockwise to decrease it.

RING ZUR LAUTSTÄRKE- REGELUNG



Image: A detailed view of the speaker's top control panel, highlighting the volume control ring for easy adjustment.

Party Mode (Connect 2 Devices)

Party Mode allows two different devices to connect to the Bold M2 speaker simultaneously, enabling seamless music sharing between friends.



PARTY MODUS

Schließe zwei Geräte
gleichzeitig an den
Lautsprecher an



Image: A graphic demonstrating Party Mode, where two mobile devices are simultaneously connected to the speaker, allowing for shared control of music playback.

Double Fun Mode (Link 2 Speakers for Stereo)

For a true stereo experience, you can wirelessly link two Bold M2 speakers together using Double Fun Mode.

1. Ensure both Bold M2 speakers are powered on and not connected to any other Bluetooth devices.
2. On one speaker, press and hold the Bluetooth button until you hear a specific tone, indicating it's ready to pair with another speaker.
3. The two speakers will automatically connect to each other. Once connected, they will function as a stereo pair.
4. Now, connect your device to one of the paired Bold M2 speakers via Bluetooth.

DOPPELTER FUN-MODUS



Verbinde zwei
Lautsprecher drahtlos,
um in echtem Stereo
zu hören

Image: A graphic illustrating Double Fun Mode, where two Bold M2 speakers are wirelessly paired to create a stereo sound system.

Waterproof and Dustproof (IP67)

The Bold M2 speaker is rated IP67, meaning it is fully protected against dust and can withstand immersion in water up to 1 meter for 30 minutes. This makes it ideal for outdoor use, by the pool, or at the beach.



Image: The Bold M2 speaker with water droplets on its surface, visually confirming its waterproof capabilities.



WASSER- DICHT

Image: A hand holding the Bold M2 speaker, showcasing its compact size and water-resistant design, suitable for various environments.

Official Product Video

Your browser does not support the video tag.

Video: An official promotional video for the Fresh 'n Rebel Bold M2 speaker, demonstrating its key features such as volume control, Party Mode, Double Fun Mode, and waterproof capabilities in various settings.

MAINTENANCE

Cleaning

To clean your Bold M2 speaker, use a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the surface. Ensure the USB-C port is dry before charging.

Storage

When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to charge the speaker at least once every three months to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker using the provided USB-C cable.
Cannot pair via Bluetooth.	Speaker is not in pairing mode; device Bluetooth is off; too many devices connected.	Ensure speaker is in pairing mode (blinking LED). Turn device Bluetooth off and on. Disconnect other Bluetooth devices.
No sound or low volume.	Volume too low on speaker or device; speaker not connected.	Increase volume on both speaker and connected device. Re-establish Bluetooth connection.
Double Fun Mode not working.	Speakers not properly paired; one speaker already connected to a device.	Ensure both speakers are disconnected from other devices before initiating Double Fun Mode pairing. Follow pairing steps carefully.

SPECIFICATIONS

Model Name: Bold M2

Model Number: BOLD M2

Product Dimensions: 8 x 8.1 x 18 cm

Weight: 940 grams

Connectivity Technology: Bluetooth, USB

Bluetooth Version: 5.3

Waterproof Rating: IP67

Maximum Speaker Output Power: 20 Watts

Audio Output Mode: Stereo

Input Voltage: 5 Volts (DC)

Playtime: Up to 24 hours

Compatible Devices: Smartphone, Tablet, Computer

Manufacturer: Fresh 'n Rebel

Country of Origin: China

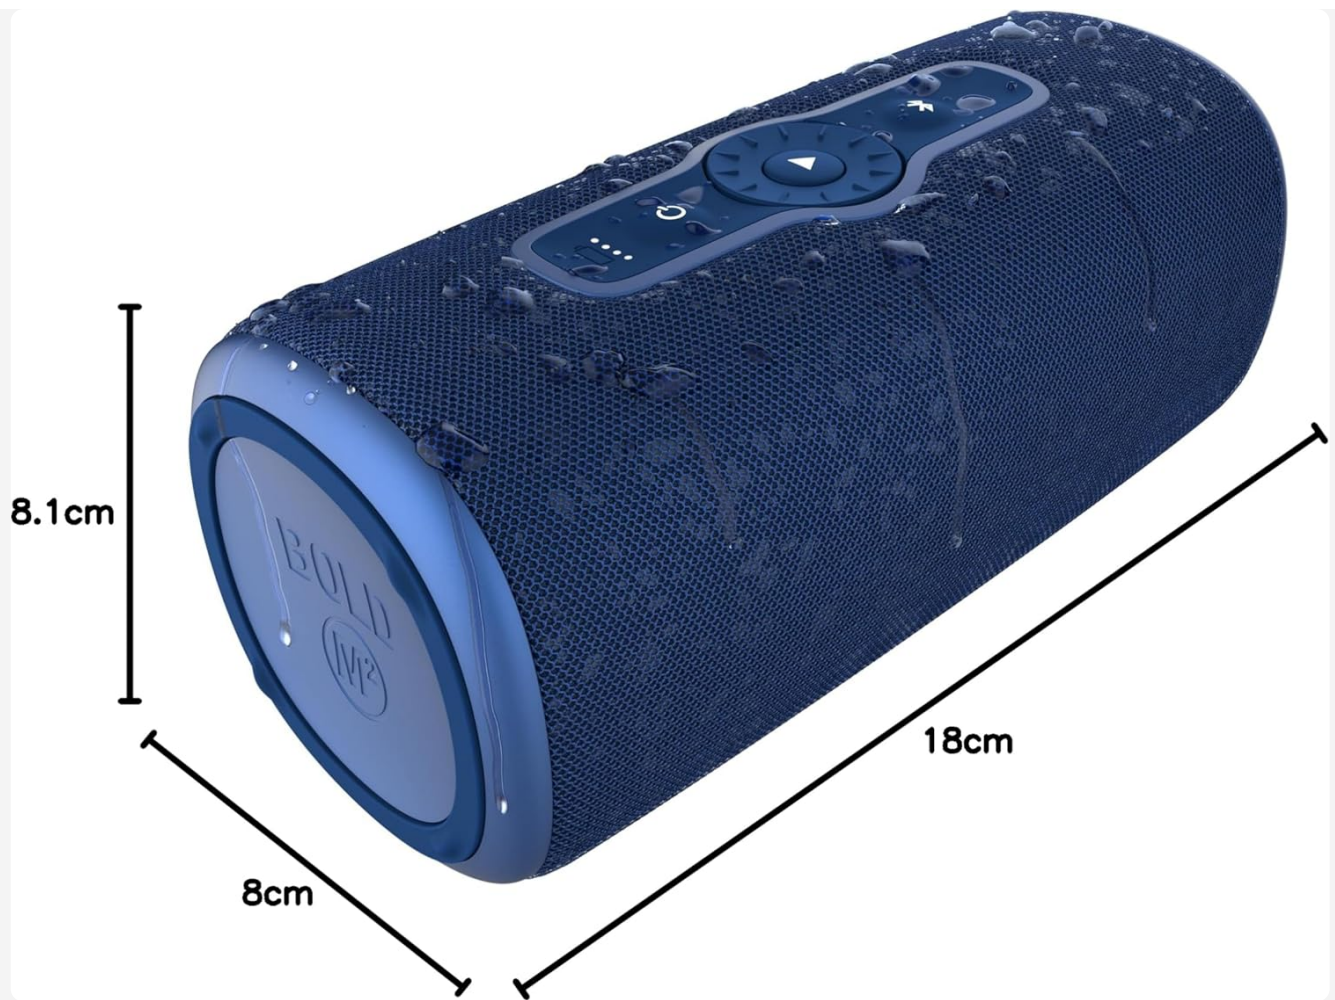


Image: A diagram illustrating the physical dimensions of the Bold M2 speaker, providing a clear understanding of its size.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Fresh 'n Rebel website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

Online Support: www.freshnrebel.com/support