

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KitchenAid](#) /

› [KitchenAid Go Cordless Hand Mixer KHMR762 Instruction Manual](#)

## KitchenAid KHMR762

# KitchenAid Go Cordless Hand Mixer

MODEL: KHMR762

Instruction Manual

## Introduction

Thank you for choosing the KitchenAid Go Cordless Hand Mixer. This appliance is designed for convenient and efficient mixing, stirring, and whipping of various ingredients without the limitations of a power cord. Powered by a rechargeable 12V MAX battery, it offers flexibility to create in any area of your kitchen. Please read this manual thoroughly before use to ensure safe and optimal performance.

## Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the hand mixer.
- To protect against electrical shock, do not immerse the mixer body, cord, or battery in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from beaters during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Remove beaters from mixer before washing.
- This product is intended for household use only.

## Product Overview

The KitchenAid Go Cordless Hand Mixer offers powerful, cord-free mixing with a versatile design. It includes essential accessories for various culinary tasks.



Image: The KitchenAid Go Cordless Hand Mixer in Matte Black, showcasing its sleek design and cordless nature.

### Key Features:

- **Cordless Design:** Freedom to mix anywhere without outlet limitations.
- **12V MAX Rechargeable Battery:** Provides up to 60 minutes of continuous runtime (actual runtime varies).
- **7 Speeds:** Versatile speed control for stirring, mixing, and whipping.
- **Soft Start Feature:** Gradually brings beaters to selected speed to prevent splattering.
- **Self-Standing Design:** Allows the mixer to stand upright, keeping beaters out of the bowl and off the workspace.
- **Included Accessories:** Two dishwasher-safe stainless steel Turbo Beater II accessories, 12V MAX removable battery, USB-C cable, and wall adapter.

## Powerful, cord-free mixing

---



Image: A detailed view of the KitchenAid Go Cordless Hand Mixer, highlighting its 7 speeds, removable battery, and Stainless Steel Turbo Beater II™ Accessory.



Image: The hand mixer is shown standing upright on a kitchen counter next to a removable battery, demonstrating its convenient self-standing design.

### **KitchenAid Go Cordless System Compatibility:**

The 12V MAX removable battery is interchangeable with other products in the KitchenAid Go Cordless System, offering expanded versatility across your kitchen appliances.



Image: A collection of KitchenAid Go Cordless System appliances, including the hand mixer, immersion blender, food chopper, and personal blender, all powered by a single interchangeable battery.

## Setup

### 1. Charging the Battery:

1. Before first use, fully charge the 12V MAX removable battery.
2. Connect the USB-C cable to the charging port on the battery and the wall adapter.
3. Plug the wall adapter into a standard electrical outlet.
4. The battery indicator lights will show the charging status. A full charge is indicated when all lights are solid.

### 2. Attaching the Beaters:

1. Ensure the hand mixer is turned off and the battery is securely inserted.
2. Insert the shaft of each Turbo Beater II accessory into the openings on the underside of the mixer. Push firmly until they click into place.
3. Ensure both beaters are securely locked before operation.

# Operating Instructions

---

## 1. Powering On/Off:

- To turn on the mixer, press and hold the power button until the indicator lights illuminate.
- To turn off the mixer, press and hold the power button again until the lights turn off.

## 2. Adjusting Speed:

- The mixer features 7 speeds. Use the speed control buttons (+/-) to increase or decrease the mixing speed.
- The Soft Start Feature will gradually increase the speed to prevent splattering of ingredients.
- Start with a low speed for chunky ingredients and gradually increase for creaming butter and sugar, or high speed for whipping egg whites and heavy creams.

## 3. Mixing:

- Place the beaters into the ingredients before turning on the mixer.
- Hold the mixer firmly and move it through the ingredients as needed.
- When finished, turn off the mixer before lifting the beaters from the bowl.



Image: A person is shown using the KitchenAid Go Cordless Hand Mixer to stir and mix ingredients in a bowl, demonstrating its ease of use during food preparation.

#### 4. Ejecting Beaters:

- With the mixer turned off, press the beater eject button to release the Turbo Beater II accessories.

## Cleaning and Maintenance

### Cleaning the Mixer Body:

- Wipe the mixer body with a damp cloth. Do not immerse the mixer body in water or other liquids.
- Ensure the charging port cover is securely closed before cleaning to prevent moisture ingress.

### Cleaning the Beaters:

- The stainless steel Turbo Beater II accessories are dishwasher safe.
- Alternatively, wash them in warm, soapy water and rinse thoroughly.

### Battery Care:

- Store the battery in a cool, dry place when not in use.
- Avoid extreme temperatures to prolong battery life.
- Recharge the battery as needed; frequent partial charges are acceptable.

## Troubleshooting

If your KitchenAid Go Cordless Hand Mixer is not operating as expected, please refer to the following common issues and solutions:

| Problem                     | Possible Cause                                    | Solution   |
|-----------------------------|---|--|
| Mixer does not turn on.     | Battery is not charged or not inserted correctly. | Ensure battery is fully charged and securely inserted.                           |
| Beaters do not rotate.      | Beaters are not inserted correctly.               | Remove and re-insert beaters, ensuring they click into place.                    |
| Reduced mixing power.       | Low battery charge.                               | Recharge the battery.  |
| Splattering of ingredients. | Speed setting is too high for initial mixing.     | Start with a lower speed and gradually increase. Utilize the Soft Start Feature. |

## Specifications

| Feature      | Detail                        |
|--------------|-------------------------------|
| Brand        | KitchenAid                    |
| Model Name   | KitchenAid Go Cordless System |
| Model Number | KHMR762BM                     |

| Feature            | Detail                           |
|--------------------|----------------------------------|
| Color              | Matte Black                      |
| Speeds             | 7                                |
| Voltage            | 12.0V (MAX)                      |
| Wattage            | 60 watts                         |
| Item Weight        | 2.58 pounds                      |
| Product Dimensions | 3.74"D x 11.99"W x 6.7"H         |
| Material           | Plastic, Stainless Steel         |
| Special Feature    | Cordless, Portable               |
| Dishwasher Safe    | No (Beaters are dishwasher safe) |

## Warranty and Support

---

This KitchenAid Go Cordless Hand Mixer is covered by the manufacturer's warranty. For detailed warranty information, product registration, or technical support, please visit the official KitchenAid website or contact their customer service. Keep your purchase receipt for warranty claims.

Visit the [KitchenAid Store](#) for more products and information.