

## CONTOURE DE-1350W

# RV Stackable Front-Load Electric Dryer User Manual

Model: DE-1350W | Brand: CONTOURE

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your CONTOURE DE-1350W RV Stackable Front-Load Electric Dryer. Please read this manual thoroughly before using the appliance and retain it for future reference. Proper installation, use, and maintenance are crucial for optimal performance and longevity of the dryer.

## 2. IMPORTANT SAFETY INFORMATION

**WARNING: To reduce the risk of fire, electric shock, or injury to persons, read all instructions before using this appliance.**

- Always follow local codes and ordinances for installation.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the drying compartment.
- Do not reach into the appliance if the drum is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Clean lint screen before or after each load.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- Keep area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt.
- The interior of the appliance and exhaust duct should be cleaned periodically by qualified service personnel.
- Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
- Do not use this appliance for purposes other than its intended use.

### 3. PRODUCT OVERVIEW

The CONTOURE DE-1350W is a compact, front-load electric dryer designed for space-saving applications such as RVs, boats, and tiny homes. It features user-friendly electronic controls, a digital display, and a durable stainless steel drum.



**Figure 3.1:** Front view of the CONTOURE DE-1350W RV Stackable Front-Load Electric Dryer. This image shows the control panel at the top, the circular front-loading door, and the "RapidClean" branding on the door.

#### Key Features:

- **Compact Design:** Optimized for small living spaces.
- **Electronic Controls:** Intuitive interface with a clear digital display.
- **Drying Cycles:** Four distinct drying cycles for various fabric types.
- **Temperature Settings:** Three temperature options (High, Medium, Low).
- **Stainless Steel Drum:** Ensures durability and gentle garment care.

- **Convenient Features:** Includes a lock function, wide-angle door opening, and a transparent window for monitoring.



**Figure 3.2:** The CONTOURE DE-1350W dryer with text overlays emphasizing its compact design, four drying cycles, three temperature settings, and easy-to-use electronic controls with a digital display.

## 4. SETUP AND INSTALLATION

Proper installation is critical for the safe and efficient operation of your dryer. It is recommended that installation be performed by a qualified technician.

### 4.1 Unpacking

- Carefully remove all packaging materials, including the base packaging.

- Inspect the dryer for any shipping damage. Report any damage to your retailer immediately.
- Ensure all accessories are present.

## 4.2 Location Requirements

- The dryer must be installed on a firm, level floor capable of supporting its weight (76.5 lbs).
- Ensure adequate clearance around the dryer for proper ventilation and maintenance.
- Do not install the dryer in an area where it may be exposed to freezing temperatures.
- This dryer is designed for freestanding installation.



**Figure 4.1:** Dimensions of the CONTOURE DE-1350W dryer. The image shows the dryer with measurements: 32 3/10 inches height, 26 3/5 inches width, and 21 1/2 inches depth.

## 4.3 Electrical Requirements

- The dryer requires a dedicated 120 Volts (AC) electrical supply.
- Ensure the electrical outlet is properly grounded and meets all local electrical codes.

- Do not use extension cords with this appliance.

## 4.4 Venting Requirements

- The dryer must be properly vented to the outside to prevent lint and moisture buildup.
- Use rigid or flexible metal ducting for venting. Avoid plastic or foil ducting.
- Keep the vent duct as short and straight as possible to ensure efficient drying.

## 5. OPERATING INSTRUCTIONS

---

Follow these steps for optimal drying performance.

### 5.1 Loading the Dryer

- Sort laundry by fabric type and desired drying temperature.
- Do not overload the dryer. Clothes should tumble freely. The capacity is 13.2 pounds.
- Close the dryer door firmly. The door hinges are reversible for convenience.

### 5.2 Control Panel Overview

The control panel features electronic controls and a digital display for easy cycle and setting selection.

## 141920 - Contoure 24" Stackable Front-Load Electric Dryer Dimensions



**CONTOURE®**  
SPACE SAVER APPLIANCES

**Figure 5.1:** Angled view of the CONTOURE DE-1350W dryer, showcasing the control panel with various buttons and the digital display. The front-loading door is also visible.

### 5.3 Selecting a Drying Cycle

Your dryer offers four drying cycles:

- **Normal:** For everyday cottons and mixed loads.
- **Delicate:** For delicate fabrics that require lower heat.
- **Heavy Duty:** For bulky items and heavy fabrics.
- **Air Dry:** No heat, for fluffing items or drying heat-sensitive materials.

Use the cycle selector button on the control panel to choose the desired cycle.

### 5.4 Selecting Temperature Settings

Three temperature settings are available:

- **High:** For sturdy fabrics like towels and jeans.

- **Medium:** For permanent press, synthetics, and light cottons.
- **Low:** For delicate items and heat-sensitive fabrics.

Press the temperature button to cycle through the available options.

## 5.5 Starting a Cycle

- After selecting the cycle and temperature, press the "Start/Pause" button to begin the drying cycle.
- The digital display will show the remaining drying time.

## 5.6 Child Lock Function

To activate the child lock, press and hold the designated lock button (refer to your control panel for specific icon) for a few seconds. This prevents accidental operation by children. Repeat the action to deactivate.

# 6. MAINTENANCE AND CARE

Regular maintenance ensures efficient operation and extends the life of your dryer.

## 6.1 Cleaning the Lint Screen

- Clean the lint screen before or after every load. A clogged lint screen reduces drying efficiency and increases fire risk.
- Pull the lint screen out from its housing (usually located inside the door opening).
- Remove accumulated lint by hand. If necessary, wash the screen with warm, soapy water and a soft brush, then rinse thoroughly and dry completely before reinserting.

## 6.2 Cleaning the Dryer Interior

- Wipe the dryer drum with a damp cloth and mild detergent if needed.
- For stubborn stains, a non-abrasive cleaner can be used, followed by a thorough wipe with a damp cloth to remove any residue.
- The interior of the appliance and exhaust duct should be cleaned periodically by qualified service personnel.

## 6.3 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Avoid using abrasive cleaners or solvents that could damage the finish.

# 7. TROUBLESHOOTING

Before calling for service, review the following common issues and their solutions.

Problem	Possible Cause	Solution
Dryer does not start	Power cord unplugged Circuit breaker tripped/fuse blown Door not closed properly Child lock activated	Ensure power cord is securely plugged in. Check household circuit breaker or fuse box. Close the door firmly until it latches. Deactivate child lock (refer to section 5.6).

Problem	Possible Cause	Solution
Clothes not drying properly	Clogged lint screen	Clean the lint screen (refer to section 6.1).
	Overloaded dryer	Reduce load size.
	Incorrect cycle/temperature setting	Select appropriate cycle and temperature for the fabric type.
	Restricted exhaust vent	Check and clear the exhaust vent for obstructions.
Dryer is noisy	Foreign objects in drum	Check drum for loose items (coins, buttons, etc.).
	Dryer not level	Ensure the dryer is installed on a level surface.

## 8. PRODUCT SPECIFICATIONS

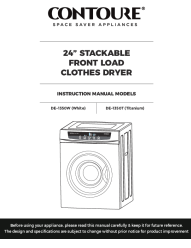
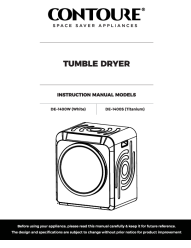
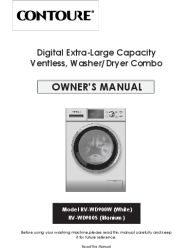
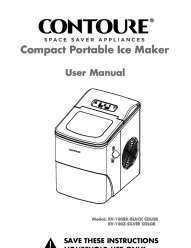


Feature	Detail
Brand	CONTOURE
Model Number	DE-1350W
Product Dimensions (H x W x D)	35.12 x 25.75 x 23.25 inches
Item Weight	76.5 pounds
Capacity	13.2 Pounds
Installation Type	Freestanding
Form Factor	Front Load
Color	White
Access Location	Front Load
Voltage	120 Volts (AC)
Door Hinges	Reversible
Certification	ETL
Material Type	Stainless Steel
Drying Cycles	4
Temperature Settings	3

## 9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or technical assistance, please contact CONTOURE customer support. Details regarding your product's specific warranty coverage are typically included with your purchase documentation.

For customer support, please refer to the contact information provided at the point of purchase or on the official CONTOURE website.

## Related Documents - DE-1350W

	<p><a href="#">Contoure 24\" data-bbox="214 166 828 179"&gt;Contoure 24" Stackable Front Load Clothes Dryer - Instruction Manual &amp; Safety Guide</a></p> <p>Comprehensive instruction manual for the Contoure 24" Stackable Front Load Clothes Dryer (Models DE-1350W, DE-1350T). Includes safety precautions, installation, operation, care, troubleshooting, specifications, and warranty information.</p>
	<p><a href="#">CONTOURE® Tumble Dryer DE-1400W/DE-1400S Instruction Manual</a></p> <p>Comprehensive instruction manual for CONTOURE® Tumble Dryer models DE-1400W and DE-1400S. Covers safety precautions, installation, operation, maintenance, troubleshooting, and warranty information for optimal use of your appliance.</p>
	<p><a href="#">Contoure Digital Extra-Large Capacity Ventless Washer/Dryer Combo Owner's Manual</a></p> <p>This owner's manual provides comprehensive instructions for the safe installation, operation, and maintenance of the Contoure Digital Extra-Large Capacity Ventless Washer/Dryer Combo, models RV-WD900W and RV-WD900S. It includes detailed safety precautions, operating procedures, program views, and care instructions.</p>
	<p><a href="#">Contoure Compact Portable Ice Maker User Manual</a></p> <p>User manual for the Contoure Compact Portable Ice Maker, covering safety instructions, operation, maintenance, and troubleshooting for models RV-100BK and RV-100Z.</p>
	<p><a href="#">Franke FMY 907 FM Cooker Hood Installation Manual</a></p> <p>Comprehensive installation guide for the Franke FMY 907 FM cooker hood, providing step-by-step instructions, parts list, dimensions, and safety information.</p>
	<p><a href="#">État de la batterie dans les caméras-piétons Axis</a></p> <p>Ce livre blanc détaille les facteurs influençant la santé et la durée de vie des batteries des caméras-piétons Axis, incluant la température, le niveau de charge, les cycles de charge, et l'utilisation. Il présente également les fonctions de protection de la batterie intégrées par Axis et des conseils pour optimiser la performance.</p>



[Contoure 24" Stackable Front Load Clothes Dryer - Instruction Manual & Safety Guide](#)

Comprehensive instruction manual for the Contoure 24" Stackable Front Load Clothes Dryer (Models DE-1350W, DE-1350T). Includes safety precautions, installation, operation, care, troubleshooting, specifications, and warranty information.

lang:en score:38 filesize: 5.8 M page\_count: 28 document date: 2024-08-27