



[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny Wooden Rocking Chair Instruction Manual

Outsunny 84A-126V00WT

Outsunny Wooden Rocking Chair Instruction Manual

Model: 84A-126V00WT

INTRODUCTION

Thank you for choosing the Outsunny Wooden Rocking Chair. This manual provides essential information for the safe assembly, proper operation, and effective maintenance of your new outdoor rocking chair. Please read this manual thoroughly before assembly and retain it for future reference.



Image: Front view of the Outsunny Wooden Rocking Chair, showcasing its white finish and wagon wheel armrests.

SAFETY INFORMATION

To ensure safe use of your rocking chair, please adhere to the following guidelines:

- **Weight Capacity:** Do not exceed the maximum weight capacity of 250 pounds (113 kg). Overloading can cause damage to the chair and potential injury.
- **Assembly:** Ensure all parts are correctly assembled and fasteners are tightened securely before use. Periodically check and re-tighten fasteners as needed.
- **Placement:** Place the chair on a flat, stable surface to prevent tipping. Avoid placing it on uneven ground or slopes.

- **Children and Pets:** Keep children and pets away from the chair during assembly. Supervise children when they are near or using the chair.
- **Environmental Conditions:** While designed for outdoor use, prolonged exposure to extreme weather conditions (heavy rain, snow, intense sun) may affect the chair's lifespan. Consider covering or storing the chair during harsh weather.
- **Sharp Edges/Splinters:** The wood is crafted for outdoor use, but inspect for any rough edges or potential splinters, especially after prolonged use or exposure to elements. Sand if necessary.

PRODUCT FEATURES

The Outsunny Wooden Rocking Chair is designed for comfort and durability in outdoor settings. Key features include:

- **Adirondack Style:** Classic slatted wooden seat and high back for comfortable lounging.
- **Wagon Wheel Armrests:** Unique and supportive armrests shaped like wagon wheels.
- **Smooth Rocking Motion:** Engineered for a gentle and calming sway.
- **Durable Fir Wood Construction:** Crafted from strong fir wood, suitable for outdoor elements.
- **Oversized Back:** Provides ample support for relaxation.




Slatted Backrest



Wheel-shaped Armrest



Sturdy Rocking Base

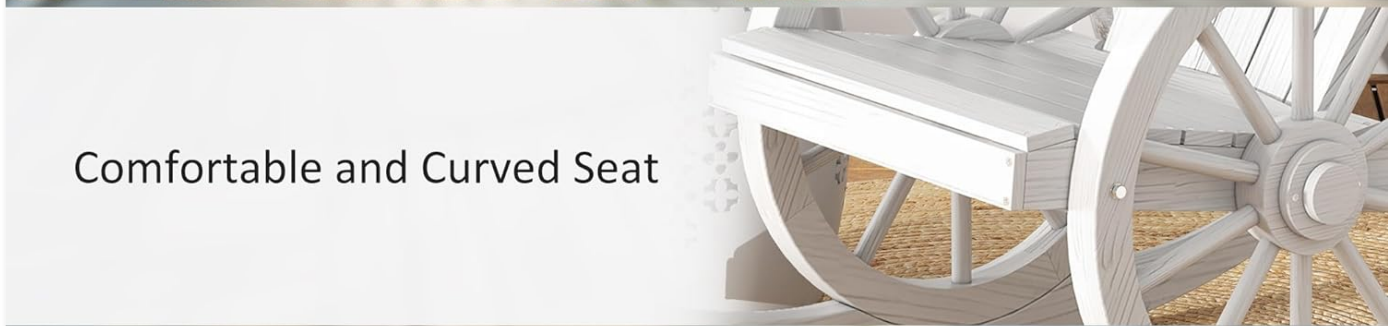

Comfortable and Curved Seat

Image: Detailed view of the distinctive wagon wheel armrest, highlighting its design and sturdy construction.

HIGH QUALITY MATERIAL

High Temperature Carbonization
· 100% Natural Fir Wood 100%



Image: Illustration demonstrating the selection, crafting, and carbonization process of the 100% natural fir wood used in the chair's construction.

SETUP AND ASSEMBLY

Assembly of the Outsunny Wooden Rocking Chair is required. Please follow the included assembly instructions carefully. It is recommended to have two people for assembly to ensure stability and ease of handling.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches. Verify all components listed in the parts list are present.
2. **Identify Hardware:** Separate and identify all screws, bolts, and other hardware.
3. **Follow Step-by-Step Diagram:** Refer to the detailed assembly diagrams provided in the separate assembly guide. Attach parts in the sequence specified.
4. **Hand-Tighten First:** Initially hand-tighten all fasteners. Once all parts are in place, fully tighten them with the appropriate tools. Do not overtighten to avoid stripping screws or damaging wood.

5. **Final Check:** After assembly, gently rock the chair to ensure all connections are secure and the chair is stable.

Note: Tools for assembly may not be included. Please refer to the separate assembly guide for a list of required tools.

OPERATING INSTRUCTIONS

Using your Outsunny Wooden Rocking Chair is straightforward:

- **Seating:** Sit centrally on the chair, ensuring your weight is evenly distributed.
- **Rocking Motion:** Gently push off with your feet to initiate the rocking motion. The chair is designed for a smooth and comfortable sway.
- **Relaxation:** Enjoy the calming motion for relaxation on your porch, patio, or garden.



Image: Graphic depicting the gentle and safe rocking capability of the Outsunny chair.



Image: The rocking chair positioned on a wooden patio, surrounded by potted plants, demonstrating its suitability for outdoor spaces.

MAINTENANCE

Proper maintenance will extend the life and appearance of your rocking chair:

- **Cleaning:** Wipe clean with a damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** Ensure the chair is completely dry after cleaning or rain to prevent water damage and mildew.
- **Fastener Check:** Periodically check all bolts and screws for tightness. Re-tighten as necessary to maintain stability.
- **Wood Care:** While the fir wood is treated for outdoor use, applying a wood sealant or outdoor furniture oil annually can help protect it from weathering and maintain its finish.
- **Storage:** During off-season or prolonged periods of non-use, store the chair in a dry, covered area to protect it from extreme weather.

TROUBLESHOOTING

If you encounter any issues with your Outsunny Wooden Rocking Chair, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chair feels wobbly or unstable.	Loose fasteners; uneven assembly; uneven ground.	Ensure all bolts and screws are fully tightened. Disassemble and reassemble if necessary, ensuring parts are aligned. Move the chair to a flat, level surface.
Wood appears rough or has splinters.	Natural wood characteristics; weathering.	Lightly sand affected areas with fine-grit sandpaper. Apply a wood sealant or outdoor furniture oil to smooth and protect the surface.
Rocking motion is not smooth.	Uneven rocking base; obstruction; misaligned parts.	Check the rocking base for any damage or debris. Verify that the chair was assembled correctly and all parts are aligned, especially the rocking elements.
Paint peeling or fading.	Prolonged exposure to sun and weather.	Clean the surface, lightly sand any peeling areas, and apply an outdoor-grade paint suitable for wood. Consider covering the chair when not in use.

If the problem persists or you encounter an issue not listed here, please contact Outsunny customer support for assistance.

SPECIFICATIONS

Detailed specifications for the Outsunny Wooden Rocking Chair (Model: 84A-126V00WT):

Attribute	Detail
Brand	Outsunny
Model Name	Rocking Chair
Model Number	84A-126V00WT
Color	White
Material	Fir Wood
Overall Dimensions (W x D x H)	26.75" W x 34.75" D x 36.25" H (67.9 cm W x 88.3 cm D x 92.1 cm H)
Seat Size (W x D)	20.75" W x 19" D (52.7 cm W x 48.3 cm D)
Seat Height	16.5" (41.9 cm)
Backrest Height	26.5" (67.3 cm)

Attribute	Detail
Arm Height	23.5" (59.7 cm)
Weight Capacity	250 lbs (113 kg)
Item Weight	24.2 lbs (11 kg)
Assembly Required	Yes
Indoor/Outdoor Usage	Outdoor

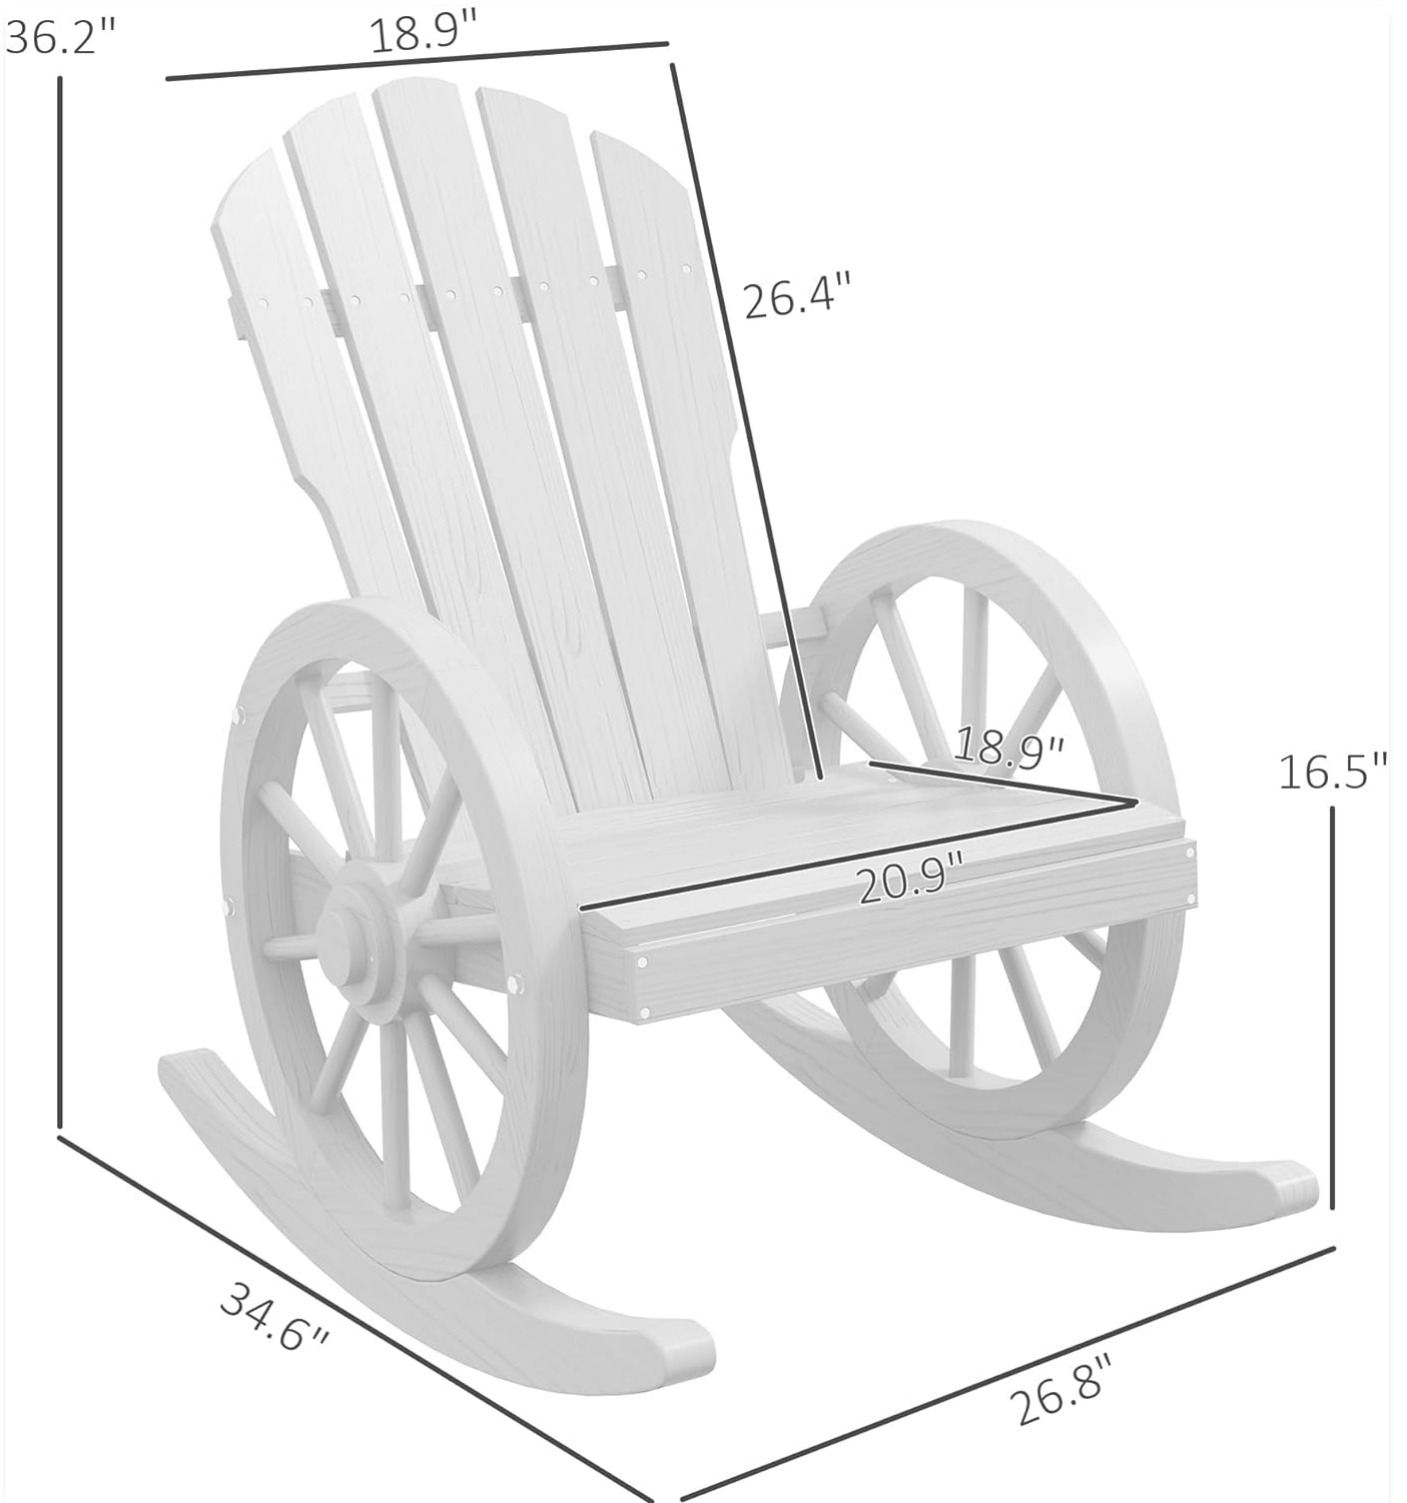


Image: Technical drawing showing the key dimensions of the rocking chair, including height, width, depth, and seat measurements.

WARRANTY AND SUPPORT

Outsunny is committed to providing high-quality products. For information regarding warranty coverage, product support, or to purchase replacement parts, please visit the official Outsunny website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

Contact Information: Refer to the packaging or the official Outsunny website for the most current customer support contact details.

