

MADHUR ENTERPRISE Works 229

Pro 60 TWS Earbuds User Manual

Model: MADHUR ENTERPRISE Works 229

INTRODUCTION

Thank you for choosing the Pro 60 TWS Earbuds. These wireless earphones are designed to provide a high-fidelity audio experience with seamless connectivity and convenience. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new earbuds, ensuring you get the most out of your device.

PRODUCT OVERVIEW

Components

- Pro 60 TWS Earbuds (Left and Right)
- Charging Case
- Protective Case
- USB Charging Cable (not explicitly listed but implied for charging)

Key Features

- Bluetooth Connectivity for tangle-free listening.
- High-quality audio with Active Noise Cancellation.
- Extended playtime on a single charge (up to 40 hours playback with charging case).
- Built-in microphone for clear hands-free calling.
- Fast Charging capability.
- Game Mode for optimized audio during gaming.
- Touch operation for easy and convenient control.
- Waterproof design.

Product Visuals



Image: The Pro 60 TWS Earbuds, showcasing their sleek design within the open charging case, illuminated by vibrant green LED lights. One earbud is shown outside the case.

Open the cover and connect don't wait

After successful bluetooth
matching, open the
cover and automatically
connect to bluetooth



Image: The earbuds and charging case, illustrating the automatic connection feature when the case lid is opened. An earbud is shown near a smartphone displaying a music app.

**Colorful breathing lights
more emotional**



Image: The earbuds in their charging case, highlighting the colorful breathing LED lights that add to the aesthetic appeal and indicate status.

***Comfortable to wear
without falling***

Small body, hidden in the ear to wear just right
With the three-point support solution that fits
the cochlea, the intense
Sports can walk around, can't shake off,
face calmly



Image: A close-up of an earbud positioned in an ear, demonstrating its ergonomic design for a comfortable and secure fit, suitable for various activities.

Touch operation easy and convenient

Say goodbye to insensitivity,
adopt touch design
More convenient operation



Image: The earbuds and charging case, illustrating the touch-sensitive control area on the earbuds for easy and intuitive operation without physical buttons.

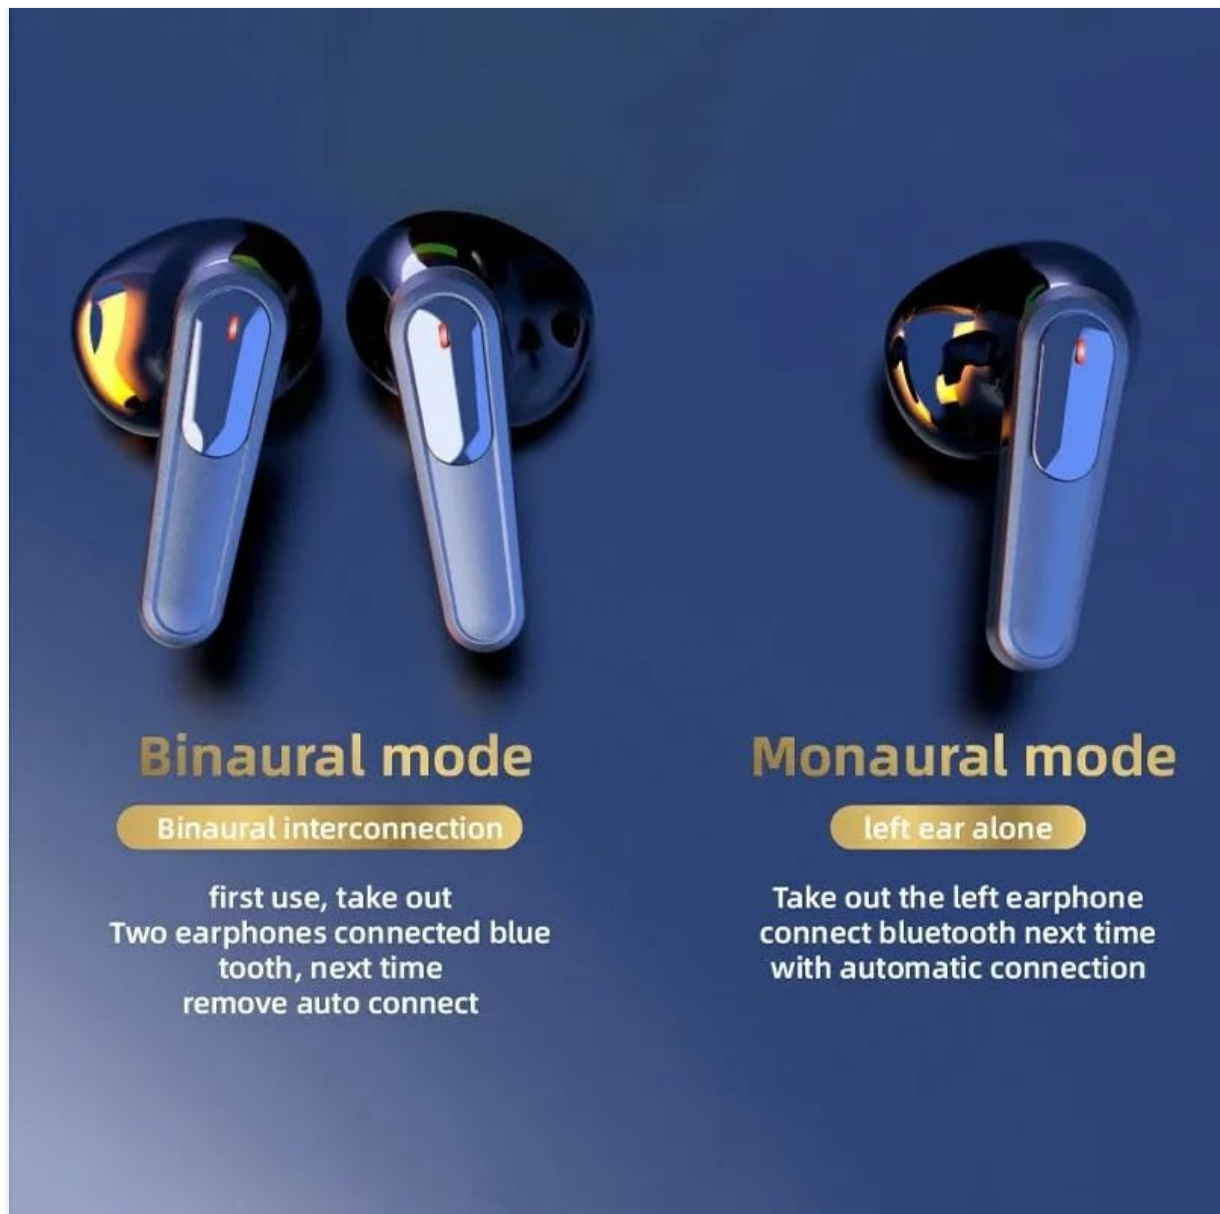


Image: A visual explanation of the Binaural and Monaural modes, showing how both earbuds can be used together or a single earbud can be used independently.

SETUP

Initial Charging

Before first use, fully charge the earbuds and the charging case. Place both earbuds into the charging case and connect the charging case to a power source using a compatible USB cable. The LED indicators on the case will show the charging status.

First-Time Pairing

1. Ensure the earbuds are charged.
2. Open the lid of the charging case. The earbuds will automatically power on and enter pairing mode.
3. On your device (smartphone, tablet, laptop), go to Bluetooth settings and turn Bluetooth on.
4. Search for available devices and select "Pro 60" (or similar name) from the list.
5. Once connected, you will hear a confirmation tone, and the LED indicators on the earbuds may change.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Open the charging case lid, or take the earbuds out of the case. They will power on automatically.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will power off automatically.

Bluetooth Pairing (Re-pairing)

If the earbuds do not connect automatically or you wish to pair with a new device:

1. Ensure Bluetooth is off on other nearby devices.
2. Open the charging case and take out the earbuds.
3. On your new device, search for "Pro 60" in the Bluetooth settings and connect.

Touch Controls

The Pro 60 TWS Earbuds feature intuitive touch controls. The specific functions may vary slightly, but common controls include:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Long press on either earbud during an incoming call.
- **Activate Voice Assistant:** Triple tap on either earbud.
- **Game Mode:** Long press for 2 seconds on the right earbud to toggle Game Mode (low latency).

Binaural and Monaural Modes

- **Binaural Mode:** Both earbuds are connected and used together for stereo sound. This is the default mode when both earbuds are taken out of the case.
- **Monaural Mode:** Use only one earbud (left or right) independently. Simply take out one earbud from the case, and it will connect automatically. The other earbud can remain in the case.

MAINTENANCE

Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure charging contacts on both earbuds and case are clean and free of debris.

Storage

- When not in use, always store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place away from extreme temperatures and direct sunlight.

Battery Care

- Charge the earbuds regularly, even if not used for extended periods, to maintain battery health.
- Avoid fully draining the battery frequently.

TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing/connecting.	<ul style="list-style-type: none"> • Ensure earbuds are charged. • Turn off Bluetooth on other nearby devices. • Forget "Pro 60" from your device's Bluetooth list and re-pair. • Place earbuds back in case, close lid, wait 5 seconds, then open and try again.
Only one earbud working.	<ul style="list-style-type: none"> • Ensure both earbuds are charged. • Place both earbuds back in the charging case, close the lid, then open it again to reset the connection. • Check if you are accidentally in Monaural Mode.
No sound or low volume.	<ul style="list-style-type: none"> • Adjust volume on both your device and the earbuds (if touch controls support volume). • Ensure earbuds are properly seated in your ears. • Check if the audio output on your device is set to "Pro 60".
Charging case not charging.	<ul style="list-style-type: none"> • Try a different USB cable and power adapter. • Ensure the charging port is clean and free of debris.

SPECIFICATIONS

Feature	Detail
Model Name	ME
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth
Noise Control	Active Noise Cancellation
Included Components	Protective Case
Material	Plastic
Specific Uses For Product	Travel, Gaming, Music
Compatible Devices	Smartphones, Tablets, Laptops, Desktops
Water Resistance Level	Waterproof
Control Method	Voice, Touch
Audio Driver Type	Dynamic Driver

Feature	Detail
Special Feature	Fast Charging
Microphone Format	Built-In
Form Factor	In Ear
Ear Placement	In Ear
Impedance	32 Ohm
Manufacturer	MADHUR ENTERPRISE Works
Model Number	MADHUR ENTERPRISE Works 229

WARRANTY AND SUPPORT

This product is manufactured by MADHUR ENTERPRISE Works. For specific warranty information, please refer to the packaging or contact the retailer where the product was purchased. For technical support or inquiries, please reach out to the manufacturer or your point of purchase.

Always ensure you purchase from authorized sellers to guarantee product authenticity and access to support.