

[Manuals.plus](#) /

› [Kircuit](#) /

› Kircuit AC/DC Adapter for Sharper Image Shiatsu Foot+ Massager (Model: 1014713, SKU: 6553276)

Kircuit 1014713

Kircuit AC/DC Adapter for Sharper Image Shiatsu Foot+ Massager (Model: 1014713, SKU: 6553276)

INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your Kircuit AC/DC Adapter, designed for the Sharper Image Shiatsu Foot+ Massager (Model: 1014713, SKU: 6553276). This adapter converts AC power from electrical outlets into the DC power required by your device, allowing you to operate your massager or charge its battery.

The Kircuit adapter is built with a dynamic IC, charger IC, and power fuse for efficient and protected charging, ensuring reliability and stability during operation.

SAFETY INFORMATION

- Ensure the adapter's voltage and current ratings match your device's requirements before connecting.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not attempt to open or repair the adapter yourself. Refer to qualified service personnel.
- Keep the adapter away from children and pets.
- Unplug the adapter from the power outlet when not in use for extended periods.
- Ensure proper ventilation around the adapter during use to prevent overheating.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Kircuit AC/DC Power Adapter
- 2 x Power Cords (one for AC input, one for DC output)



Image: The Kircuit AC/DC power adapter unit shown with its two accompanying power cords. One cord connects the adapter to the wall outlet, and the other connects the adapter to the device.

SETUP

Follow these steps to connect your Kircuit AC/DC Adapter to your Sharper Image Shiatsu Foot+ Massager:

1. **Connect the AC Input Cord:** Take the power cord with the two-prong plug (for wall outlet) and connect its other end to the AC input port on the Kircuit adapter unit.
2. **Connect the DC Output Cord:** Take the power cord with the barrel plug (for your device) and connect its other end to the DC output port on the Kircuit adapter unit.
3. **Plug into Wall Outlet:** Insert the two-prong plug of the AC input cord into a standard electrical wall outlet (100V-240V AC).
4. **Connect to Device:** Insert the barrel plug of the DC output cord into the power input port of your Sharper Image Shiatsu Foot+ Massager.
5. **Verify Connection:** Ensure all connections are secure. The adapter is now ready to power your device.



Image: The Kircuit AC/DC power adapter unit is shown plugged into a wall outlet, with the output cable extending, ready to be connected to the Sharper Image Shiatsu Foot+ Massager.

OPERATING INSTRUCTIONS

Once properly connected as described in the Setup section, the Kircuit AC/DC Adapter will supply power to your Sharper Image Shiatsu Foot+ Massager. The adapter operates automatically when plugged into a live electrical outlet and connected to your device.

- The adapter is designed for continuous power supply to your device.
- If your device has a rechargeable battery, the adapter will also facilitate charging.
- A small indicator light (if present on the adapter) may illuminate to show it is receiving power.

MAINTENANCE

To ensure the longevity and optimal performance of your Kircuit AC/DC Adapter, follow these maintenance guidelines:

- **Cleaning:** Disconnect the adapter from the power outlet and your device before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling the cables to prevent damage.
- **Inspection:** Periodically inspect the adapter and cables for any signs of damage, such as frayed wires, bent pins, or cracks in the casing. If damage is found, discontinue use and replace the adapter.

TROUBLESHOOTING

If you encounter issues with your Kircuit AC/DC Adapter, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Device not powering on/charging.	Adapter not properly connected. No power from outlet. Faulty adapter or device.	Ensure all cables are securely connected. Test the wall outlet with another device. Try a different compatible adapter if available.
Adapter feels hot during use.	Normal operation (slight warmth). Overload or poor ventilation.	A slight warmth is normal. Ensure the adapter is in a well-ventilated area. If it's excessively hot, disconnect immediately and check for damage or compatibility issues.
Flickering power to device.	Loose connection. Damaged cable.	Check all connections for tightness. Inspect cables for visible damage. Replace if cables are damaged.

SPECIFICATIONS

Feature	Detail
Brand	Kircuit
Input Voltage	100-240V AC
Connector Type	Barrel Plug
Compatible Devices	Sharper Image Shiatsu Foot+ Massager (Model: 1014713, SKU: 6553276)
Special Feature	Built-in Dynamic IC, Charger IC & Power fuse for protection
Color	Black
Included Components	2 x Power Cords

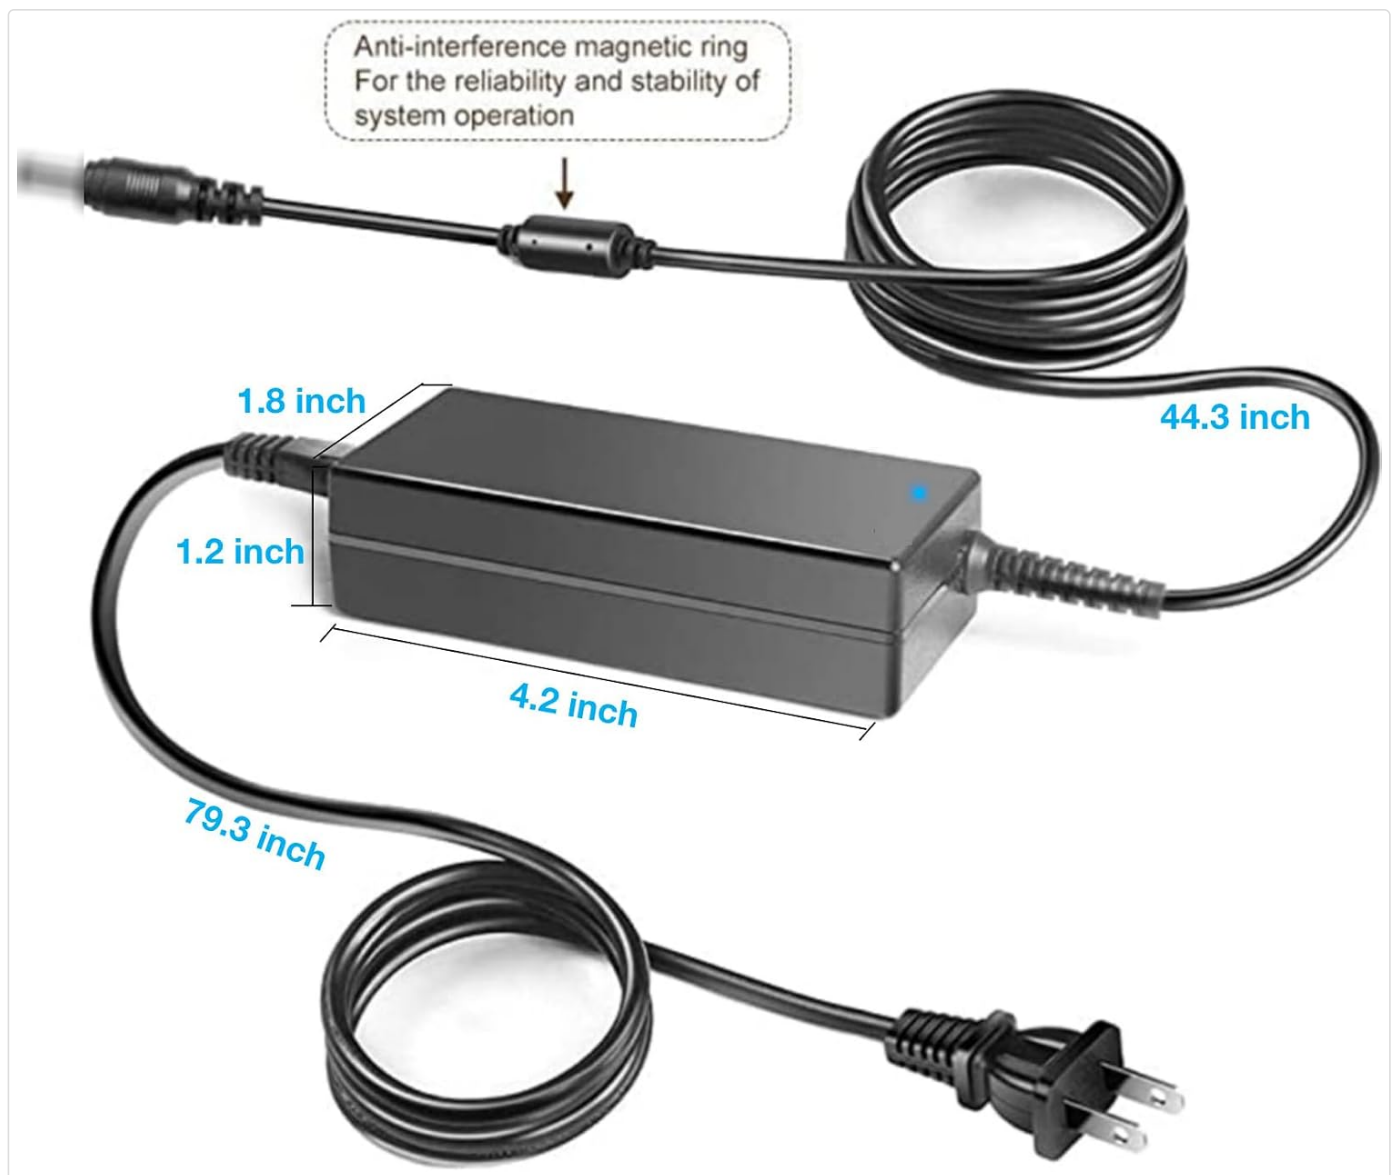


Image: A diagram illustrating the physical dimensions of the Kircuit AC/DC power adapter unit and the lengths of its connected cables, including an anti-interference magnetic ring.

WARRANTY AND SUPPORT

Specific warranty information for this Kircuit AC/DC Adapter is typically provided at the point of purchase or within the product packaging. Please refer to your purchase documentation for details regarding warranty coverage and duration.

For technical support or further assistance, please contact the retailer or manufacturer directly. Ensure you have your product model number (1014713) and purchase details available when seeking support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CTT6RK68>

More documents and user manuals: <https://manuals.plus/>