

[Manuals.plus](#) /

› [Virubi](#) /

› Virubi Boho TV Stand with Rattan Doors & Drawers (Model: B0CTTD2L13) - Instruction Manual

Virubi B0CTTD2L13

Virubi Boho TV Stand with Rattan Doors & Drawers (Model: B0CTTD2L13) - Instruction Manual

For TVs up to 85 inches

INTRODUCTION

Thank you for choosing the Virubi Boho TV Stand. This entertainment center is designed to accommodate TVs up to 85 inches and features natural rattan decorative doors and functional drawers, offering both aesthetic appeal and practical storage. This manual provides essential information for safe assembly, operation, and maintenance of your new TV stand.



Image: The Virubi Boho TV Stand, showcasing its natural wood finish and rattan door details.

SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use.

- Always follow assembly instructions carefully.
- Do not exceed the load limit of the cabinet. The top surface is designed to support TVs up to 85 inches, but always verify the weight of your television against the stand's capacity.
- Keep away from heat sources and sharp objects to prevent damage to the wood and rattan surfaces.
- Always unplug the TV and any other electrical devices before assembly or moving the cabinet.
- Ensure the stand is placed on a level, stable surface to prevent tipping.
- Keep small parts and hardware away from children during assembly to prevent choking hazards.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, please contact customer support.

Component	Quantity
Wood Panels (Top, Bottom, Sides, Shelves, Back)	Varies by design
Rattan Doors	2
Drawers	2
Solid Wood Legs	6
Hardware Pack (screws, dowels, cam locks, hinges, drawer slides, handles)	1 set
Assembly Instructions	1

 
SETUP AND ASSEMBLY

The Virubi Boho TV Stand is designed for straightforward assembly. Detailed instructions with labeled wood parts and numbered screws are provided in the included assembly guide. Please follow these instructions carefully for optimal results.

General Assembly Steps:

- Unpack and Organize:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface (e.g., a blanket or cardboard) to prevent scratches. Identify each part using the labels.
- Assemble the Main Frame:** Follow the numerical sequence in your assembly guide to connect the main panels (top, bottom, sides) using the provided hardware.
- Install Shelves:** Insert the adjustable shelves into the designated slots or secure fixed shelves as per instructions.
- Assemble and Install Drawers:** Construct the drawer boxes and attach the drawer slides. Install the assembled drawers into their respective compartments.
- Attach Doors:** Mount the hinges to the doors and then attach the doors to the main frame. Adjust hinges as needed for proper alignment.
- Install Legs:** Secure the solid wood legs to the bottom of the TV stand. Ensure they are tightened firmly.
- Final Checks:** Verify all connections are secure and the stand is stable.

SIZE: INCH

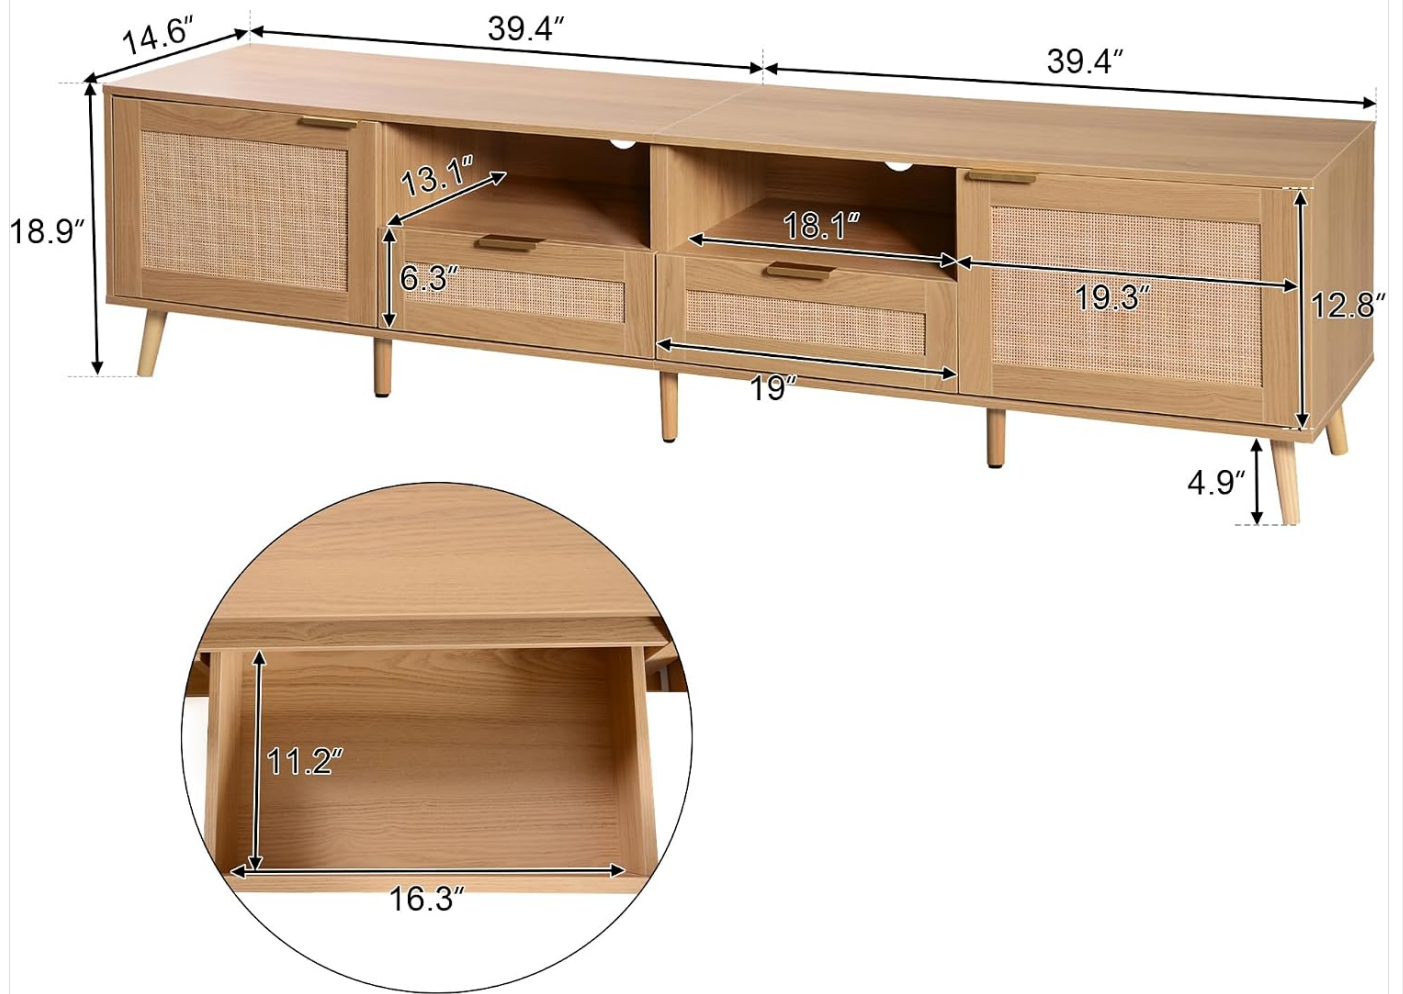

Note: All dimensions are measured manually with a deviation of 1-2 cm.

Image: Detailed dimensions of the Virubi Boho TV Stand, showing overall size and internal compartment measurements.



Hinged doors

open and close without noise

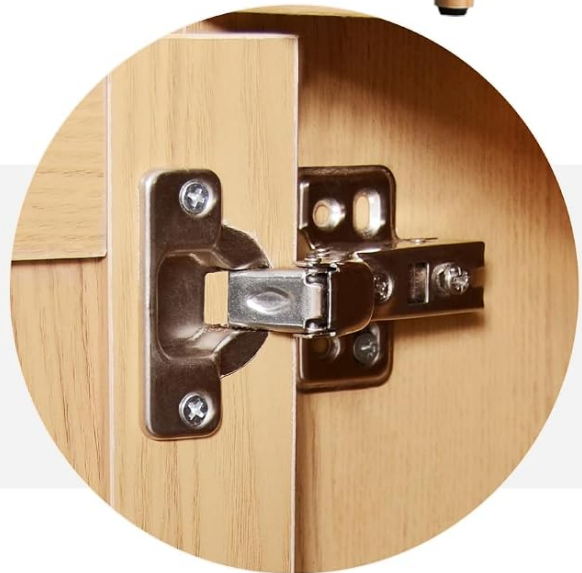 


Image: Close-up view of the hinged doors, demonstrating the hardware for smooth operation.

OPERATING INSTRUCTIONS

The Virubi Boho TV Stand is designed for ease of use and organization.

Using Doors and Drawers:

- The rattan doors and drawers are equipped with smooth-gliding mechanisms. Use the integrated handles to open and close them gently.
- Avoid forcing doors or drawers if they feel stiff. Check for obstructions or misaligned tracks.
- The drawers provide concealed storage for smaller items, while the cabinet sections behind the rattan doors are ideal for larger media components or decorative items.

Cable Management:

- Utilize the integrated cord holes located in the back panel of the open shelves to route cables for your electronic devices. This helps maintain a tidy appearance and prevents cable clutter.
- Ensure cables are not pinched or excessively bent, which can cause damage.

Large storage space

Perfect for placing your TV, electronic devices and decorations.

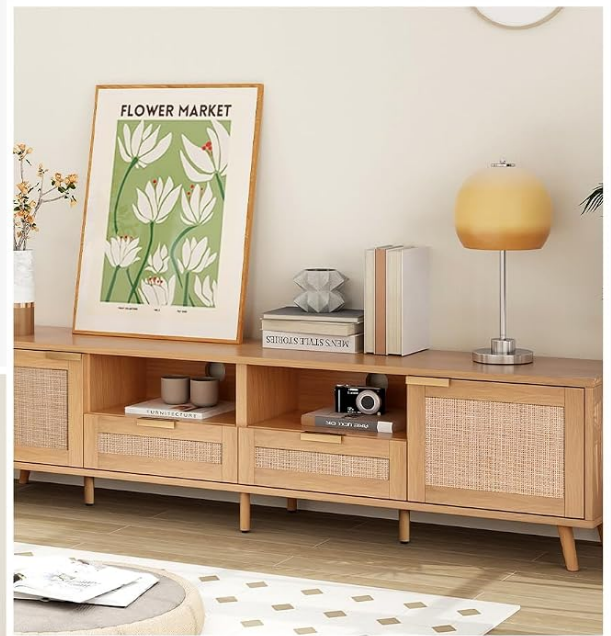 


Image: The TV stand demonstrating its large storage capacity with open shelves, drawers, and cabinet space.



Exquisite drawer handles facilitate opening and closing

Image: Close-up of the exquisite drawer handles and the natural rattan texture on the doors.

Product Feature Demonstration:

Your browser does not support the video tag.

Video: A demonstration of the Virubi TV stand's doors and drawers opening and closing, showcasing the internal storage compartments.

Your browser does not support the video tag.

Video: An overview of the Virubi TV stand, highlighting its neutral color and various storage options for media devices and decorations.

Your browser does not support the video tag.

Video: A detailed look at the Virubi TV stand's design and how it integrates into a living space, emphasizing its functionality and aesthetic appeal.

MAINTENANCE

Proper care will extend the life and appearance of your Virubi TV Stand.

- **Cleaning:** Wipe the surface with a soft, damp cloth. Avoid harsh chemicals, abrasive cleaners, or excessive moisture, which can damage the wood finish and rattan.
- **Rattan Care:** The natural rattan can be gently dusted with a soft brush or vacuum cleaner with a brush attachment. Avoid direct sunlight for prolonged periods to prevent fading or drying out of the rattan.
- **Spills:** Clean spills immediately with a dry cloth to prevent staining.
- **Hardware:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common solutions:

- **Wobbly Stand:** Ensure all leg connections and frame screws are securely tightened. Verify the stand is on a level surface. Use furniture pads if needed to stabilize.
- **Doors Not Aligning:** Adjust the hinges on the doors. Most furniture hinges allow for minor adjustments (up/down, left/right, in/out) using a screwdriver. Refer to your assembly guide for specific hinge adjustment instructions.
- **Drawers Sticking:** Check that the drawer slides are properly aligned and free of obstructions. Ensure the drawer box is assembled correctly and not warped. Lubricate slides with a silicone-based spray if necessary.
- **Damaged Rattan:** For minor fraying, carefully trim loose strands. For significant damage, contact customer support for advice.

SPECIFICATIONS

Feature	Detail
Brand	Virubi
Model Number	B0CTTD2L13
Color	Natural
Size	79 inches (Length)
Overall Dimensions	76.8"L x 15"W x 18.9"H (approximate)
Material Type	Engineered Wood, Wood, Natural Rattan
Style	Boho
Storage	2 Rattan Doors, 2 Drawers, Open Shelves
TV Compatibility	Up to 85 inches
Product Care Instructions	Wipe with Damp Cloth
UPC	196986434721



Image: The Virubi TV Stand integrated into a contemporary living room, showcasing its design and functionality.

WARRANTY INFORMATION

For specific warranty details regarding your Virubi Boho TV Stand, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. Warranty terms typically cover manufacturing defects and material flaws for a specified period from the date of purchase.

CUSTOMER SUPPORT

If you require assistance with assembly, have questions about product features, or need to report missing/damaged parts, please contact the seller or manufacturer directly. Have your model number (B0CTTD2L13) and purchase information ready when contacting support.

For general inquiries, you may also refer to the retailer's customer service portal.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question