

[manuals.plus](#) /› [amazon basics](#) /› [amazon basics X12 16W Bluetooth Soundbar User Manual](#)

## amazon basics X12

# amazon basics X12 16W Bluetooth Soundbar User Manual

Model: ABSBX12

## 1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your amazon basics X12 16W Bluetooth Soundbar. Please read this manual thoroughly before using the product to ensure proper functionality and to prevent damage.

The amazon basics X12 Bluetooth Soundbar delivers superior sound immersion with 16W output and dual 8W drivers, enhanced by 2X bass reflex technology. It features Bluetooth 5.3 for seamless connectivity, a 1200 mAh battery offering up to 10 hours of playback, and multiple input options including AUX, Micro SD, and USB. Its compact and portable design makes it suitable for various environments.

## 2. WHAT'S IN THE Box

Carefully unpack the box and ensure all items are present:

- 1N Soundbar
- 1N Charging Cable
- 1N AUX Cable
- 1N User Manual

## 3. PRODUCT OVERVIEW AND FEATURES

The amazon basics X12 Soundbar is designed for a rich audio experience with versatile connectivity and portability.



Figure 3.1: Front view of the amazon basics X12 Soundbar, showcasing its sleek design and speaker grilles.

### Key Features:

- **Superior Sound Immersion:** Equipped with dual 8W drivers for a total of 16W output, providing crystal-clear sound and dynamic performance.
- **Powerful Bass:** Features 2X bass reflex technology to enhance depth and clarity, delivering resonant bass.



Figure 3.2: Visual representation of the soundbar's 2X bass technology for enhanced audio depth.

- **Longer Playback:** Integrated 1200 mAh Li-ion rechargeable battery offers up to 10 hours of wireless playback.
- **Bluetooth 5.3:** Advanced Bluetooth technology ensures faster pairing, extended range, and enhanced stability for uninterrupted streaming.
- **Wide Compatibility:** Supports multiple connection methods including Bluetooth, 3.5mm AUX, Micro SD cards, and USB flash drives.
- **Easy Controls:** Intuitive controls for managing media playback and adjusting volume levels.
- **Sleek & Portable:** Compact and lightweight design for easy portability and durability.

Your browser does not support the video tag.

Video 3.3: An overview of the amazon basics X12 Soundbar, highlighting its key features and design. This video demonstrates the product's appearance and some functionalities.

## 4. SETUP GUIDE

### 4.1 Initial Charging

Before first use, fully charge the soundbar. Connect the provided charging cable to the DC 5V port on the soundbar and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will

show the charging status.



Figure 4.1: Illustration of the soundbar's 1200 mAh battery, indicating its power source for portable use.

## 4.2 Powering On/Off

Press and hold the Power button (usually marked with a power symbol) for a few seconds to turn the soundbar On or Off. A sound prompt or LED indicator will confirm the status.

# 5. OPERATING INSTRUCTIONS

## 5.1 Control Buttons

The soundbar features intuitive controls for easy operation:

- **Power Button:** Press and hold to turn On/Off. Short press to switch modes (Bluetooth, AUX, USB, Micro SD).
- **Volume Up/Next Track:** Short press for volume up, long press for next track.
- **Volume Down/Previous Track:** Short press for volume down, long press for previous track.
- **Play/Pause:** Press to play or pause audio.

- **Bluetooth Button (BT):** Press to enter Bluetooth pairing mode.

## 6. CONNECTIVITY

The soundbar offers multiple ways to connect your audio devices.



Figure 6.1: Rear view of the soundbar showing the Micro SD card slot, USB port, and AUX input.

### 6.1 Bluetooth Connection (Bluetooth 5.3)

1. Turn on the soundbar. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED.
2. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select "amazon basics X12" from the list.
4. Once paired, the LED indicator will stop flashing, and you will hear a confirmation sound.

### 6.2 AUX Connection

Use the provided 3.5mm AUX cable to connect your audio device to the AUX port on the soundbar. The soundbar will automatically switch to AUX mode, or you can manually select it using the Mode button.

## 6.3 USB Playback

Insert a USB flash drive into the USB port. The soundbar will automatically detect and play audio files from the drive. Use the control buttons to navigate tracks.

## 6.4 Micro SD Card Playback

Insert a Micro SD card into the TF card slot. The soundbar will automatically detect and play audio files from the card. Use the control buttons to navigate tracks.

## 7. CHARGING AND BATTERY

The soundbar is equipped with a 1200 mAh Li-ion rechargeable battery, providing extended playback time.



Figure 7.1: Graphic indicating the soundbar's 10 hours of playtime on a single charge.

### 7.1 Battery Life

A full charge provides up to 10 hours of wireless playback. Actual battery life may vary based on volume level and audio content.

## 7.2 Charging the Soundbar

Connect the soundbar to a power source using the provided charging cable. The LED indicator will show charging status (e.g., red for charging, off when fully charged). Do not use damaged cables or chargers.

## 8. MAINTENANCE

To ensure the longevity and optimal performance of your soundbar, follow these maintenance guidelines:

- Cleaning:** Use a soft, dry cloth to clean the surface of the soundbar. Do not use abrasive cleaners, waxes, or solvents.
- Storage:** Store the soundbar in a cool, dry place away from direct sunlight and extreme temperatures.
- Water Resistance:** This product is **not waterproof**. Avoid exposure to water or high humidity.
- Handling:** Handle the soundbar with care. Avoid dropping it or subjecting it to strong impacts.

## 9. TROUBLESHOOTING

If you encounter issues with your soundbar, refer to the following troubleshooting steps:

Problem	Possible Cause	Solution
No sound	Volume too low; incorrect input mode; device not connected.	Increase volume; switch to correct input mode (Bluetooth, AUX, USB, Micro SD); ensure device is properly connected/paired.
Bluetooth pairing failed	Soundbar not in pairing mode; device too far; interference.	Ensure soundbar is in pairing mode (flashing LED); move device closer; restart both devices.
Poor sound quality	Low battery; source audio quality; interference.	Charge the soundbar; try a different audio source; move away from potential interference sources.
Soundbar not turning on	Battery depleted.	Connect the soundbar to a power source and charge it.

## 10. SPECIFICATIONS

Feature	Detail
Model Name	AB-SB-X12
Speaker Type	Soundbar
Special Feature	Bluetooth
Recommended Uses	For Computers, For Music Players, For Smartphones or Tablets, For Televisions
Compatible Devices	Desktop, Laptop, MP3 Player, Projector, Smartphone
Surround Sound Channel Configuration	2.0

Feature	Detail
Colour	Black
Product Dimensions	6.4D x 38.3W x 6.3H Centimeters
Item Weight	610 Grams
Is Waterproof	False (Not Water Resistant)
Control Method	Touch
Wireless Communication Technology	Bluetooth
Speaker Size	38.3 Centimetres
Power Source	Battery Powered
Tweeter Diameter	1 Inches
Number of Batteries	1 Lithium Ion (included)
Audio Driver Type	Dynamic Driver
Speaker amplification type	Active
Wattage	16 Watts
Battery Average Life	10 Hours
Battery Capacity	1200 mAh
Connectivity Technology	Auxiliary, Bluetooth, USB
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount

## 11. WARRANTY AND SUPPORT

Your Amazon Basics X12 Bluetooth Soundbar comes with a 1-year limited warranty from the date of purchase (accessories not included).



Figure 11.1: Image displaying the 1-year brand warranty for the soundbar.

For warranty claims or technical support, please contact amazon basics customer service. Keep your purchase receipt as proof of purchase.

For further information regarding EMI options, replacement policy, and other details, please refer to the product detail page on [Amazon.in](https://www.amazon.in).