

MasterPro BGMP-9344

MasterPro 6-Liter Air Fryer User Manual

Model: BGMP-9344

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage indicated on the appliance matches your local mains voltage before connecting. Do not immerse the cord, plug, or appliance in water or any other liquid.
- **Placement:** Always place the appliance on a stable, heat-resistant surface, away from walls or other appliances to allow adequate air circulation. Do not place near flammable materials.
- **Hot Surfaces:** Surfaces of the appliance may become hot during use. Use oven mitts when handling hot components. Do not touch hot surfaces directly.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Close supervision is necessary when the appliance is used near children.
- **Ventilation:** Do not block any ventilation openings. Ensure there is sufficient space around the air fryer during operation.
- **Maintenance:** Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool down completely before handling or cleaning.
- **Damage:** Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way. Contact customer support for assistance.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your MasterPro Air Fryer.



Figure 2.1: Front view of the MasterPro Air Fryer, showcasing the LED touch control panel and the handle of the removable basket.



Figure 2.2: The air fryer with its non-stick basket and crisper plate removed, illustrating the internal components for easy cleaning and assembly.

Components:

- Main Unit with Heating Element and Fan
- Removable Non-Stick Basket

- Crisper Plate (inside the basket)
- LED Touch Control Panel
- Power Cord

3. SETUP AND FIRST USE

Unpacking:

1. Carefully remove all packaging materials from the air fryer.
2. Remove any stickers or labels from the appliance.
3. Clean the basket and crisper plate with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
4. Wipe the inside and outside of the appliance with a damp cloth.

Before First Use:

1. Place the air fryer on a stable, level, heat-resistant surface.
2. Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and 10 cm (4 inches) above the appliance.
3. Plug the power cord into a grounded wall outlet.
4. It is recommended to run the air fryer empty for about 10-15 minutes at 200°C (390°F) during the first use to eliminate any manufacturing odors. A slight smell may be present, which is normal and will dissipate.

4. OPERATING INSTRUCTIONS

Control Panel:

The MasterPro Air Fryer features an intuitive LED touch screen for easy operation.

- **Power Button:** Turns the appliance on/off.
- **Temperature Control (+/-):** Adjusts cooking temperature (80°C - 200°C).
- **Time Control (+/-):** Adjusts cooking time.
- **Preheat Button:** Initiates preheating cycle.
- **Start/Pause Button:** Starts or pauses the cooking cycle.
- **Stop/Cancel Button:** Stops the current cooking cycle.
- **Turn Reminder:** Activates a reminder to shake or turn food during cooking.
- **Preset Programs:** Various icons represent common food types (e.g., fries, chicken, fish) with pre-set time and temperature settings.

Cooking Process:

1. Place the crisper plate inside the non-stick basket.
2. Place your ingredients into the air fryer basket. Do not overfill the basket to ensure even cooking.
3. Slide the basket back into the air fryer until it clicks into place.
4. Press the Power Button to turn on the display.
5. **Manual Setting:** Use the Temperature (+/-) and Time (+/-) buttons to set your desired cooking parameters.
6. **Preset Programs:** Select a preset program by touching the corresponding icon. The appliance will automatically set the time and temperature.

7. Press the Start Button to begin cooking.
8. During cooking, you may pull out the basket to shake or turn ingredients. The air fryer will pause automatically and resume when the basket is reinserted.
9. Once the cooking time is complete, the air fryer will beep and automatically shut off.
10. Carefully pull out the basket and empty the cooked food onto a plate. Use tongs or a spatula to remove food, as the basket and food will be hot.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

Cleaning Steps:

1. Always unplug the air fryer and allow it to cool down completely before cleaning.
2. Remove the basket and crisper plate. These parts are non-stick and can be washed with warm soapy water and a soft sponge. For stubborn residue, soak them in warm water for a few minutes.
3. Do not use abrasive cleaning materials or metal scouring pads, as they can damage the non-stick coating.
4. Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water.
5. Clean the interior of the appliance with a non-abrasive sponge and warm soapy water. Ensure no water enters the heating element area.
6. Dry all parts thoroughly before reassembling or storing the appliance.

Storage:

Store the cleaned and dried air fryer in a cool, dry place, away from direct sunlight and moisture.

6. TROUBLESHOOTING

If you encounter any issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; Power outlet not working; Basket not inserted correctly.	Ensure the power cord is securely plugged into a working outlet. Check if the basket is fully pushed in until it clicks.
Food is not cooked evenly.	Basket is overfilled; Temperature or time settings are incorrect; Food not shaken/turned.	Do not overfill the basket. Adjust temperature/time as needed. Shake or turn food halfway through cooking.
White smoke coming from the appliance.	Fat residue from previous use; High-fat ingredients.	Clean the basket and crisper plate thoroughly after each use. For high-fat foods, consider draining excess fat during cooking.
Appliance smells during first use.	Manufacturing residue.	This is normal. Run the air fryer empty at 200°C for 10-15 minutes before first use. The smell will dissipate.

If the problem persists after trying these solutions, please contact MasterPro customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	MasterPro
Model Number	BGMP-9344
Color	Black
Product Dimensions	50 x 50 x 50 cm
Capacity	6 Liters
Power / Wattage	1800 Watts
Voltage	230 Volts
Material	Aluminum Plastic
Special Features	Temperature Control
Item Weight	3 Kilograms
Recommended Uses	Bakes, Roasts, Fries, Dehydrates, Defrosts
First Available Date	March 26, 2024

8. WARRANTY AND SUPPORT

MasterPro products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official MasterPro website.

For technical support, troubleshooting assistance beyond this manual, or spare parts, please contact MasterPro customer service. Have your model number (BGMP-9344) and purchase date ready when contacting support.

Online Support: Visit the official MasterPro website for FAQs and support resources.

Email Support: Refer to your product packaging or warranty card for contact email.

Phone Support: Refer to your product packaging or warranty card for contact number.



[\[pdf\]](#) Catalog

AIR COOKING WORLD 84fce350 6574 414e a650 77285706b74e response content disposition attachment filename* UTF 8 Bergner Europe MP A view publitas 82615 2148190 s AirCooking 2025 ||| AIR COOKING WORLD CATALOGUE 2025 ACOIROKING WORLD MasterPRO s Air Cooking collection transforms e ... GMP-9309 ROCKET DUO 900 BGMP-9178-BK/WH ROCKET 1100 BGMP-9310 iROCKET 500 BGMP-9308 iROCKET 600 **BGMP-9344** iROCKET DUO 900 BGMP-9324 NEW AIR FRYERS ROCKET SURROUND 800 BGMP-9425 ROCKET 1000 BGM... lang:i-klnglon **score:20** filesize: 16.19 M page_count: 91 document date: 2025-03-24



[\[pdf\]](#) User Manual Instructions

AIR COOKING appliances Leave at least 10cm free space on the back and sides above appliance Do not place anything top of HR IMA BGMP 9344 1 webservicefiles bergner api public files c7027e1f 2474 4106 8227 94dbde82af34 ||| AIR COOKING i-ROCKET 800 AIR FRYER FREIDORA DE AIRE FRIGGITRICE AD ARIA FRITEUSE AIR HEISLUFTFRITTEUSE FRITADEIRA A AR Instruction manual Manual de instrucciones Manuale di istruzioni Manuel d instructions Bedienungsanleitung Manual de instrues EN INTRODUCTION This Air Fryer provides an ... lang:en **score:17** filesize: 1.11 M page_count: 41 document date: 2023-08-30