

[Manuals.plus](#) /

› [Hamilton Beach](#) /

› Hamilton Beach Classic Stand and Hand Mixer (64654) & Electric Automatic Can Opener User Manual

Hamilton Beach 64654

Hamilton Beach Classic Stand and Hand Mixer (64654) & Electric Automatic Can Opener User Manual

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Hamilton Beach Classic Stand and Hand Mixer (Model 64654) and Hamilton Beach Electric Automatic Can Opener. Please read all instructions thoroughly before first use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.

HAMILTON BEACH CLASSIC STAND AND HAND MIXER (MODEL 64654)

Components

Familiarize yourself with the parts of your mixer before use.



Figure 1: The Hamilton Beach Classic Stand and Hand Mixer, shown with the 4-quart stainless steel bowl, two traditional beaters, two dough hooks, and a whisk attachment. The mixer features a red and stainless steel finish.

- **Mixer Head:** Contains the motor and attachment ports.
- **Stand Base:** Provides stability and holds the mixing bowl.
- **4-Quart Stainless Steel Bowl:** For mixing ingredients.
- **Traditional Beaters (2):** For general mixing, creaming, and beating.
- **Dough Hooks (2):** For kneading bread and pizza dough.
- **Whisk:** For whipping eggs, cream, and light batters.
- **Speed Control Dial:** Adjusts mixing speed (6 speeds).
- **QuickBurst Button:** Provides a momentary burst of power.
- **Bowl Rest Feature:** Allows the mixer to rest on the bowl rim.

- **Shift & Stir™ Lever:** Moves the bowl side-to-side for thorough mixing.
- **Hand Mixer Release Button:** Detaches the mixer head from the stand.

Setup and Assembly

1. **Unpacking:** Remove all packaging materials and labels. Clean all removable parts before first use (refer to 'Care & Cleaning').
2. **Placing the Bowl:** Place the 4-quart stainless steel bowl onto the stand base, ensuring it is seated securely.
3. **Attaching Beaters/Dough Hooks/Whisk:** Insert the desired attachments into the openings on the mixer head. Push firmly and twist slightly until they click into place. Ensure both beaters (if applicable) are inserted correctly.
4. **Lowering the Mixer Head:** If the mixer head is raised, gently push it down until it locks into position over the bowl.

Operation

2 products in 1



Hand mixer easily unlocks from the stand mixer base for quick mixing jobs

Figure 2: The Hamilton Beach mixer demonstrating its dual functionality. On the left, it operates as a stand mixer, mixing cookie dough in the stainless steel bowl. On the right, the mixer head is detached and used as a hand mixer to whip cream in a separate glass bowl.

Using as a Stand Mixer

1. Ensure the mixer is unplugged before attaching or removing accessories.
2. Place ingredients into the stainless steel bowl.
3. Plug the mixer into a standard electrical outlet.
4. Turn the Speed Control Dial to the desired speed (1-6). Start at a lower speed to prevent splashing, then increase as needed.
5. For thorough mixing, use the **Shift & Stir™ Lever** to move the bowl from side-to-side during operation.
6. Press the **QuickBurst Button** for a momentary increase in power at any speed setting.
7. When finished, turn the Speed Control Dial to 'OFF' and unplug the mixer.

Using as a Hand Mixer

1. Ensure the mixer is unplugged.
2. Press the **Hand Mixer Release Button** to detach the mixer head from the stand base.
3. Insert the desired attachments into the hand mixer.
4. Plug the hand mixer into a standard electrical outlet.
5. Hold the hand mixer firmly and immerse the attachments into your ingredients.
6. Turn the Speed Control Dial to the desired speed.
7. When finished, turn the Speed Control Dial to 'OFF' and unplug the hand mixer.

Care and Cleaning

- Always unplug the mixer before cleaning.
- **Attachments and Bowl:** The traditional beaters, dough hooks, whisk, and stainless steel bowl are dishwasher safe for easy cleaning. Alternatively, wash in warm, soapy water, rinse, and dry thoroughly.
- **Mixer Head and Stand Base:** Wipe the exterior of the mixer head and stand base with a damp cloth. Do not immerse the mixer head or stand base in water or other liquids.
- Ensure all parts are completely dry before storing.

HAMILTON BEACH ELECTRIC AUTOMATIC CAN OPENER

Components

Identify the parts of your can opener for proper use.





Figure 3: The Hamilton Beach Electric Automatic Can Opener, featuring a sleek red design with chrome accents. It includes a cutting assembly, bottle opener, and knife sharpener.

- **Cutting Assembly:** The mechanism that pierces and cuts the can lid. This unit is removable.
- **Lever:** Engages the cutting assembly with the can.

- **Bottle Opener:** Integrated feature for opening bottles.
- **Knife Sharpener:** Located on the back of the unit for sharpening non-serrated knives.
- **Cord Storage:** Area for neatly storing the power cord.

Setup and Placement

1. **Unpacking:** Remove all packaging materials and labels.
2. **Placement:** Place the can opener on a flat, stable surface near an electrical outlet.
3. **Cord Management:** Unwind the power cord from the cord storage area as needed and plug it into a standard electrical outlet.

Operation

**Opens cans the
first time, every time**
With SureCut™ technology



Figure 4: The Hamilton Beach Electric Automatic Can Opener in action, demonstrating its SureCut technology as it securely grips and opens a standard food can. The extra-tall design accommodates various can sizes.

Opening Cans

This can opener features **SureCut™ technology** for reliable can opening and an extra-tall design to accommodate

various can sizes.

1. Ensure the can opener is plugged in.
2. Lift the lever.
3. Position the can so that the rim is under the guide and the cutting blade is inside the rim.
4. Press the lever down firmly to pierce the can lid. The can opener will automatically start cutting.
5. Hold the can lightly until the cutting action is complete. The can opener will automatically shut off once the can is fully opened.
6. Lift the lever to release the can. The lid may remain attached to the magnet. Carefully remove the lid.

Using the Bottle Opener

Locate the bottle opener feature, typically on the side or front of the unit. Place the bottle cap under the opener and lift the bottle to remove the cap.

Using the Knife Sharpener

The knife sharpener is located on the back of the can opener. Hold a clean, non-serrated knife with the blade facing away from you. Insert the blade into the sharpening slot and pull it towards you with light, even pressure. Repeat several times, alternating sides if desired, until the blade is sharp. Always exercise caution when sharpening knives.

Care and Cleaning

- Always unplug the can opener before cleaning.
- **Removable Cutting Unit:** The entire cutting assembly is easily removed for cleaning. Simply pull it away from the main unit. It is dishwasher safe. Alternatively, wash in warm, soapy water, rinse, and dry thoroughly.
- **Main Unit:** Wipe the exterior of the can opener with a damp cloth. Do not immerse the main unit in water or other liquids.
- Ensure all parts are completely dry before reassembling and storing.

TROUBLESHOOTING

If you encounter issues with your Hamilton Beach appliances, refer to the following common solutions:

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet not working.	Ensure the mixer is securely plugged into a working outlet. Test the outlet with another appliance.
Mixer attachments are difficult to insert/remove.	Attachments not aligned correctly; food residue.	Ensure attachments are aligned with the slots. Clean any residue from the attachment shafts or mixer ports.
Can opener does not cut.	Can not positioned correctly; cutting blade dull or dirty.	Ensure the can rim is properly engaged with the guide and blade. Clean the cutting unit. If the blade is dull, contact customer support for service.
Can opener stops mid-cut.	Power interruption; can jammed.	Check power connection. Remove the can, clear any debris, and re-position the can carefully.

If the problem persists after attempting these solutions, please contact Hamilton Beach Customer Support.

SPECIFICATIONS

Hamilton Beach Classic Stand and Hand Mixer (Model 64654)

Feature	Detail
Model Number	64654
Capacity	4 Quarts
Wattage	290 Watts Peak Power
Speeds	6 Speeds with QuickBurst
Controls Type	Knob
Material	Stainless Steel
Dishwasher Safe Parts	Attachments and Bowl

Hamilton Beach Electric Automatic Can Opener

Feature	Detail
Technology	SureCut™
Design	Extra-Tall
Special Features	Automatic Shutoff, Bottle Opener, Knife Sharpener, Cord Storage
Dishwasher Safe Parts	Removable Cutting Unit

WARRANTY INFORMATION

Hamilton Beach products are manufactured to the highest quality standards. For specific warranty details regarding your product, please refer to the warranty card included with your purchase or visit the official Hamilton Beach website. Typically, a limited warranty covers defects in material and workmanship for a specified period from the date of purchase.

CUSTOMER SUPPORT

For technical assistance, replacement parts, or general inquiries, please contact Hamilton Beach Customer Service:

- **Website:** www.hamiltonbeach.com
- **Phone:** Refer to the contact information on the Hamilton Beach website or your product packaging for the most current phone numbers.

When contacting support, please have your product model number (64654 for the mixer) and purchase date available.

