

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Ant Esports](#) /
- › [Ant Esports GP320 Wireless Gamepad User Manual](#)

Ant Esports GP320

Ant Esports GP320 Wireless Gamepad User Manual

Model: GP320

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Ant Esports GP320 Wireless Gamepad. Please read this manual thoroughly before using the product to ensure proper functionality and to maximize your gaming experience. The GP320 offers multi-platform compatibility, including Android, Windows PC, iOS, Nintendo Switch, PS4, and PS3.

PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- Ant Esports GP320 Wireless Gamepad
- USB Type-A to Type-C Charging Cable (3 meters)
- Mobile Phone Holder Clamp
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your gamepad.



Image: Front view of the Ant Esports GP320 Wireless Gamepad with a smartphone mounted in the holder, displaying a racing game. This illustrates the gamepad's design and its use with mobile devices.



Image: Detailed view of the Ant Esports GP320 Wireless Gamepad, highlighting its various buttons and joysticks. This image helps users identify each control element.

BACK BUTTONS DESIGNED

You can record 2 group combine buttons | Max 18 buttons for MR & ML



Image: Rear view of the Ant Esports GP320 Wireless Gamepad, showing the programmable ML and MR back buttons. This image helps users locate and understand these additional controls.

SETUP AND CONNECTIVITY

Charging the Gamepad

Connect the supplied USB Type-A to Type-C cable to the gamepad's charging port and a compatible USB power source (e.g., computer USB port, USB wall adapter). The LED indicators will show charging status. A full charge typically takes approximately 2-3 hours.

Powering On/Off

- **Power On:** Press and hold the **Home** button for 3 seconds.
- **Power Off:** Press and hold the **Home** button for 5 seconds until the indicator lights turn off.

Pairing Modes

The GP320 supports various connection modes. Select the appropriate mode for your device:

- **Android Mode:**

- Press and hold **Home + X** buttons simultaneously until the 3rd LED indicator blinks.
- On your Android device, go to Bluetooth settings and select "GP320" to pair.
- Supports HID mode games.

- **iOS Mode:**

- Press and hold **Home + B** buttons simultaneously until the 4th LED indicator blinks rapidly.
- On your iOS device, go to Bluetooth settings and select "DUALSHOCK4" (this is the expected name for iOS pairing) to pair.
- Supports MFi (Made For iPhone/iPad) compatible games.

- **Windows PC (X-Input Mode):**

- **Wireless Connection:** Press and hold **Home + R1** buttons simultaneously until the first 3 LED indicators blink. On your PC, go to Bluetooth settings and select "Xbox Wireless Controller" to pair.
- **Wired Connection:** Connect the gamepad to your PC using the USB Type-C cable. The gamepad will automatically be recognized as an Xbox 360 controller. The first 3 LEDs will be solid.
- Supports Steam and most PC games.



Image: The Ant Esports GP320 Wireless Gamepad positioned next to a laptop, illustrating its compatibility with Windows

PC systems via both wired and wireless connections.

- **Nintendo Switch Mode:**

- Press and hold **Home + L1** buttons simultaneously until all 4 LED indicators blink.
- On your Nintendo Switch, navigate to "Controllers" -> "Change Grip/Order" and select the gamepad. It will appear as "Pro Controller".



Image: The Ant Esports GP320 Wireless Gamepad displayed alongside Nintendo Switch and Switch Lite consoles, demonstrating its compatibility with Nintendo's gaming systems.

- **PS3/PS4 Mode:**

- **Initial Setup (Wired):** Connect the gamepad to your PS3 or PS4 console using the USB Type-C cable.
- **Wireless Pairing:** After initial wired connection, press the **Home** button until the 4th LED lights up to pair wirelessly.



PS3 PS4 COMPATIBLE

Support PS3 PS4 console | Wireless connection

Image: The Ant Esports GP320 Wireless Gamepad shown with PlayStation 3 and PlayStation 4 consoles, indicating its support for these gaming platforms.

- **KeyConfig Mode (Android Only):**
 - Press and hold **Home + X** buttons.
 - Use the "Shooting Plus V3" application to configure key mapping for Android games.

OPERATING INSTRUCTIONS

Basic Controls

The gamepad features standard controls including dual analog sticks, a D-pad, action buttons (A, B, X, Y), shoulder buttons (L1, R1), and triggers (L2, R2). Refer to the Product Overview section for button identification.

Turbo Function

The Turbo function allows a button to be repeatedly pressed automatically while held down.

- **Activate Turbo:** Press the desired button (e.g., A) and then press the **Turbo** button. The button will now

have turbo functionality.

- **Adjust Turbo Speed:** While a button has turbo enabled, press the **Turbo** button and use the D-pad (Up/Down) to cycle through different turbo speeds.
- **Deactivate Turbo:** Press the desired button and then press the **Turbo** button again.

Programmable Macro Buttons (ML & MR)

The ML and MR buttons on the back of the gamepad can be programmed to record a sequence of up to 18 button presses.

- **Record Macro:** Press the **Macro Setter** button (located on the back) followed by either the **ML** or **MR** button. The gamepad will enter recording mode.
- Perform the desired sequence of button presses (up to 18 actions).
- Press the **Macro Setter** button again to save the macro.
- **Execute Macro:** Press the programmed **ML** or **MR** button to execute the recorded sequence.

COMPATIBILITY

The Ant Esports GP320 Wireless Gamepad is designed for broad compatibility:

- **Operating Systems:** iOS 13.0+, Android 6.0+, Windows 7.0+/8/10/11, Mac OS
- **Gaming Consoles:** Nintendo Switch (Pro & OLED versions), PlayStation 4, PlayStation 3
- **Mobile Devices:** Supports mobile phones and Nintendo Switch consoles with widths between 5-7 inches (127-180mm) using the included holder.



Image: A banner showcasing the Ant Esports GP320 Wireless Gamepad's compatibility with various platforms, including PS4, Android, Windows, Switch, and iOS.

SPECIFICATIONS

Model	GP320
Connectivity	Bluetooth 5.0, Wired (USB Type-C)

Compatibility	Android (6.0+), iOS (13.0+), Windows (7.0+), Mac OS, Nintendo Switch, PS4, PS3
Special Features	Six-axis gyroscope, Vibration motors, Turbo function, Programmable back buttons (ML/MR)
Mobile Holder Support	5-7 inch (127-180mm) mobile phones and Nintendo Switch
Dimensions (LxWxH)	16 x 11 x 5.5 cm
Weight	166 g
Country of Origin	China

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the gamepad. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the gamepad in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the gamepad frequently. Charge it regularly, even if not in use for extended periods.
- **Avoid Drops:** Protect the gamepad from drops and impacts, which can damage internal components.

TROUBLESHOOTING

Problem	Solution
Gamepad does not power on.	Ensure the gamepad is charged. Connect it to a power source using the USB Type-C cable.
Cannot pair with device.	<ul style="list-style-type: none"> • Ensure the correct pairing mode is activated (e.g., Home + X for Android). • Make sure Bluetooth is enabled on your device. • Delete previous pairings from your device's Bluetooth list and try pairing again. • Restart both the gamepad and your device.
Gamepad disconnects frequently.	<ul style="list-style-type: none"> • Ensure the gamepad is fully charged. • Reduce the distance between the gamepad and the connected device. • Minimize interference from other wireless devices. • For PC, try a wired connection if wireless is unstable.

Buttons or joysticks are unresponsive.

- Restart the gamepad.
- Ensure the gamepad is properly paired and connected.
- Test the gamepad with another compatible device or game to isolate the issue.

WARRANTY AND SUPPORT

Ant Esports products are designed for reliability and performance. For warranty information and technical support, please refer to the official Ant Esports website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

Note: A review mentioned issues with customer support regarding missing accessories. While this manual cannot guarantee specific support outcomes, it is recommended to contact the seller or manufacturer directly for any product-related concerns.