

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Outsunny](#) /

› [Outsunny Wooden Garden Bench Instruction Manual](#)

Outsunny 84G-216V00BK

Outsunny Wooden Garden Bench Instruction Manual

Model: 84G-216V00BK

1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, safe operation, and proper maintenance of your Outsunny Wooden Garden Bench. Please read this manual thoroughly before assembly and use to ensure correct installation and to maximize the lifespan of your product.

The Outsunny Wooden Garden Bench is designed for comfortable outdoor seating, featuring a durable slatted design and solid poplar wood construction with a weather-safe varnish. It is suitable for various outdoor settings such as porches, patios, balconies, and gardens.



Image 1.1: Outsunny Wooden Garden Bench in an outdoor setting.

2. SAFETY INFORMATION

- **Weight Capacity:** Do not exceed the maximum weight capacity of 550 lbs (approximately 250 kg). Overloading the bench can lead to structural failure and injury.
- **Assembly:** Assemble the bench strictly according to the instructions provided. Ensure all fasteners are securely tightened before initial use.
- **Placement:** Always place the bench on a stable, level surface to prevent tipping or instability.
- **Children:** Supervise children when they are near or using the bench to prevent accidents.
- **Inspection:** Periodically inspect the bench for any loose parts, damage, or wear. Do not use the bench if it is damaged.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components and hardware are present and undamaged. If any parts are missing or damaged, please contact customer support before proceeding.



Image 3.1: The product is shipped in one package.

The package typically includes:

- Wooden seat slats
- Leg frames
- Connecting hardware (screws, bolts, washers, nuts)
- Assembly tool (e.g., Allen wrench)
- Instruction manual

4. SETUP AND ASSEMBLY

Assembly of the Outsunny Wooden Garden Bench is designed to be straightforward. It is recommended to have a second person assist with assembly for ease and safety. Ensure you have a clear, flat workspace.

Required Tools (Not Included):

- Phillips head screwdriver (if not included)
- Rubber mallet (optional, for gentle tapping)

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a soft, clean surface to prevent scratches. Identify each part by comparing it with the parts list in the manual.
2. **Attach Leg Frames:** Secure the leg frames to the main seat structure using the provided bolts and washers. Do not fully tighten the bolts at this stage.
3. **Connect Crossbars (if applicable):** If your model includes crossbars between the leg frames, attach them now. Again, hand-tighten only.
4. **Align and Secure Seat Slats:** Position the seat slats onto the frame. Ensure all pre-drilled holes align correctly. **Important:** Do not force any parts. If alignment issues occur, re-check the orientation of the leg frames and slats.
5. **Final Tightening:** Once all parts are correctly aligned and loosely assembled, gradually tighten all bolts

and screws using the provided tool or a screwdriver. Ensure all connections are firm and secure.

6. **Stability Check:** Gently rock the assembled bench to check for stability. If any wobbling occurs, re-tighten all fasteners.

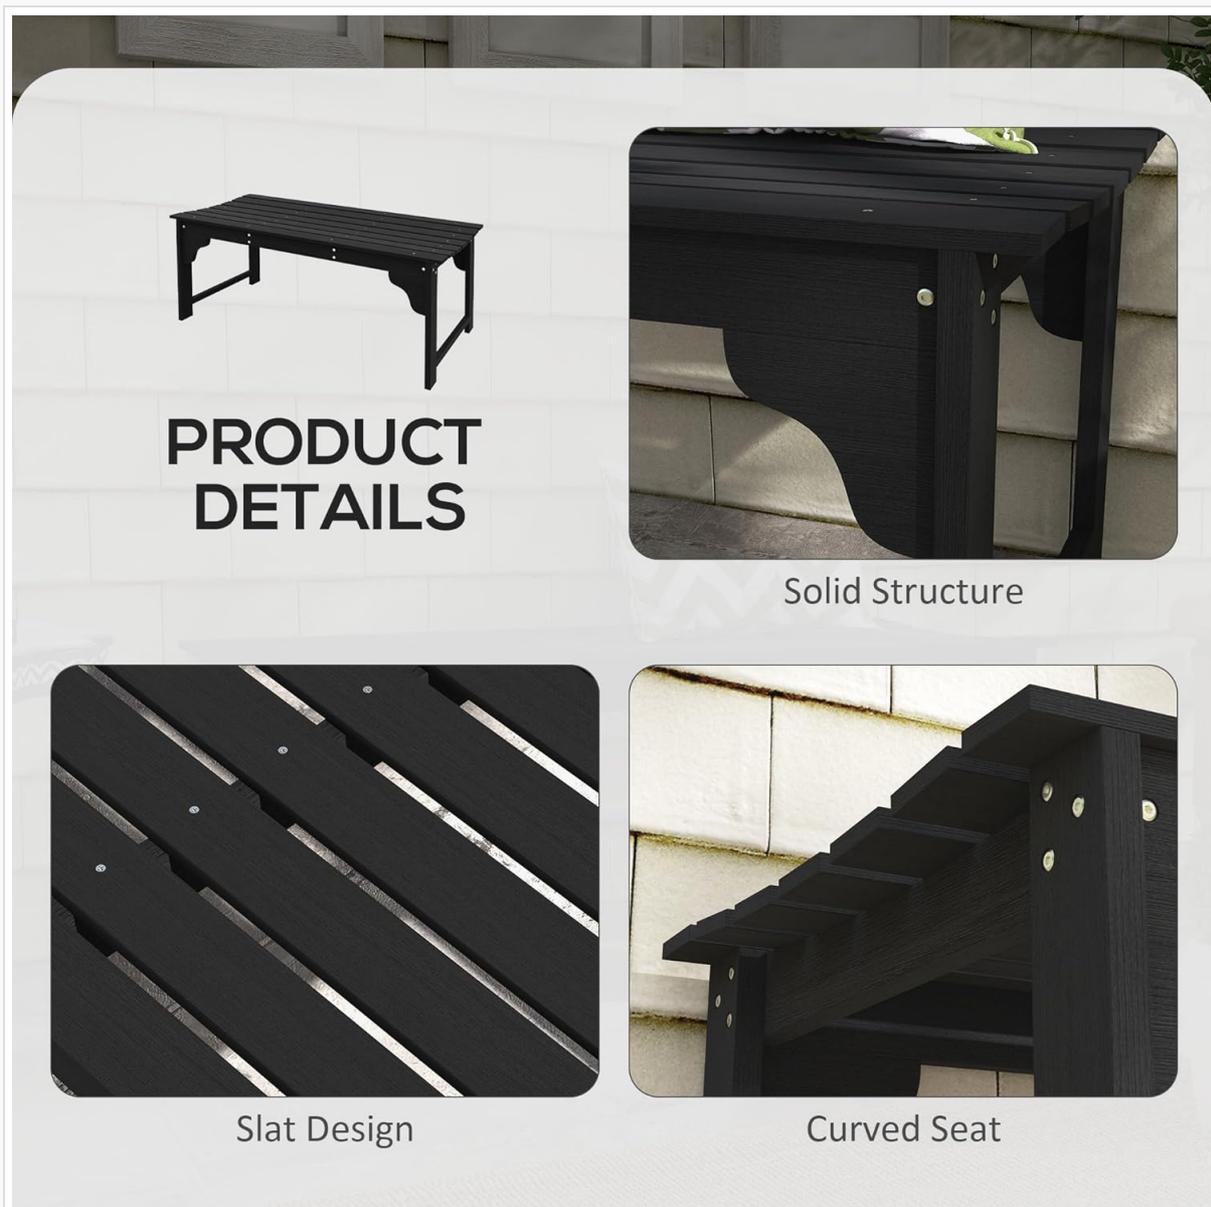


Image 4.1: Product details highlighting solid structure, slat design, and curved seat.

5. OPERATING INSTRUCTIONS

The Outsunny Wooden Garden Bench is designed for simple and comfortable outdoor seating.

- **Intended Use:** This bench is intended for seating purposes only. Do not stand on the bench or use it as a step stool.
- **Seating Capacity:** The bench is designed to comfortably seat two individuals. Adhere to the maximum weight capacity of 550 lbs.
- **Placement:** Position the bench on a flat, stable, and non-slippery surface. Avoid placing it on uneven ground or slopes.
- **Movement:** When moving the bench, lift it rather than dragging it to prevent damage to the legs or frame.

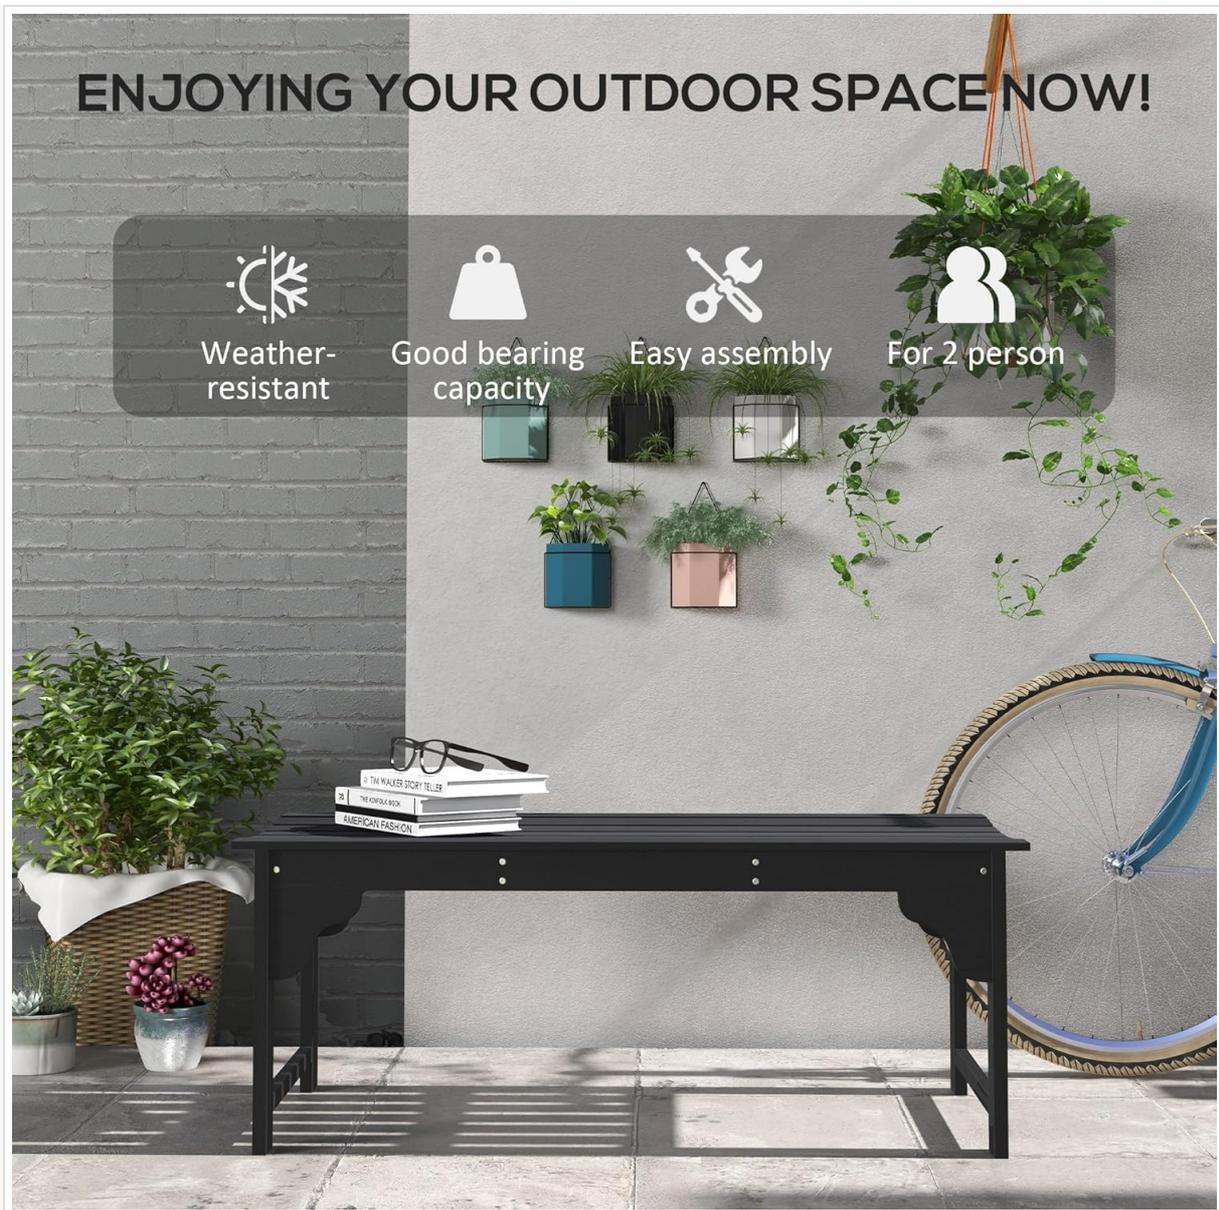


Image 5.1: Key features of the Outsunny Wooden Garden Bench.

6. MAINTENANCE

Proper care and maintenance will extend the life and appearance of your wooden garden bench.

- **Cleaning:** Wipe the bench regularly with a soft, damp cloth to remove dust, dirt, and debris. For stubborn stains, use a mild soap solution and rinse thoroughly with clean water. Dry immediately with a clean cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the wood finish.
- **Weather Protection:** Although the bench features a water-safe varnish, prolonged exposure to extreme weather conditions (heavy rain, direct sunlight, snow, frost) can affect its durability. Consider covering the bench with a protective cover or storing it indoors during harsh weather seasons.
- **Fastener Check:** Periodically check all screws and bolts for tightness. Re-tighten them as needed to maintain structural integrity.
- **Wood Treatment:** To maintain the wood's appearance and protection, consider applying a suitable outdoor wood sealant or varnish annually, especially if the bench is exposed to the elements year-round.

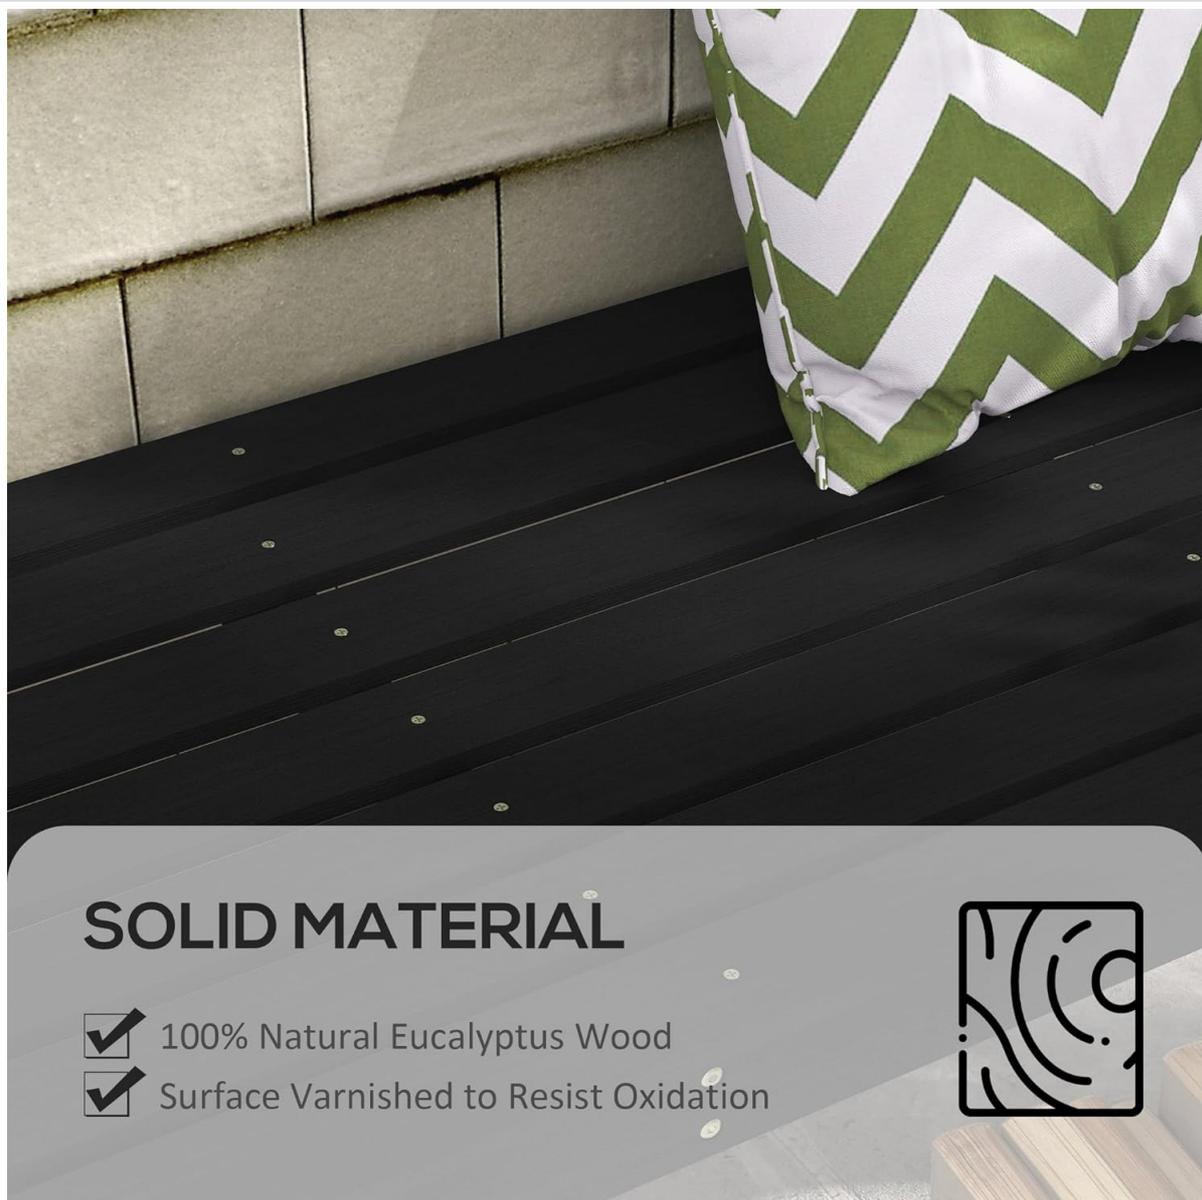


Image 6.1: Close-up of the slatted wooden seat, designed to prevent water build-up.

7. TROUBLESHOOTING

Issue	Possible Cause	Solution
Parts do not align during assembly.	Incorrect orientation of components; mislabeled parts.	Carefully review the assembly diagrams. Ensure components are oriented correctly. Do not force parts. If parts appear mislabeled or incorrect, contact customer support.
Bench feels unstable or wobbly after assembly.	Fasteners are not fully tightened; uneven placement surface.	Check that all screws and bolts are fully tightened. Ensure the bench is placed on a flat, level surface.
Wood slats show signs of splitting or cracking.	Exposure to extreme weather; excessive weight on specific slats; lack of maintenance.	Ensure the bench is not exposed to excessive moisture or extreme temperature fluctuations. Apply a wood sealant or varnish periodically. Avoid placing heavy, concentrated loads on individual slats.

Issue	Possible Cause	Solution
Discoloration or fading of wood finish.	Prolonged exposure to direct sunlight.	Consider placing the bench in a shaded area or using a UV-protective cover when not in use. Reapply wood varnish as part of regular maintenance.

8. SPECIFICATIONS

Feature	Detail
Model Number	84G-216V00BK
Product Dimensions (L x W x H)	45.25" x 19.75" x 17.75" (114.9 cm x 50.2 cm x 45.1 cm)
Seat Height	17.75" (45.1 cm)
Material	Poplar Wood
Color	Black
Weight Capacity	550 lbs (250 kg)
Item Weight	13.2 lbs (6 kg)
Manufacturer	Aosom LLC



Image 8.1: Dimensions of the Outsunny Wooden Garden Bench.

9. WARRANTY AND SUPPORT

For assistance with assembly, missing parts, product defects, or any other inquiries, please contact Outsunny customer support or the retailer from whom you purchased the product.

Please retain your purchase receipt as proof of purchase for any warranty claims or support requests.

Specific warranty terms and conditions may vary by retailer and region.

Manufacturer: Aosom LLC

© 2024 Outsunny. All rights reserved.