

ROBOTIME WCF23

ROBOTIME Wooden Play Kitchen Set Instruction Manual

This manual provides detailed instructions for the assembly, operation, and maintenance of your ROBOTIME Wooden Play Kitchen Set. Designed for imaginative play, this set offers a realistic and engaging experience for children aged 3 and up.

PRODUCT OVERVIEW

The ROBOTIME Wooden Play Kitchen Set is a meticulously crafted toy designed to foster imaginative play and develop various skills in young children. It features a realistic design with interactive elements, providing an immersive cooking experience.



Image: The complete ROBOTIME Wooden Play Kitchen Set, showcasing its various components and pink color scheme.

- **Enchanting Childhood Adventures:** This wooden kitchen toy serves as a gateway for children to explore, learn, and create lasting memories.
- **Realistic Interactive Design:** Features a pretend dishwasher, microwave, stove top, and clicking knobs for engaging playtime.
- **Versatile Placement and Storage:** Compact and freestanding design allows for easy integration into various play spaces, with built-in shelving for convenient storage.
- **Endless Education and Joy:** Recommended for kids & toddlers aged 3-8, promoting hand-eye coordination, imagination, creativity, social skills, and parent-child interaction.

WHAT'S IN THE BOX

The ROBOTIME Wooden Play Kitchen Set comes with the main kitchen body and a variety of accessories to enhance the play experience. Please verify all items are present upon unboxing.

RICH KITCHEN ACCESSORIES



X1



X1



X2



X2



X1



X1



X1



X1



X1



X1

Image: A detailed view of the 17 included accessories, such as a frying pan, pot, plates, bowls, mug, wooden utensils, milk bottles, a teapot, and salt and pepper shakers.

- Play kitchen body
- 17 pcs Accessories, including:
 - Frying Pan (x1)
 - Pot (x1)
 - Plates (x2)
 - Bowls (x2)
 - Mug (x1)
 - Wooden Utensils (x3)
 - Milk Bottles (x3)
 - Teapot (x1)
 - Salt Shaker (x1)
 - Pepper Shaker (x1)

SETUP AND ASSEMBLY

Assembly of the ROBOTIME Wooden Play Kitchen Set requires careful attention to the provided instructions. It is recommended to set aside sufficient time for assembly and to organize all parts before beginning.

For detailed, step-by-step assembly instructions, please refer to the official Installation Manual (PDF) available for download: [Download Installation Manual](#).

Ensure all screws and fasteners are securely tightened to maintain the stability and safety of the play kitchen. Do not overtighten to avoid damaging the wood.



Image: Detail of the natural wood construction, emphasizing the quality and safe design of the countertop.

 
OPERATING INSTRUCTIONS

The ROBOTIME Play Kitchen is designed for interactive and imaginative play. Below are instructions for using its various features:

- **Stove Top and Knobs:** The stove top features realistic graphics. The knobs produce a satisfying clicking sound when turned, simulating real appliance operation.

CHEF'S MUSICAL PLAYGROUND

Dishwasher



Click-
Sounds Knobs



Image: Close-up of the stove knobs and dishwasher, demonstrating interactive features.

- **Sink and Faucet:** The sink area includes a faucet for pretend washing of fruits, vegetables, and dishes.

REALISTIC PLAY KITCHEN

Washing Vegetables



Cooking



Image: Demonstrating the pretend washing and cooking functions of the play kitchen.

- **Microwave:** The microwave door opens and closes, allowing children to simulate heating food. The keypad is for imaginative play.
- **Dishwasher:** The dishwasher features a clear door and an internal spinner, mimicking a real dishwasher cycle.
- **Storage Cabinets:** Utilize the built-in shelving and cabinets to store play food and accessories, promoting organization.

For a visual demonstration of the play kitchen's features, please refer to the official product videos available on the product's Amazon page.

MAINTENANCE AND CARE

Proper care will ensure the longevity of your ROBOTIME Wooden Play Kitchen Set:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the wood finish.
- **Drying:** Ensure the play kitchen is thoroughly dried after cleaning to prevent moisture damage.
- **Storage:** Store the play kitchen in a dry environment, away from direct sunlight or extreme temperature changes, which can cause warping or cracking of the wood.

- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary, but do not overtighten.

TROUBLESHOOTING

If you encounter any issues with your ROBOTIME Wooden Play Kitchen Set, consider the following common solutions:

Problem	Possible Cause	Solution
Loose parts or wobbling structure	Screws have loosened over time.	Carefully inspect all connections and tighten any loose screws. Avoid overtightening.
Doors or drawers not closing properly	Misalignment during assembly or wear on hinges.	Check hinge alignment and re-adjust if possible. Ensure no foreign objects are obstructing closure.
Clicking knobs not functioning	Internal mechanism dislodged or worn.	Ensure the knob is securely attached. If the issue persists, contact customer support.

If the problem persists after attempting these solutions, please contact ROBOTIME customer support for further assistance.

SPECIFICATIONS

Key specifications for the ROBOTIME Wooden Play Kitchen Set (Model: WCF23):



Image: Dimensional overview of the play kitchen, indicating its overall size.

- **Product Dimensions:** 29.7 x 13.8 x 38.6 inches (Length x Width x Height)
- **Item Weight:** 28.7 pounds
- **Model Number:** WCF23
- **Recommended Age:** 3 years and up
- **Manufacturer:** ROBOTIME
- **ASIN:** B0CTY2LPNN
- **Color:** Pink

SAFETY INFORMATION

Please adhere to the following safety guidelines to ensure a safe play environment:

- This product is intended for children aged 3 years and up.
- Adult supervision is recommended during play.
- Regularly inspect the play kitchen for any loose parts, sharp edges, or damage. Discontinue use if any hazards are identified.
- Keep small accessories away from younger children who may put objects in their mouths.
- Ensure the play kitchen is placed on a stable, flat surface to prevent tipping.

WARRANTY AND SUPPORT

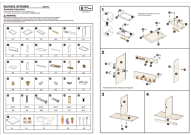 
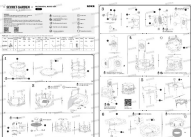 
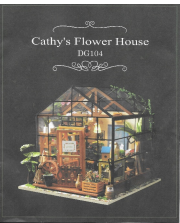 

ROBOTIME is committed to providing high-quality products. For any questions regarding your Wooden Play Kitchen Set, including assembly, missing parts, or product defects, please contact ROBOTIME customer support.

You can typically find contact information for ROBOTIME on their official website or through the retailer where the product was purchased. Please have your model number (WCF23) and purchase details ready when contacting support.

Visit the ROBOTIME Store for more information:[ROBOTIME Official Store](#)

© 2025 ROBOTIME. All rights reserved.

Related Documents - WCF23

	<p>Olivia's Kitchen Assembly Instructions - ROBOTIME WCF09</p> <p>Detailed assembly instructions for the ROBOTIME Olivia's Kitchen play set (Model WCF09). Includes parts list, step-by-step guidance, and safety warnings for building this wooden toy kitchen.</p>
	<p>ROKR AMK52 Secret Garden DIY Mechanical Music Box Assembly Instructions</p> <p>Comprehensive assembly instructions for the ROKR AMK52 Secret Garden DIY Mechanical Music Box by Robotime. This guide provides a detailed walkthrough of the assembly process, including a parts list, step-by-step instructions, and helpful tips for a successful build.</p>
	<p>Cathy's Flower House DG104: Miniature DIY Assembly Guide</p> <p>Comprehensive assembly instructions for the Cathy's Flower House DG104 miniature DIY craft kit by Robotime. This guide provides detailed steps, tips, and part lists to help you build your own charming flower house.</p>
	<p>Robotime EC Declaration of Conformity - Product List and Compliance</p> <p>Official EC Declaration of Conformity from Robotime Technology (Suzhou) CO., LTD, listing compliant wooden model kits, their product details, and applicable harmonized standards and test reports.</p>

Product Model	Product Name	Product Picture
RC110	Mind-Find Bookstore	
RC111	Holiday Party Time	
RC124	Spring Festival's Chances	
RC131	Happy Chinese New Year	
RC135	Fun House	

[Robotime EC Declaration of Conformity - Miniature House Kits](#)

Official EC Declaration of Conformity for Robotime Technology (Suzhou) Co., Ltd.'s range of DIY miniature house kits, including models like Mind-Find Bookstore, Holiday Party Time, and more, compliant with harmonized standards.