

[Manuals.plus](#) /

› [WOLTU](#) /

› WOLTU 3x6m Folding Garden Gazebo Instruction Manual

WOLTU PVL0005gn-UK

WOLTU 3x6m Folding Garden Gazebo Instruction Manual

Model: PVL0005gn-UK

1. INTRODUCTION AND PRODUCT OVERVIEW

Thank you for choosing the WOLTU 3x6m Folding Garden Gazebo. This manual provides essential information for the safe and correct assembly, operation, and maintenance of your gazebo. Please read it thoroughly before use and retain it for future reference.

This folding gazebo is designed for outdoor activities, offering a reliable shelter with its robust construction, UV protection, and waterproof canopy. It features a convenient pop-up mechanism and adjustable height settings for versatile use.



Image 1.1: The WOLTU 3x6m Folding Garden Gazebo provides a spacious outdoor shelter.

2. SAFETY INFORMATION


WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Always assemble the gazebo with at least 4-6 people to ensure safety and proper setup.
- Ensure the gazebo is securely anchored to the ground using all provided ground pegs and ropes, especially in windy conditions.
- Do not use the gazebo in extreme weather conditions such as heavy rain, strong winds, or snow. Disassemble and store it to prevent damage.
- Keep children and pets away from the gazebo during assembly and disassembly.
- Avoid placing heat sources, open flames, or barbecues directly under or near the gazebo fabric.
- Regularly inspect the frame and fabric for any signs of wear or damage. Do not use if damaged.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.


- Folding Gazebo Frame (Metal with powder coating)
- Canopy (210D Oxford fabric with silver coating)
- 6 Removable Side Walls (2 with zippers, 4 with windows)
- Ground Pegs (12 pieces)
- Ropes (6 pieces, 2.8m each)
- Carry Bag
- Hex Key (for minor adjustments, if applicable)

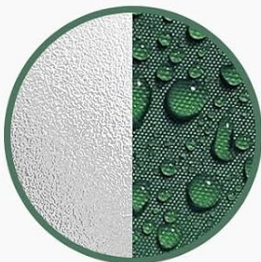

Fabric
210D Oxford Fabric
with Silver Coating
Water-resistant, Sunproof



Height adjustment button
Can adjust the height
according to your needs

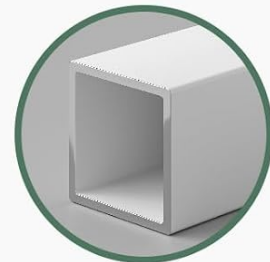

Metal Tubes
Wall Thickness:
0.5mm Sturdy



 
Zipper
Easy Opening &
Closing, Easy to Use



Window
PE Material,
Practical for Lighting



Wind rope
Enhance wind
resistance

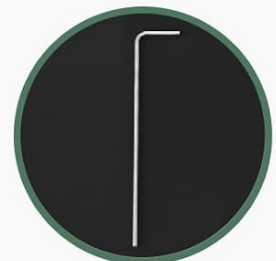

Ground nail
Improve stability

Image 3.1: Key components of the WOLTU Folding Gazebo.

4. SETUP INSTRUCTIONS

The WOLTU gazebo features a pop-up system for quick and easy assembly. It is recommended that at least 4-6 people assist with the setup process.

1. **Unpack the Frame:** Remove the folded frame from the carry bag and place it in the desired setup location.
2. **Partially Expand the Frame:** With multiple people, each holding a leg, gently pull the frame outwards to partially expand it. Do not fully extend yet.
3. **Attach the Canopy:** Drape the canopy fabric over the partially expanded frame. Ensure the canopy is correctly oriented and secured to the corners of the frame.
4. **Fully Expand the Frame:** Continue to pull the legs outwards until the frame is fully extended and the roof structure locks into place. You may need to push up on the center of the roof from underneath to fully extend it.
5. **Adjust Height:** Use the height adjustment buttons on each leg to set the desired height. Ensure all legs are set to the same height for stability. (Refer to Section 5 for detailed height adjustment).
6. **Attach Side Walls:** If desired, attach the side walls using the hook and loop fasteners. The walls with zippers can be used for entry/exit, and those with windows provide light.
7. **Secure the Gazebo:** Use the provided ground pegs to anchor each leg to the ground. Attach the ropes to the corners of the canopy and secure them to the ground with additional pegs, pulling taut to enhance wind resistance.

The pop-up system

Height adjustment in 3 stages

Quick and easy to set up

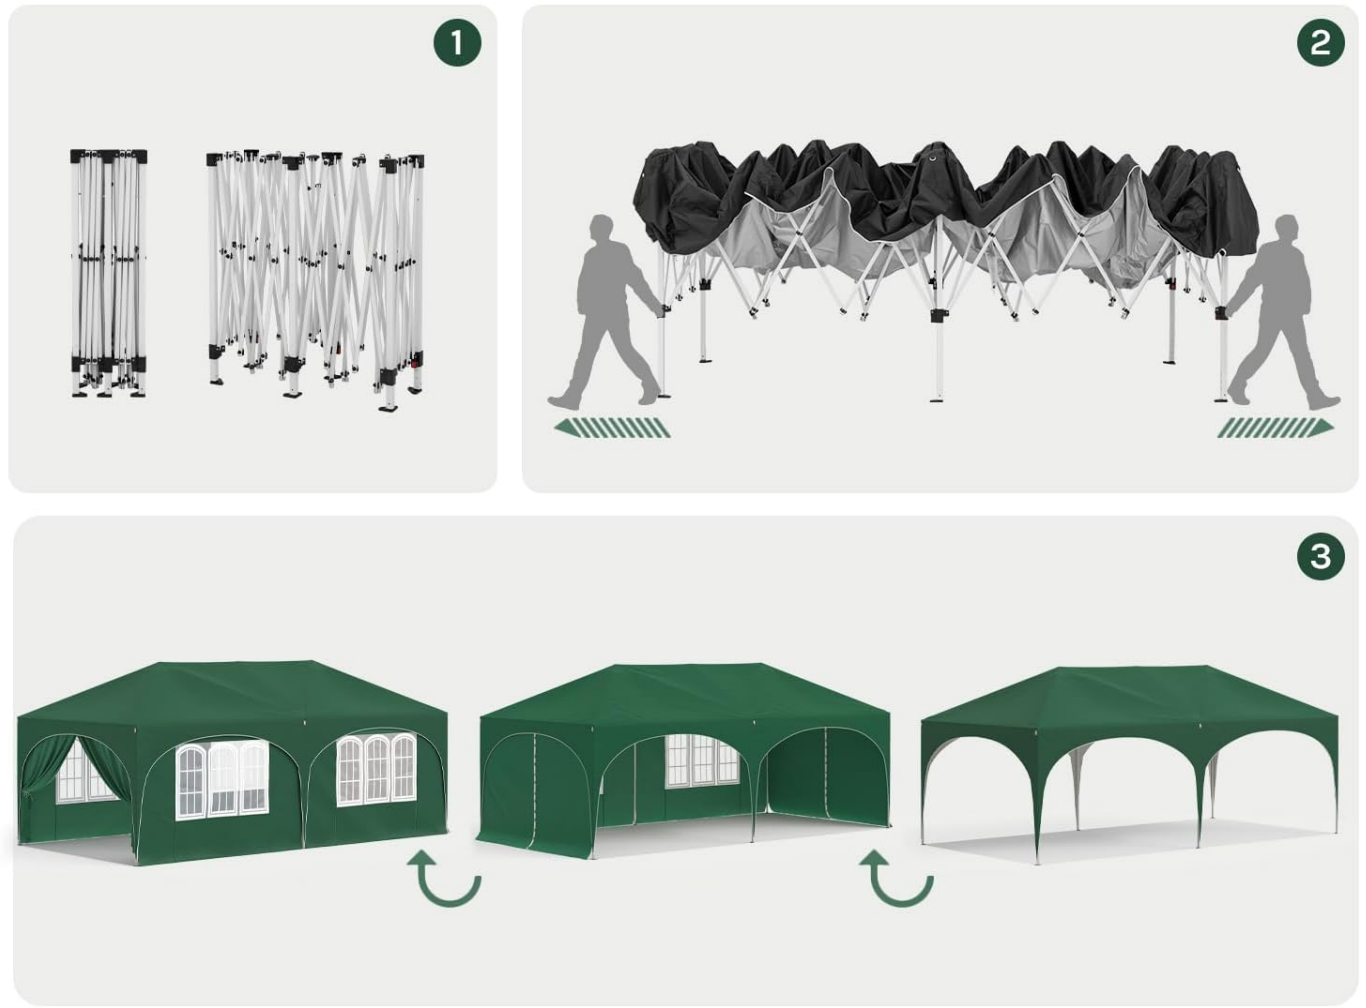 


Image 4.1: Visual guide for the 3-stage pop-up system setup.

5. OPERATING INSTRUCTIONS

5.1 Height Adjustment

The gazebo's height can be adjusted in three stages. Locate the red height adjustment button on each leg. Press the button and slide the inner leg up or down to the desired height. Ensure all four legs are locked at the same height for stability.

- **Stage 1:** Approximately 257 cm (eave height 187 cm)
- **Stage 2:** Approximately 261 cm (eave height 191 cm)
- **Stage 3:** Approximately 265 cm (eave height 195 cm)

The pop-up system

Height adjustment in 3 stages



265cm



261 cm



257cm

195cm



191 cm



187cm



One-click height adjustment



Image 5.1: One-click height adjustment mechanism and available height settings.

5.2 Side Wall Usage

The gazebo includes six removable side walls. These can be attached or removed as needed using the hook and loop fasteners. Two walls feature zippers for easy entry and exit, while four walls include windows to allow light into the gazebo.



Image 5.2: The gazebo is suitable for various outdoor activities, with flexible side wall configurations.

6. MAINTENANCE

- **Cleaning the Canopy:** Clean the canopy fabric with a mild soap solution and a soft brush or cloth. Rinse thoroughly with water and allow it to air dry completely before folding and storing. Do not use harsh chemicals or abrasive cleaners.
- **Frame Care:** Wipe the metal frame with a damp cloth to remove dirt and debris. Ensure the frame is dry before storage to prevent rust.
- **Storage:** When not in use, disassemble the gazebo and store it in the provided carry bag in a dry, cool place, away from direct sunlight. This will prolong the life of the fabric and frame.
- **Inspection:** Periodically check all fasteners, ropes, and frame connections for tightness and wear. Replace any worn or damaged parts immediately.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo is unstable or wobbly.	Insufficient anchoring; uneven ground; legs not locked at same height.	Ensure all ground pegs and ropes are securely fastened. Move to level ground. Verify all legs are locked at the same height setting.
Difficulty expanding/collapsing the frame.	Not enough people assisting; frame joints are stiff.	Ensure at least 4-6 people are assisting. Gently lubricate frame joints if necessary (use a silicone-based lubricant).
Water pooling on canopy or leaking.	Canopy not taut; improper installation; extreme weather.	Ensure canopy is stretched tightly over the frame. Verify all hook and loop fasteners are secured. Do not use in heavy rain.
Side walls do not fit correctly.	Incorrect orientation; hook and loop fasteners not aligned.	Check the orientation of each side wall. Ensure hook and loop fasteners are properly aligned and secured along the frame.

8. SPECIFICATIONS

Brand	WOLTU
Model Number	PVL0005gn-UK
Dimensions (L x W)	3 x 6 meters (approximately 9.8 x 19.7 feet)
Adjustable Height	3 stages (approx. 257 cm, 261 cm, 265 cm peak height)
Floor Area	18 square meters
Frame Material	Powder-coated Metal (Steel/Aluminum blend)
Canopy Material	210D Oxford Fabric with Silver Coating
UV Protection	UV protection factor 50+ (blocks 98% of UV rays)
Water Resistance	Waterproof
Side Walls	6 removable (2 with zippers, 4 with windows)
Item Weight	28.7 kg
Color	Green
Recommended Uses	Outdoor Activities, Beach, Party, Picnic, BBQs, Recreation



Image 8.1: Detailed dimensions of the WOLTU 3x6m Folding Garden Gazebo.

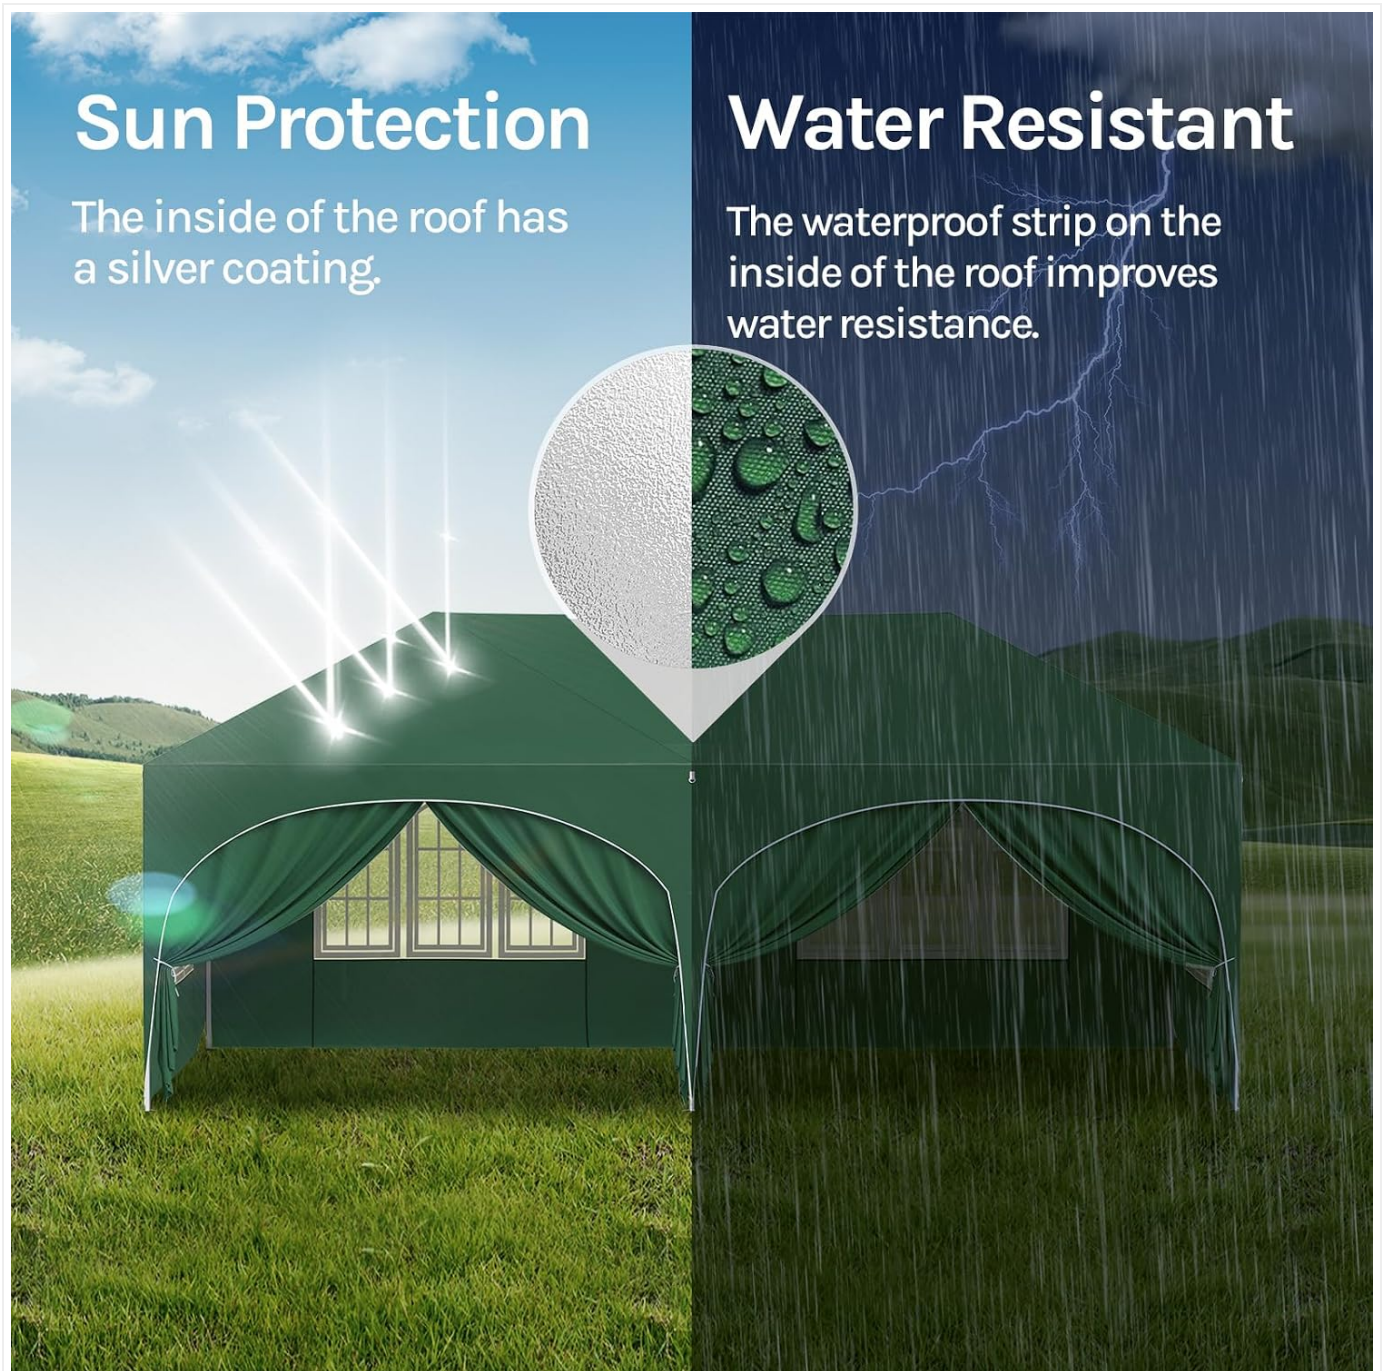 


Image 8.2: Features of the canopy, highlighting sun protection and water resistance.

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or if you encounter any issues not covered in this manual, please contact WOLTU customer support. Refer to your purchase documentation for specific warranty terms and contact details.

You can typically find support information on the WOLTU official website or through the retailer where you purchased the product.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question