

## THERMOMIX CUTTER

# Generic Thermomixer Vegetable Cutter Blender Accessories

Model: THERMOMIX CUTTER

## 1. INTRODUCTION

---

Thank you for choosing the Generic Thermomixer Vegetable Cutter Blender Accessories. This product is designed to enhance the functionality of your Thermomix TM5 or TM6, allowing for efficient and versatile vegetable cutting. Please read this manual carefully before use to ensure proper operation, maintenance, and safety.

## 2. PRODUCT OVERVIEW

---

The A+B Cutter Set includes multiple components for various cutting styles. Familiarize yourself with each part before assembly.

# A + B



+ Model B blade



**Figure 2.1:** The A+B cutting blades. Blade A is for coarse cutting, and Blade B is for fine cutting. These blades are made of stainless steel.



**Figure 2.2:** All components of the vegetable cutter accessory. This includes the two cutting blades, a food collection bowl, a transparent lid with an integrated feeder chute, and the central drive shaft.



**Figure 2.3:** The vegetable cutter accessory fully assembled, showing the transparent lid and feeder chute. This unit is designed to fit into the Thermomix mixing bowl.

### 3. SAFETY INSTRUCTIONS

---

- Always ensure the Thermomix is turned off and unplugged before assembling, disassembling, or cleaning the accessory.
- Handle cutting blades with extreme care as they are very sharp. Use appropriate protection if necessary.
- Do not operate the accessory without the lid securely in place.
- Never insert hands or utensils into the feeder chute while the appliance is operating. Use the provided food pusher.
- Keep children away from the appliance during operation and cleaning.
- Ensure all components are dry before storage or reassembly.
- This accessory is designed for use with Thermomix TM5 and TM6 models only. Do not attempt to use it with other appliances.

### 4. SETUP

---

1. **Prepare the Thermomix:** Ensure your Thermomix TM5 or TM6 mixing bowl is clean and dry.
2. **Insert the Drive Shaft:** Place the central drive shaft into the bottom of the mixing bowl, ensuring it is securely seated.
3. **Place the Collection Bowl:** Position the food collection bowl over the drive shaft inside the mixing bowl.
4. **Select and Install Blade:** Choose either the coarse (A) or fine (B) cutting blade according to your desired result. Carefully place the selected blade onto the drive shaft within the collection bowl.

5. **Attach the Lid:** Securely place the transparent lid with the feeder chute onto the collection bowl, ensuring it locks into position.
6. **Position on Thermomix:** Place the entire assembled unit (mixing bowl with accessory) onto the Thermomix base.



Figure 4.1: The vegetable cutter accessory correctly installed within the Thermomix mixing bowl, ready for operation.

## 5. OPERATING INSTRUCTIONS

---

This accessory is designed for slicing and grating vegetables. Always ensure the Thermomix is set to the appropriate speed for cutting, typically a low to medium speed, and refer to your Thermomix manual for specific speed recommendations for accessories.

1. **Prepare Ingredients:** Wash and peel vegetables as needed. Cut larger vegetables into pieces that fit comfortably into the feeder chute.
2. **Start Thermomix:** Turn on your Thermomix and select the desired speed setting for cutting.
3. **Feed Vegetables:** Carefully place the prepared vegetables into the feeder chute. Use the food pusher to gently guide them towards the rotating blade. **Never use your fingers or other utensils.**
4. **Monitor Progress:** Observe the cutting process through the transparent lid. The cut vegetables will collect in the bowl below the blade.
5. **Finish:** Once all vegetables are processed or the desired quantity is reached, turn off the Thermomix. Wait for the blade to stop completely before removing the lid.
6. **Remove Processed Food:** Carefully remove the lid, then lift out the collection bowl to access your

freshly cut vegetables.



**Figure 5.1:** Example of shredded potatoes produced by the accessory.



Figure 5.2: Example of finely shredded carrots, suitable for salads or cooking.

## 6. CLEANING AND MAINTENANCE

---

Regular cleaning ensures hygiene and extends the lifespan of your accessory.

- **Disassembly:** Always disassemble the accessory completely before cleaning. Remove the lid, blade, collection bowl, and drive shaft from the Thermomix mixing bowl.
- **Washing:** All components are dishwasher safe. Alternatively, wash them by hand using warm soapy water and a soft brush to remove any food residue.
- **Blade Care:** Exercise extreme caution when cleaning the blades due to their sharpness. Use a brush or sponge, avoiding direct contact with the cutting edges.
- **Drying:** Ensure all parts are thoroughly dried before reassembly or storage to prevent water spots or corrosion, especially on the stainless steel blades.
- **Storage:** Store the accessory in a clean, dry place, preferably in its original packaging or a designated storage area to protect the blades.

## 7. TROUBLESHOOTING

---

| Problem                                       | Possible Cause  | Solution   |
|---|---|--|
| Accessory not fitting correctly in Thermomix. | Incorrect assembly or not fully seated.   | Ensure the drive shaft, collection bowl, and lid are correctly aligned and securely placed according to the setup instructions.                      |
| Vegetables not cutting efficiently.           | Incorrect blade selection, Thermomix speed too low, or vegetables too large/hard. | Verify you are using the appropriate blade (coarse/fine). Increase Thermomix speed if safe to do so. Cut vegetables into smaller, manageable pieces. |
| Lid not closing securely.                     | Components misaligned or food obstructing closure.                                | Check that the collection bowl and blade are properly seated. Ensure no food particles are preventing the lid from locking.                          |
| Unusual noise during operation.               | Improper assembly or foreign object.  | Immediately turn off the Thermomix and unplug it. Disassemble and inspect all parts for correct placement and any obstructions.                      |

## 8. SPECIFICATIONS

---

**Brand:** Generic

**Model Number:** THERMOMIX CUTTER

**Compatibility:** Thermomix TM5, Thermomix TM6

**Material:** Stainless Steel (Blades), Food-grade Plastic (Other components)

**Cutting Styles:** Coarse (Blade A), Fine (Blade B)

**Cleaning:** Dishwasher Safe

**Product Dimensions:** Approximately 8"D x 8"W x 7"H (Assembled unit)

**Item Weight:** 2.2 pounds

## 9. WARRANTY AND SUPPORT

---

This product comes with a standard manufacturer's warranty. For specific warranty details, claims, or technical support, please refer to the seller's information or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the [Generic Store on Amazon](#).