

[Manuals.plus](#) /

› [Acekool](#) /

› Acekool 26.5 cu.ft Commercial Beverage Display Refrigerator User Manual

Acekool SC-760FB

Acekool 26.5 cu.ft Commercial Beverage Display Refrigerator User Manual

Brand: Acekool | **Model:** SC-760FB

1. INTRODUCTION

Thank you for choosing the Acekool 26.5 cu.ft Commercial Beverage Display Refrigerator. This appliance is designed for commercial use, offering efficient cooling and an attractive display for various beverages. It features a spacious interior, double-paned tempered glass doors, adjustable shelving, and an energy-efficient compressor.

This manual provides essential information for the safe installation, operation, and maintenance of your new refrigerator. Please read it thoroughly before use and retain it for future reference.

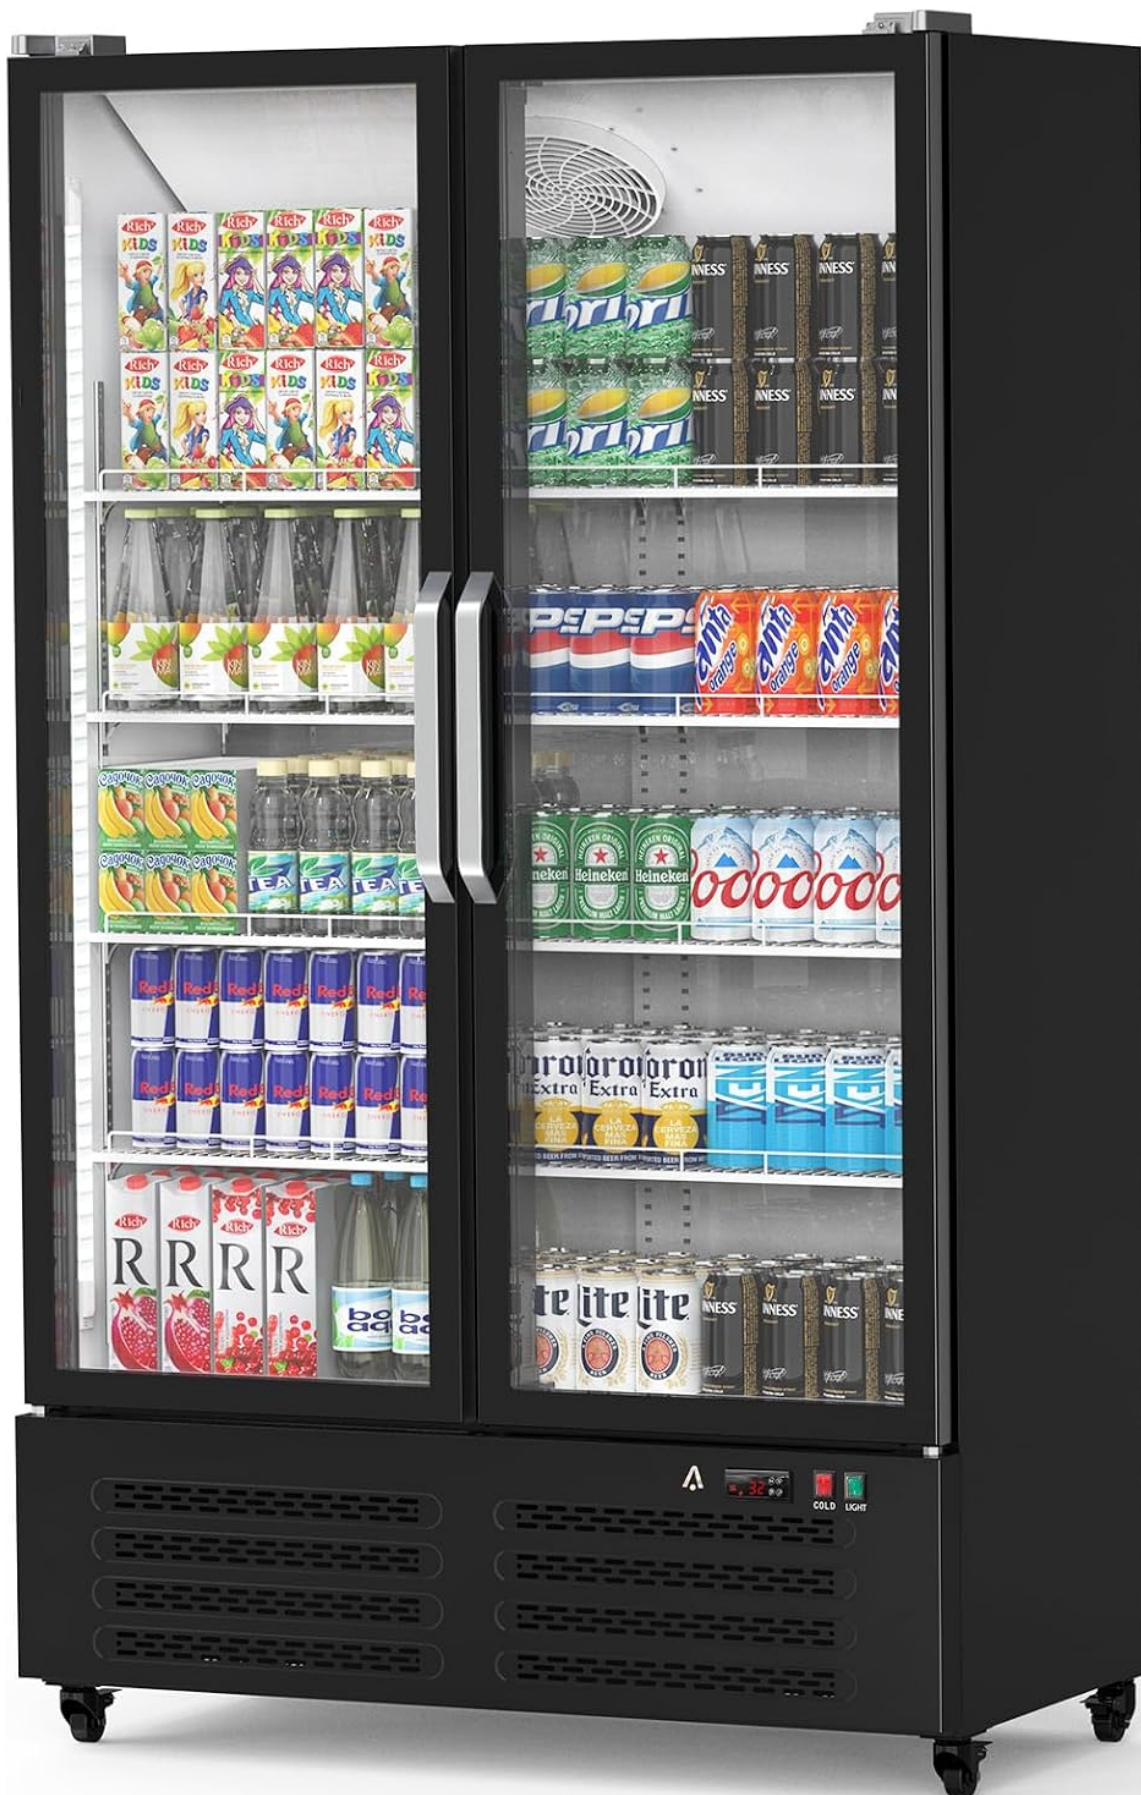


Image 1.1: Front view of the Acekool Commercial Beverage Display Refrigerator, showcasing its two glass doors and internal LED lighting.

2. SAFETY INSTRUCTIONS

To ensure safe operation and reduce the risk of injury or damage, always adhere to the following safety precautions:

- **Electrical Safety:** Ensure the power supply matches the voltage requirements (115 Volts) specified on the appliance's rating label. Do not overload electrical outlets.
- **Grounding:** This appliance must be properly grounded to prevent electrical shock. Do not remove the grounding prong from the power cord.
- **Ventilation:** Maintain adequate clearance around the refrigerator for proper air circulation and heat dissipation. Blocked vents can lead to overheating and reduced efficiency.
- **Flammable Materials:** Do not store explosive substances or flammable materials inside or near the refrigerator.
- **Children Safety:** Keep children away from the appliance, especially when the doors are open. Ensure they do not climb on or play inside the refrigerator.
- **Handling:** Use caution when moving the unit due to its weight (246 pounds). Always use appropriate lifting techniques or equipment.
- **Damage:** Do not operate the refrigerator if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped. Contact qualified service personnel.

3. PACKAGE CONTENTS

Upon unpacking, verify that all components are present and undamaged:

- Acekool Commercial Beverage Display Refrigerator Unit
- Adjustable Shelves (quantity may vary)
- User Manual (this document)
- Keys for door lock (if applicable)

If any items are missing or damaged, please contact Acekool customer support immediately.

4. SETUP AND INSTALLATION

4.1 Unpacking

1. Carefully remove all packaging materials, including tape and protective films.
2. Inspect the refrigerator for any shipping damage. Report any damage to your retailer immediately.

4.2 Placement

- Place the refrigerator on a firm, level floor capable of supporting its weight when fully loaded.
- Ensure adequate ventilation. Allow at least 4 inches (10 cm) of space at the back and sides, and 12 inches (30 cm) at the top for proper air circulation.
- Avoid direct sunlight or proximity to heat sources (e.g., ovens, radiators) to maintain cooling efficiency.

4.3 Leveling

The refrigerator is equipped with adjustable leveling feet or casters. Ensure the unit is level to prevent door misalignment and ensure proper drainage.

- Use a spirit level to check if the unit is level from front to back and side to side.
- Adjust the leveling feet by turning them clockwise to raise or counter-clockwise to lower the corresponding

corner.

4.4 Shelf Installation

The refrigerator comes with adjustable shelves for flexible storage. To install or adjust shelves:

1. Locate the shelf support brackets inside the cabinet.
2. Insert the shelf into the desired position, ensuring it is securely seated on all four support brackets.
3. Adjust shelf height as needed to accommodate different beverage sizes.

Adjustable shelves

Convenient for placing goods of different sizes



Image 4.1: Close-up view of the adjustable shelf mechanism, demonstrating how shelves can be moved up or down to accommodate various product heights.

4.5 Initial Startup

After placement and leveling, allow the refrigerator to stand upright for at least 2-4 hours before plugging it into a power outlet. This allows the refrigerant to settle, preventing potential damage to the cooling system.

Once plugged in, the unit will begin cooling. Allow several hours for the internal temperature to stabilize before loading products.

5. OPERATING INSTRUCTIONS

5.1 Temperature Control

The Acekool refrigerator features an adjustable temperature control system, allowing you to set the internal temperature between 32°F and 50°F (1°C and 10°C).

- Locate the digital temperature control panel, typically found near the bottom front of the unit.
- Use the "SET" button to enter temperature adjustment mode.
- Use the up/down arrows to select your desired temperature.
- Press "SET" again or wait a few seconds for the setting to be saved.



Image 5.1: Illustration of the electronic temperature control panel and the dual switch design for energy efficiency, showing the "COLD" and "LIGHT" buttons.

5.2 LED Lighting

The internal LED light bar illuminates the cabinet for attractive product display. The interior lights can be turned on or off manually.

- Locate the "LIGHT" switch on the control panel.
- Toggle the switch to turn the internal LED lights on or off as desired.

5.3 Loading Products

- Arrange products to allow for proper air circulation around items. Do not block the internal fan or air vents.
- Avoid overloading shelves, which can impede air flow and reduce cooling efficiency.
- Ensure doors are fully closed after accessing products to maintain internal temperature.

6. MAINTENANCE

6.1 Cleaning the Interior

- Unplug the refrigerator before cleaning.
- Remove all products and shelves.
- Clean the interior surfaces with a mild detergent and warm water. Rinse thoroughly and dry completely.
- Do not use abrasive cleaners, solvents, or harsh chemicals.

6.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft cloth dampened with mild soap and water.
- For glass doors, use a glass cleaner.
- Ensure no water enters the electrical components.

6.3 Automatic Defrost System

This refrigerator features an automatic defrost system, minimizing the need for manual defrosting. During the defrost cycle, a small amount of water may collect in the drain pan, which then evaporates.

- Ensure the drain hole (if visible) is clear of obstructions.

6.4 Condenser Coil Cleaning

Periodically clean the condenser coils (located at the back or bottom of the unit) to maintain optimal performance and energy efficiency. Dust and debris can accumulate on the coils, reducing cooling capacity.

- Unplug the refrigerator.
- Use a vacuum cleaner with a brush attachment or a stiff brush to gently remove dust and lint from the coils.
- Perform this maintenance every 3-6 months, or more frequently in dusty environments.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their potential solutions:

Problem	Possible Cause	Solution
Refrigerator not cooling	No power; Temperature set too high; Blocked air vents; Dirty condenser coils; Door not closed properly.	Check power connection and circuit breaker; Adjust temperature setting; Ensure proper ventilation; Clean condenser coils; Close doors completely.

Problem	Possible Cause	Solution
Excessive noise	Unit not level; Objects vibrating against the unit; Fan obstruction.	Level the refrigerator; Remove any objects touching the unit; Check for obstructions around the fan.
Excessive condensation inside	Frequent door openings; High humidity; Door seal not tight.	Minimize door openings; Ensure door seals are clean and intact; Check ambient humidity.
LED lights not working	Light switch off; LED failure.	Toggle the "LIGHT" switch; Contact customer support if lights still do not work.

If the problem persists after attempting these solutions, please contact Acekool customer support.

8. SPECIFICATIONS

The following table outlines the key specifications for the Acekool Commercial Beverage Display Refrigerator, Model SC-760FB:

Feature	Detail
Model Number	SC-760FB
Capacity	26.5 Cubic Feet
Product Dimensions (D x W x H)	23.8"D x 43.7"W x 74.1"H (60.45 cm D x 111 cm W x 188.2 cm H)
Item Weight	246.4 Pounds (111.76 kg)
Voltage	115 Volts
Number of Doors	2
Defrost System	Automatic
Refrigerant Type	R-600a
Temperature Range	32°F-50°F (1°C-10°C)
Installation Type	Freestanding
Color	Black



Image 8.1: Diagram illustrating the key dimensions (height, width, depth) of the Acekool Commercial Beverage Display Refrigerator.

9. WARRANTY AND SUPPORT

Acekool products are manufactured to high-quality standards and are backed by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage duration and limitations.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Acekool customer support. Have your model number (SC-760FB) and purchase date ready when contacting support.

You can often find contact information on the Acekool official website or through your retailer.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CTYBBXPZ>

More documents and user manuals: **<https://manuals.plus/>**