

Genericy5e3qodh0k

Emomo Recliner Switch User Manual

Model: Genericy5e3qodh0k | Brand: Generic

1. INTRODUCTION

Thank you for choosing the Generic Emomo Recliner Switch. This 2-button hand switch remote controller is designed to provide convenient and reliable operation for most electric recliners and lift chairs. This manual will guide you through the installation, operation, and maintenance of your new recliner switch, ensuring a smooth and enjoyable experience.

2. PRODUCT OVERVIEW

2.1 Key Features

- Retracted and extended 2-button hand control.
- Easy to install and simple to operate.
- Equipped with LED backlight for enhanced visibility and convenience.
- Integrated Dual USB charging ports (5V 1A) for charging mobile devices.
- Compatible with most electric recliners and chairs.

2.2 Package Contents

- 1 x Emomo Recliner Switch Controller

2.3 Product Components

The Emomo Recliner Switch consists of a circular control panel with two buttons and a USB charging port, connected by a durable cable to a standard 5-pin connector for integration with your recliner's motor system.



Figure 2.3.1: The Emomo Recliner Switch, showing the control panel, cable, and 5-pin connector.



Figure 2.3.2: An alternative view of the recliner switch, highlighting its compact design.



Figure 2.3.3: Top-down perspective of the control panel, showing the two buttons and the USB port clearly.

3. SETUP AND INSTALLATION

The Emomo Recliner Switch is designed for easy installation. Follow these steps to replace your existing switch or install a new one:

1. **Disconnect Power:** Before beginning, ensure your recliner is unplugged from the power outlet to prevent electrical hazards.
2. **Locate Existing Switch (if applicable):** Identify where your current recliner switch is mounted. This is typically on the side of the recliner.
3. **Remove Old Switch:** Carefully detach the old switch from its mounting point. Disconnect its cable from the recliner's motor system. Note the connection type.
4. **Connect New Switch:** Plug the 5-pin connector of the new Emomo Recliner Switch into the corresponding port on your recliner's motor system. Ensure a secure connection.
5. **Mount New Switch:** Insert the new switch into the designated opening on your recliner. The switch is designed to fit most standard openings. Secure it firmly.
6. **Reconnect Power:** Once the switch is securely installed, plug your recliner back into the power outlet.

Easy to install and simple to operate.



Figure 3.1: The recliner switch is designed for straightforward installation.

4. OPERATING INSTRUCTIONS

Operating the Emomo Recliner Switch is straightforward:

- **Extend Recliner:** Press and hold the button with the **upward-pointing arrow** (or the top button) to extend the recliner footrest and recline the backrest. Release the button when the desired position is reached.
- **Retract Recliner:** Press and hold the button with the **downward-pointing arrow** (or the bottom button) to retract the footrest and bring the backrest to its upright position. Release the button when the desired position is reached.
- **USB Charging:** The integrated USB port (5V 1A) can be used to charge compatible electronic devices such as smartphones or tablets. Simply plug your device's USB cable into the port.
- **LED Backlight:** The buttons feature an LED backlight for easy visibility in low-light conditions.

Fit for most electric recliners and lift chairs.



Figure 4.1: The recliner switch is suitable for most electric recliners and lift chairs, enhancing comfort.

5. MAINTENANCE AND CARE

To ensure the longevity and proper functioning of your Emomo Recliner Switch, follow these care guidelines:

- **Cleaning:** Wipe the surface of the switch with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as they may damage the plastic finish.
- **Liquid Exposure:** Keep the switch away from liquids. In case of accidental spills, unplug the recliner immediately and allow the switch to dry completely before reconnecting power.
- **Cable Management:** Ensure the cable is not pinched, twisted, or subjected to excessive tension, which could damage the internal wiring.
- **Storage:** If the recliner is not in use for an extended period, store it in a dry place away from direct sunlight and heat sources.

6. TROUBLESHOOTING

If you encounter any issues with your Emomo Recliner Switch, refer to the table below for common problems and their solutions:

Problem	Possible Cause	Solution
Recliner does not move.	No power to the recliner.	Check if the recliner is properly plugged into a working power outlet. Ensure the power adapter is securely connected.
Recliner moves intermittently.	Loose cable connection.	Ensure the 5-pin connector from the switch is firmly plugged into the recliner's motor system.
USB charging port not working.	Device incompatibility or power issue.	Ensure the recliner is powered on. Try a different USB cable or device. Verify the device requires 5V 1A charging.
LED backlight is off.	No power or internal issue.	Check power connection. If the recliner functions but the LED does not, contact customer support.

7. TECHNICAL SPECIFICATIONS

Specification	Value
Material	Plastic
Weight	4.6 ounces (131g)
Dual USB Charging Output	5V 1A
Wire Specification	22AWG, 4-core wire /17*0.16/ OD 5.0mm
Working Current	5A
Model Name	Genericy5e3qodh0k
Package Dimensions	9.25 x 5.2 x 3.03 inches

8. WARRANTY AND SUPPORT

For any questions, technical assistance, or warranty inquiries regarding your Emomo Recliner Switch, please contact the seller or manufacturer through your purchase platform. Please have your model number (Genericy5e3qodh0k) and purchase details ready when contacting support.