

WHALL KST075AU

WHALL KST075AU Touch Screen Toaster 2 Slice Instruction Manual

Model: KST075AU

1. INTRODUCTION

Thank you for choosing the WHALL KST075AU Touch Screen Toaster. This manual provides essential information for the safe and efficient operation of your new appliance. Please read it thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

3. PRODUCT OVERVIEW

The WHALL KST075AU is a 2-slice touch screen toaster designed for versatile toasting. It features a brushed stainless steel finish and a digital interface for easy control.

Components:

- **Toasting Slots:** Two extra-wide 1.5-inch slots accommodate various bread types.
- **Touch Screen Display:** Intuitive interface for selecting bread types, shade settings, and functions.
- **Control Lever:** Lowers and raises bread into the toasting slots.
- **Removable Crumb Tray:** Located at the back for easy cleaning.
- **Cord Wrap:** Integrated into the base for convenient storage.

SUITABLE FOR A VARIETY OF BREAD

Nutritious breakfast, homemade delicious.



Image: The WHALL KST075AU Touch Screen Toaster, showing its brushed stainless steel exterior and digital display.



Image: Close-up of the toaster's display and touchscreen area, highlighting the interactive controls.

4. SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials.
2. **Placement:** Place the toaster on a stable, heat-resistant surface, away from flammable materials like curtains. Ensure adequate ventilation around the appliance.
3. **Power Connection:** Plug the power cord into a standard 120-volt AC electrical outlet.
4. **First Use (Burn-off):** Before toasting food for the first time, operate the toaster without bread for a few cycles at the highest shade setting. This will burn off any manufacturing residues and eliminate odors. A slight smoke or odor is normal during this process.

5. OPERATING INSTRUCTIONS

The WHALL KST075AU toaster features a smart digital touch screen for easy operation.

Basic Toasting Steps:

1. **Insert Bread:** Place up to two slices of bread, bagels, or other items into the toasting slots.
2. **Select Bread Type:** On the touch screen, tap the icon corresponding to your bread type (e.g., Bread, Bagel, Pastry, Waffle, English Muffin, Grain). The selected icon will blink.
3. **Adjust Shade Setting:** Use the left and right arrow icons (« and ») to select your desired shade level from 1 (lightest) to 6 (darkest). The display will show the current shade number.
4. **Lower Lever:** Push the control lever down until it locks into place. The toasting cycle will begin, and the digital timer will display the remaining time.
5. **Completion:** Once the cycle is complete, the bread will automatically pop up.

EASY TO OPERATION



Step 01

Put breads into slots.



Step 02

Press icon bread type to choose bread type and icon «» to choose shade level, press icon defrost or reheat if needed.



Step 03

Press the lever down to the bottom.



Step 04

Enjoy delicious bread every day.

Image: Visual guide to the easy operation steps of the WHALL KST075AU toaster.

Special Functions:

- **Defrost Function:** For frozen bread. Select your bread type and shade, then tap the **DEFROST** button. This adds approximately 20% longer browning time to thaw and toast.
- **Bagel Function:** Toasts the cut side of bagels while gently warming the outer side. Select 'Bagel' bread type,

choose your shade, and proceed.

- **Reheat Function:** To warm already toasted bread without further browning. After a cycle finishes, you can tap the **REHEAT** button to warm bread for 30 seconds.
- **Cancel Function:** To stop the toasting cycle at any time, press the **CANCEL** button.
- **Mute Function:** The toaster provides sound alerts for function selection and cycle completion. To mute these alerts, press and hold the **CANCEL** button for 2 seconds.



Image: Illustration of the four basic functions: Defrost, Bread Type, Reheat, and Cancel/Mute.

REHEAT

Reheat bread for 30s after the cycle finished



Image: Demonstrates the reheat function, showing bread before and after a 30-second reheat cycle.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Clean Crumb Tray:** Pull out the removable crumb tray located at the back of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Ensure it is completely dry before reinserting.
3. **Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the stainless steel finish.
4. **Clean Interior:** Do not insert any objects into the toasting slots to clean. If food becomes lodged, unplug the toaster

and carefully turn it upside down to shake out the food.



EASY TO CLEAN



Removable crumb Tray
Keep the toaster oven clean with the convenient removable crumb tray.



Neatly stores away
The built-in cord wrap in the base of the toaster makes it easy to neatly store the toaster when it's not being used.



Extra-Wide 1.5-Inch Bread Slot
Perfect for toasting a variety of bread types simultaneously.



Extra-lift lever
For safely removing smaller pieces.

Image: Highlights the easy-to-clean features, including the removable crumb tray and extra-wide slots.

7. TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; circuit breaker tripped.	Ensure toaster is securely plugged in. Test the outlet with another appliance. Check your home's circuit breaker.
Bread does not toast evenly.	Uneven bread thickness; first use burn-off not performed; internal elements need to warm up.	Ensure bread slices are of similar thickness. Perform burn-off cycles. The first few cycles may be less consistent.
Bread gets stuck.	Oversized bread; crumbs accumulated.	Use appropriately sized bread. Unplug and remove crumbs from the crumb tray and inside the slots.
Smoke coming from toaster.	Food lodged inside; crumb tray full; burn-off during first use.	Immediately unplug. Remove any lodged food or clean the crumb tray. A small amount of smoke is normal during initial use.

8. SPECIFICATIONS

Feature	Detail
Brand	WHALL
Model Number	KST075AU
Color	Grey

Feature	Detail
Product Dimensions (D x W x H)	10" x 6.2" x 7.4"
Wattage	850 watts
Voltage	120 volts
Slot Count	2
Special Features	Touchscreen
Number of Shade Settings	6
Display Type	LED
Item Weight	3.7 pounds

9. WARRANTY AND SUPPORT

WHALL provides a **12-month guarantee** for this product. If you receive a defective product or are not satisfied with your purchase, please contact WHALL customer support for assistance. For further support or inquiries, please refer to the contact information provided with your product packaging or visit the official WHALL website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question