

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Mayer](#) /
- › [Mayer MMRC08D-WE 0.8L Ceramic Pot Rice Cooker Instruction Manual](#)

## Mayer MMRC08D-WE

# Mayer MMRC08D-WE 0.8L Ceramic Pot Rice Cooker Instruction Manual

Model: MMRC08D-WE | Brand: Mayer

### IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.
- Do not use abrasive cleaners or scouring pads on the inner pot or exterior.
- Ensure the inner pot is properly seated before cooking.
- Do not block the steam vent during operation.

## PRODUCT OVERVIEW

The Mayer MMRC08D-WE Rice Cooker is designed for efficient and convenient cooking of various dishes. It features a compact design with a ceramic-coated inner pot and a user-friendly sensor-touch control panel.

## Components



Image: Mayer MMRC08D-WE Rice Cooker with its lid open, revealing the non-stick ceramic inner pot and the detachable inner lid. The control panel is visible on the front.

- **Main Unit:** The exterior housing of the rice cooker.
- **Inner Pot:** 0.8L capacity, non-stick ceramic coated, 2mm thick with 5 layers.
- **Detachable Inner Cap:** Located on the underside of the lid, removable for cleaning.
- **Lid:** Hinged lid with steam vent.
- **Sensor-Touch Control Panel:** With LED display for function selection and time.
- **Steam Rack:** For steaming vegetables or other foods.
- **Rice Spatula:** For serving cooked rice.
- **Measuring Cup:** For accurate measurement of rice and water.

- **Power Cord:** Detachable power cord.

## SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials and accessories.
2. **Clean:** Wash the inner pot, steam rack, rice spatula, and measuring cup with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Position:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.
4. **Insert Inner Pot:** Place the clean, dry inner pot into the main unit, ensuring it sits correctly and makes full contact with the heating element.
5. **Connect Power:** Plug the power cord into the rice cooker's power inlet, then plug the other end into a grounded electrical outlet. The LED display will illuminate, indicating standby mode.

## OPERATING INSTRUCTIONS

The Mayer MMRC08D-WE features a sensor-touch control panel with an LED display for easy operation. It includes 6 preset cooking functions and a 24-hour preset timer.

### General Operation

1. **Measure Ingredients:** Use the provided measuring cup to measure rice. Rinse rice thoroughly until water runs clear.
2. **Add Water:** Add the appropriate amount of water to the inner pot. Refer to the water level markings inside the inner pot for guidance (e.g., "WHITE RICE", "BROWN RICE", "PORRIDGE").
3. **Place Inner Pot:** Insert the inner pot into the rice cooker and close the lid securely.
4. **Select Function:** With the unit in standby mode, touch the desired function button on the control panel (e.g., "White Rice", "Brown Rice", "Porridge", "Soup", "Steam"). The selected function indicator will light up.
5. **Start Cooking:** Press the "Start" button (or equivalent, if not explicitly named, assume selection starts it). The cooking process will begin, and the LED display will show the remaining cooking time or a countdown.
6. **Keep Warm:** Once cooking is complete, the rice cooker will automatically switch to "Keep Warm" mode for up to 24 hours. The "Keep Warm" indicator will illuminate.
7. **Serve:** Open the lid carefully, avoiding steam. Use the rice spatula to fluff and serve the rice.
8. **Cancel/Stop:** To stop cooking or exit a function, press the "Cancel" or "Off" button.

### Preset Cooking Functions

The rice cooker offers 6 preset functions for various cooking needs:

- **White Rice:** Standard cooking for white rice.
- **Brown Rice:** Optimized cooking for brown rice, typically requiring more water and longer cooking time.
- **Porridge:** For preparing creamy porridge.

- **Soup:** For cooking soups and stews.
- **Steam:** Use with the provided steam rack for steaming vegetables, dumplings, etc.
- **Keep Warm:** Automatically activated after cooking, maintains food temperature. Can also be manually selected.

### Using the Preset Timer (Delay Start)

The preset timer allows you to delay the start of cooking for up to 24 hours.

1. Prepare ingredients (rice, water, etc.) in the inner pot and place it in the cooker.
2. Close the lid and plug in the appliance.
3. Select your desired cooking function (e.g., "White Rice").
4. Press the "Timer" or "Preset" button. The display will show a default delay time.
5. Use the "+" and "-" buttons (if available, or repeated presses of "Timer" button) to adjust the delay time in hours.
6. Once the desired delay time is set, press "Start". The timer will count down, and cooking will begin automatically after the set delay.

## CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your rice cooker. Always unplug the appliance and allow it to cool completely before cleaning.

### Inner Pot and Accessories

- Remove the inner pot, steam rack, rice spatula, and measuring cup.
- Wash these parts with warm, soapy water using a soft sponge or cloth.
- For stubborn food residue, soak the inner pot in warm water for a few minutes before cleaning.
- Rinse thoroughly and dry completely before reassembling or storing.
- Do not use abrasive cleaners, metal scouring pads, or sharp objects, as these can damage the non-stick ceramic coating.

### Main Unit and Lid

- Wipe the exterior of the main unit with a soft, damp cloth.
- Clean the inside of the lid and the detachable inner cap. The inner cap can be removed for more thorough cleaning.
- Ensure no water enters the electrical components. Never immerse the main unit in water or any other liquid.
- Clean the steam vent to prevent blockages.
- Dry all surfaces completely before plugging in or storing the appliance.

## TROUBLESHOOTING

If you encounter issues with your rice cooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rice is undercooked or too hard.	Insufficient water; lid not closed properly; power interruption.	Add more water next time; ensure lid is sealed; check power connection.
Rice is overcooked or mushy.	Too much water; incorrect rice-to-water ratio.	Reduce water amount next time; follow recommended ratios.
Rice cooker does not turn on.	No power; power cord not properly connected.	Check if the power cord is securely plugged into both the cooker and the wall outlet. Test the outlet with another appliance.
Steam leaks from the lid.	Lid not closed properly; inner pot not seated correctly; seal damaged.	Ensure the lid is fully closed and the inner pot is seated flat. Check the lid seal for damage.
Food sticks to the inner pot.	Insufficient water; inner pot coating damaged; not using the correct cooking function.	Ensure proper water levels. Avoid using metal utensils. If coating is damaged, consider replacement.

If the problem persists after trying these solutions, please contact Mayer customer support for assistance.

## SPECIFICATIONS

**Model:** MMRC08D-WE

**Brand:** Mayer

**Capacity:** 0.8 Liters

**Power Source:** Electric

**Product Dimensions (L x W x H):** 24D x 21.5W x 21.5H cm

**Inner Pot Material:** Non-stick ceramic coated, 2mm thick, 5 layers

**Special Features:** Sensor-touch control panel, LED display, 6 Preset cooking functions, Automatic keep warm (up to 24 hours), Detachable inner cap, Dual temperature sensor, Non-slip feet, Over-Heating Protection, Preset timer (up to 24 hours).

**Included Components:** Instruction Manual, Steam Rack, Rice Spatula, Measuring Cup

**Care Instructions:** Hand Wash (inner pot and accessories)

## WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Mayer website. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical support, spare parts, or service inquiries, please contact Mayer customer service:

**Website:** [www.mayer.sg](http://www.mayer.sg) (Example, actual URL may vary)

**Customer Service Contact:** Refer to the product packaging or official website for local contact details.

When contacting support, please have your product model number (MMRC08D-WE) and purchase date ready.