



Manuals.plus /

› Electrolux /

› Electrolux Renew 800 Steam Iron User Manual

## Electrolux E8ST2-80G

# Electrolux Renew 800 Steam Iron User Manual

Model: E8ST2-80G | Brand: Electrolux

## 1. INTRODUCTION

---

Thank you for choosing the Electrolux Renew 800 Steam Iron. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before first use and keep it for future reference.

The Electrolux Renew 800 Steam Iron is designed for precise garment care, offering high-pressure steam and customized programs for professional results. Its RESILIUM Ski 264 soleplate is scratch-resistant and glides smoothly over various fabrics. With a large 1.2-liter water tank and smart headlight, it ensures efficient and convenient ironing.



Figure 1.1: Electrolux Renew 800 Steam Iron and Base Unit.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the iron.
- Use the iron only for its intended use.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
- Always turn the iron OFF before plugging or unplugging from the electrical outlet. Never pull on the cord to disconnect from the outlet; instead, grasp plug and pull to disconnect.

- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with water or emptying, and when not in use.
- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron; take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down – there may be hot water in the reservoir.

**SAVE THESE INSTRUCTIONS.**

### **3. PRODUCT COMPONENTS**

---

Familiarize yourself with the main parts of your Electrolux Renew 800 Steam Iron:

- **Iron Unit:** The handheld part with the soleplate and controls.
- **Soleplate:** RESILIUM Ski 264 scratch-resistant soleplate with steam holes.
- **Water Tank:** Large 1.2-liter removable tank for water.
- **Base Unit:** Houses the water tank and provides power and steam generation.
- **Steam Hose:** Connects the iron unit to the base unit for steam delivery.
- **Control Panel:** Buttons and indicators for power, steam settings, and temperature.
- **Smart Headlight:** Integrated light on the iron for improved visibility.



Figure 3.1: Overview of the Electrolux Renew 800 Steam Iron components.

## 4. SETUP AND FIRST USE

---

1. **Unpacking:** Carefully remove the iron and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Positioning:** Place the base unit on a stable, heat-resistant surface, preferably near an electrical outlet and an ironing board.
3. **Filling the Water Tank:**
  - Remove the water tank from the base unit.
  - Fill the tank with clean tap water up to the 'MAX' indicator. Distilled or demineralized water is recommended to prevent limescale buildup, especially in hard water areas.
  - Securely reinsert the water tank into the base unit.



## Headlight

Smart headlight for better visibility.  
Never miss a crease again

Figure 4.1: Filling the water tank.

4. **Connecting Power:** Plug the power cord into a grounded electrical outlet. The iron will enter standby mode.
5. **Initial Heating:** Press the power button. The iron will begin to heat up. The smart headlight will indicate when the iron is ready for use. For first use, it is recommended to iron an old cloth to remove any manufacturing residues.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Selecting Ironing Mode

The Electrolux Renew 800 features intelligent garment care with personalized programs. Simply touch the control panel to select the desired mode based on fabric type. The iron automatically adjusts temperature and steam output.



Figure 5.1: Smart headlight in operation, ensuring no creases are missed.

## 5.2. Using High-Pressure Steam

For stubborn creases, utilize the high-pressure steam function. The iron delivers 7.5 bar steam pressure and powerful steam shots of 460 g/min.

- Press the steam trigger/button on the iron handle to activate continuous steam.
- For an extra burst of steam, press the steam shot button. This is ideal for vertical steaming of hanging garments or curtains.



## High-pressure steam

High-pressure steam of 7.5 bar and powerful steam shots of 460 g to de-wrinkle the toughest creases

Figure 5.2: High-pressure steam in action.

### 5.3. Ironing Tips

- Always check the garment's care label before ironing.
- Start with fabrics requiring lower temperatures and progress to higher temperatures.
- Iron delicate fabrics with a pressing cloth or inside out.
- For best results, stretch the fabric taut while ironing.

## 6. MAINTENANCE AND CARE

### 6.1. Cleaning the Soleplate

The RESILIUUM Ski 264 soleplate is designed to be scratch-resistant. To clean it:

- Ensure the iron is unplugged and completely cool.
- Wipe the soleplate with a damp cloth and a non-abrasive liquid cleaner, if necessary.

- Do not use abrasive scouring pads or metal cleaners as these can damage the soleplate.



## Large water tank

Large 1.2-litre water tank to handle more laundry in one go. Iron for longer and spend less time refilling

Figure 6.1: The RESILIUM Ski 264 soleplate.

### 6.2. Anti-Calc Function

The iron is equipped with an anti-calc function to reduce limescale buildup. Regular use of distilled or demineralized water will further prolong the life of your iron. Refer to the specific instructions provided with your iron for details on activating or maintaining the anti-calc system, if applicable.

### 6.3. Storage

- After each use, unplug the iron and allow it to cool completely.
- Empty any remaining water from the tank to prevent mineral buildup and leaks.
- Store the iron and base unit in a safe, dry place, out of reach of children.

## 7. TROUBLESHOOTING

---

| Problem                         | Possible Cause   | Solution  |
|---------------------------------|--|---|
| Iron does not heat up.          | Not plugged in; power outlet faulty; iron not turned on.                   | Check power connection; try another outlet; press the power button.                         |
| No steam or insufficient steam. | Water tank empty; iron not hot enough; steam holes clogged.                | Fill water tank; wait for iron to reach operating temperature; clean soleplate steam holes. |
| Water leaking from soleplate.   | Temperature too low for steam; overfilled water tank; iron not horizontal. | Increase temperature setting; do not overfill tank; keep iron horizontal during steaming.   |
| White flakes on clothes.        | Mineral deposits from hard water.  | Use distilled or demineralized water; perform anti-calc cleaning.                           |

If the problem persists after trying these solutions, please contact Electrolux customer support.

## 8. SPECIFICATIONS

| Feature                | Detail   |
|------------------------|--|
| Brand                  | Electrolux   |
| Model Number           | E8ST2-8OG  |
| Power                  | 2400 Watts   |
| Voltage                | 230 Volts  |
| Dimensions (L x W x H) | 26 x 28.1 x 36 cm  |
| Weight                 | 460 Grams  |
| Water Tank Capacity    | 1.2 Liters   |
| Steam Pressure         | 7.5 bar  |
| Steam Shot             | 460 g/min  |
| Soleplate Material     | RESILIUM Ski 264 (Scratch-resistant stainless steel)     |
| Special Features       | High-pressure steam, anti-calc function, smart headlight |
| Material               | Recycled Plastic (main body)                             |

## 9. WARRANTY AND SUPPORT

This Electrolux product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

For technical support, service, or to inquire about spare parts, please visit the official Electrolux website or contact their customer service department. Contact information can typically be found on the Electrolux website or in the product packaging.

**Online Support:** [www.electrolux.com](http://www.electrolux.com)

