

LEHMANN LHODF-1880

LEHMANN XXL 8L Air Fryer Instruction Manual

MODEL: LHODF-1880

1. Introduction

Thank you for choosing the LEHMANN XXL 8L Air Fryer. This appliance is designed to cook your favorite foods with little to no oil, providing a healthier alternative to traditional frying methods. Please read this instruction manual thoroughly before first use to ensure safe and optimal operation. Keep this manual for future reference.

Important Safety Instructions

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow proper air circulation.

2. Product Overview and Components

The LEHMANN XXL 8L Air Fryer consists of several key components designed for efficient and convenient cooking.



Image: The LEHMANN XXL 8L Air Fryer main unit, with its removable cooking basket and crisper plate shown separately.

Components:

1. **Main Unit:** Houses the heating element, fan, and control panel.
2. **Control Panel:** LED touch screen for setting time, temperature, and selecting programs.
3. **Cooking Basket:** Removable, non-stick basket for holding food during cooking.
4. **Crisper Plate:** Sits inside the cooking basket, allowing air to circulate around food for even cooking and crisping.
5. **Handle:** Ergonomic handle for safely removing and inserting the cooking basket.
6. **Air Outlet Vent:** Located at the rear of the appliance for hot air exhaust.
7. **Power Cord:** For connecting the appliance to an electrical outlet.

3. Setup

Before First Use:

1. **Unpack:** Remove all packaging materials, stickers, and labels from the appliance.
2. **Clean Components:** Wash the cooking basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely. The main unit can be wiped with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance to allow for proper air circulation. Do not place it directly under cabinets.
4. **Initial Run (Optional):** To eliminate any manufacturing odors, you may run the air fryer empty for about 10-15 minutes at 180°C (350°F). Ensure the area is well-ventilated during this process.

4. Operating Instructions

The LEHMANN Air Fryer features an intuitive LED touch screen for easy operation.



Image: A user interacting with the LED touch screen of the air fryer, showing temperature and time settings.

Control Panel Overview:

- **Power Button:** Turns the appliance on/off.
- **Temperature/Time Controls (+/-):** Adjusts cooking temperature and time.
- **Preheat:** Activates the preheating function.
- **Start/Pause:** Begins or pauses the cooking cycle.
- **Stop/Cancel:** Stops the current cooking program.
- **Turn Reminder:** Activates a reminder to shake or turn food during cooking.
- **Preset Program Icons:** Select from 12 optimized cooking programs.

Using Preset Programs:

The air fryer comes with 12 pre-programmed settings for common dishes. These settings automatically adjust temperature and time for optimal results.



Image: The air fryer's control panel displaying various preset cooking options like Air Fry, Fries, Roast, Broil, Wings, Bacon, Reheat, Bake, Dehydrate, Keep Warm, Preheat, and Turn Reminder, each with recommended temperature and time.

1. Place food in the cooking basket, ensuring the crisper plate is inserted. Do not overfill.
2. Insert the cooking basket back into the main unit.
3. Press the Power button to turn on the display.
4. Select the desired preset program by tapping its icon on the touch screen. The display will show the default temperature and time for that program.
5. You can adjust the default temperature and time using the +/- buttons if needed.
6. Press the Start button to begin cooking.
7. Some programs may include a 'Turn Reminder' halfway through cooking. The appliance will beep, and the 'Turn Reminder' icon will flash. Carefully remove the basket, shake or turn the food, and reinsert the basket to resume cooking.
8. Once cooking is complete, the air fryer will beep. Carefully remove the basket and transfer food to a serving dish.

Manual Operation:

For custom recipes or specific cooking needs, you can manually set the temperature and time.

1. Place food in the cooking basket and insert it into the main unit.

2. Press the Power button.
3. Use the 'Temp' +/- buttons to set the desired temperature (range: 76-200°C).
4. Use the 'Time' +/- buttons to set the desired cooking time.
5. Press the Start button to begin cooking.

Preheating Function:

Preheating can improve cooking results for certain foods.

1. Press the Power button.
2. Press the 'Preheat' button. The display will show a default preheat temperature and time.
3. Adjust temperature and time if necessary using the +/- buttons.
4. Press Start. The air fryer will preheat. Once complete, it will beep, and you can then add your food and start the cooking cycle.

5. Cleaning and Maintenance

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

Cleaning the Cooking Basket and Crisper Plate:



Image: The removable cooking basket and crisper plate of the air fryer are shown inside a dishwasher, indicating they are dishwasher-safe.

- Always unplug the air fryer and allow it to cool completely before cleaning.
- The cooking basket and crisper plate are dishwasher safe. Alternatively, they can be washed by hand with hot water, dish soap, and a non-abrasive sponge.
- For stubborn food residue, soak the basket and plate in warm, soapy water for about 10-15 minutes before cleaning.
- Avoid using metal utensils or abrasive cleaning materials on the non-stick coating, as this can damage the surface.

Cleaning the Main Unit:

- Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Clean the interior of the appliance with a damp cloth and mild detergent if necessary. Ensure no water enters the heating element area.
- Never immerse the main unit in water or any other liquid.

Storage:

Ensure the air fryer is clean and completely dry before storing. Store it in a cool, dry place.

6. Troubleshooting

If you encounter any issues with your air fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
Food is not cooked evenly.	Basket is overcrowded. Food pieces are too large. Food was not shaken/turned.	Cook food in smaller batches. Cut food into smaller, more uniform pieces. Shake or turn food halfway through cooking.
White smoke comes from the appliance.	Grease residue from previous use. Fatty food being cooked.	Clean the basket and crisper plate thoroughly after each use. Remove excess fat from food before cooking.
Food is not crispy.	Not enough oil (if applicable). Temperature too low or time too short.	Lightly coat food with oil for extra crispiness. Increase temperature or cooking time. Ensure crisper plate is in place.

If the problem persists after checking these solutions, please contact customer support.

7. Specifications

Technical details for the LEHMANN XXL 8L Air Fryer, Model LHODF-1880.



Image: A visual representation of the air fryer's dimensions, indicating a height of 35 cm, width of 25 cm, and depth of 27 cm.

Feature	Detail
Model Number	LHODF-1880
Capacity	8 Liters
Power	1800 Watts
Voltage	230 Volts
Temperature Range	76-200°C
Material	Metal, Plastic
Color	Black/Silver
Product Dimensions (L x W x H)	35.5 x 37.6 x 40.2 cm

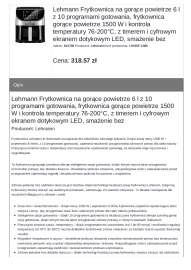



Feature	Detail
Item Weight	6.1 Kilograms
Special Features	Temperature Control, Timer, Programmable, Automatic Shut-off

8. Warranty and Support

LEHMANN products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact LEHMANN customer support.

If you have any questions, require technical assistance, or need to report an issue with your product, please contact our customer service team. Contact details can typically be found on the LEHMANN official website or on your purchase documentation.

Related Documents

	<p>Lehmann Air Fryer 6L - 1500W, 10 Programs, LED Touchscreen for Healthy Cooking</p> <p>Discover the Lehmann Air Fryer with a 6L capacity and 1500W power. Features 10 cooking programs, precise temperature control (76-200°C), and an LED touchscreen for healthy, oil-free cooking. Ideal for family meals.</p>
	<p>LEHMANN CAPTURA: Smart Battery-Powered RFID Furniture Lock</p> <p>Discover the LEHMANN CAPTURA, a smart, battery-powered RFID electronic lock for furniture. Featuring long battery life, flexible installation, and smartphone operation via NFC, it's ideal for lockers, office, and hotel furniture.</p>
	<p>Lehmann Captura 100 MIFARE® Quick Start Guide</p> <p>This guide provides instructions for installing, configuring, and operating the Lehmann Captura 100 MIFARE® electronic furniture lock. It covers features like different operating modes, user card management, safety precautions, and troubleshooting.</p>
	<p>LEHMANN Central Control Panel Flat/Open Frame: Operating Instructions</p> <p>Comprehensive operating instructions for the LEHMANN Central Control Panel (flat/open frame) with RFID lock management, covering installation, configuration, and application usage for secure access control in office environments.</p>

