

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Google TV](#) /

› [Google TV 7000 Series 4K Ultra HD LED Television User Manual](#)

Google TV 7000 Series (Model 43PUL7652/F7)

Google TV 7000 Series 4K Ultra HD LED Television User Manual

Model: 7000 Series (43PUL7652/F7)

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Google TV 7000 Series 4K Ultra HD LED Television. Please read these instructions thoroughly before operating the device and retain them for future reference.



Front view of the Google TV 7000 Series 4K Ultra HD LED Television, showcasing its slim bezel and display.

2. SETUP

2.1 Unboxing and Package Contents

Carefully remove all items from the packaging. Ensure all components are present:

- Google TV 7000 Series Television
- Remote control
- Batteries for remote control
- Tabletop stand
- Screws for tabletop stand
- Quick start guide
- User Manual (this document)

2.2 Connecting Power

Connect the power cord to the TV's power input, then plug the other end into a wall outlet. Ensure the power outlet is easily accessible.

2.3 Connecting External Devices

Your television supports various connectivity options:

- **HDMI:** Connect devices like Blu-ray players, game consoles, or set-top boxes to the HDMI ports. This model features Audio Return Channel (HDMI 2).
- **USB:** Use the USB port for media playback or connecting compatible accessories.
- **Ethernet:** For a stable wired internet connection, connect an Ethernet cable to the LAN port.
- **Headphone Out:** Connect headphones for private listening.
- **Digital Audio Out (Optical):** For connecting to external audio systems.
- **CVBS+Audio L/R In:** For connecting older analog devices.

2.4 Initial Setup

Upon first power-on, the TV will guide you through the initial setup process. This includes:

- Language selection
- Connecting to a Wi-Fi network or using Ethernet
- Signing in with your Google account to access Google TV features and apps
- Scanning for available channels (ATSC, NTSC)

2.5 Mounting Options

You can place your TV on a tabletop using the included stand or mount it on a wall.

- **Tabletop Stand:** Attach the tabletop stand using the provided screws as per the quick start guide.
- **Wall Mount:** For wall mounting, use a VESA compatible mount (600 x 400 mm). Consult a professional for wall mounting to ensure safety and proper installation.

3. OPERATING INSTRUCTIONS

3.1 Remote Control Overview

The remote control allows you to navigate the Google TV interface, adjust settings, and control playback. It supports voice control for Google Assistant.

3.2 Basic Functions

- **Power:** Press the power button to turn the TV on or off.
- **Volume:** Use the volume buttons to adjust the sound level.
- **Channels:** Use the channel buttons to switch between TV channels.
- **Input:** Select the desired input source (HDMI, USB, etc.).

3.3 Google TV Interface Navigation

Use the directional pad and 'OK' button on your remote to navigate the Google TV home screen. The home screen provides access to your installed apps, recommended content, and settings.

3.4 Smart Features

- **Chromecast Built-in:** Cast content from your compatible mobile devices or computer directly to your TV.
- **Google Assistant Built-in:** Press the Google Assistant button on your remote to use voice commands for searching content, controlling smart home devices, getting information, and more.
- **Streaming Apps:** Access popular streaming services like Netflix, YouTube, Discovery+, Tubi TV, and Prime Video directly from the Google TV interface.

3.5 Picture and Sound Settings

Customize your viewing and listening experience through the TV's settings menu:

- **Picture Style:** Choose from various preset picture modes or customize settings like brightness, contrast, color, and sharpness. Features include Dynamic contrast, Film mode, Blue stretch, and Custom Color management.
- **HDR Support:** The TV supports HDR10 and HLG for enhanced contrast and color with compatible content.
- **Game Mode:** Optimize picture settings for gaming to reduce input lag.
- **Sound Style:** Select sound presets or adjust bass and treble. Features include Dolby Audio and Auto Volume Leveling.
- **Aspect Ratio:** Adjust the screen aspect ratio (e.g., Automatic, 4:3, Movie Expand, Full).

3.6 Connectivity

Your TV offers various ways to connect to networks and devices:

- **Wi-Fi:** Connect wirelessly to your home network for internet access.
- **Bluetooth:** Connect compatible Bluetooth devices such as headphones or game controllers.
- **Ethernet:** Provides a stable wired internet connection.

4. MAINTENANCE

4.1 Cleaning the Screen and TV Body

- Always unplug the TV before cleaning.
- Use a soft, dry, lint-free cloth to gently wipe the screen and TV body.
- For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. Never spray cleaner directly onto the screen.
- Avoid using abrasive cleaners, waxes, or solvents.

4.2 Software Updates

Your Google TV may receive automatic software updates to improve performance and add new features. Ensure your TV is connected to the internet to receive these updates. You can also manually check for updates in the settings menu.

4.3 Remote Control Care

Replace batteries when the remote control's response becomes sluggish. Do not mix old and new batteries or different types of batteries. Keep the remote control away from moisture and direct sunlight.

5. TROUBLESHOOTING

If you encounter issues with your television, refer to the following common solutions:

Problem	Possible Solution
No power	Check if the power cord is securely plugged into both the TV and the wall outlet. Ensure the outlet is functional.
No picture, but sound is present	Verify the correct input source is selected. Check external device connections.
No sound, but picture is present	Check the volume level and mute status. Ensure external audio systems are properly connected and powered on.
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Network connection issues	Restart your router and modem. Reconnect to the Wi-Fi network or check the Ethernet cable connection.
Picture quality issues (e.g., pixelation)	Check the signal strength for broadcast channels. For streaming content, ensure a stable internet connection. Adjust picture settings.

5.1 Factory Reset

If problems persist, a factory reset may resolve them. This will erase all personal settings and installed apps, returning the TV to its original factory state. Consult the on-screen menu for the factory reset option, usually found under System or Device Preferences in Settings.

6. SPECIFICATIONS

Key technical specifications for the Google TV 7000 Series 4K Ultra HD LED Television:

Feature	Specification
Screen Size	43 Inches
Display Technology	LCD UltraHD Display, LED Backlight
Resolution	4K (2160p)
Refresh Rate	120 PMR (Picture Motion Rate)
HDR Format Supported	HDR10, HLG
Operating System	Android 11 (Google TV)
Connectivity Technology	Bluetooth, Ethernet, USB, Wi-Fi
Audio Features	Dolby Audio, Auto Volume Leveling
Special Features	Chromecast Built-in, Google Assistant Built-in, Game Mode, Digital Noise Reduction, MPEG artifact reduction, Dynamic contrast

Feature	Specification
Product Dimensions (D x W x H)	9.8"D x 37.9"W x 23.9"H
Item Weight	14.99 Pounds
VESA Mount Standard	600 x 400 mm
Manufacturer	Philips
Model Number	43PUL7652/F7
UPC	609585254893

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This product comes with a Limited Warranty. Please refer to the warranty card included in your package or contact the manufacturer for specific terms and conditions regarding coverage and duration.

7.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact the manufacturer, Philips, or your retailer. Have your model number (43PUL7652/F7) and serial number ready when contacting support.