



[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny 13' x 13' Pop Up Gazebo User Manual

Outsunny 84C-353V00BN

Outsunny 13' x 13' Pop Up Gazebo User Manual

Model: 84C-353V00BN

INTRODUCTION

Thank you for choosing the Outsunny 13' x 13' Pop Up Gazebo. This manual provides essential information for the safe and efficient setup, operation, maintenance, and troubleshooting of your new gazebo. Please read it thoroughly before assembly and retain it for future reference.



Figure 1: Outsunny 13' x 13' Pop Up Gazebo with included accessories.

SAFETY INFORMATION

- **WARNING:** NEVER leave your shelter unattended.
- Take down the gazebo before a major storm, strong winds, or heavy rain rolls through.
- Always mount the gazebo to the ground using the provided stakes and ropes to ensure stability.
- Ensure all locking mechanisms are fully engaged during setup to prevent collapse.
- Keep children and pets away from the gazebo during assembly and disassembly.
- Do not use open flames or heating devices inside or near the gazebo.
- Distribute weight evenly if hanging anything from the frame.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- 1 x Pop Up Gazebo Frame (Foldable)
- 1 x Gazebo Canopy Cover (UV50+ Oxford Fabric)
- 4 x Mesh Sidewalls with Zippers

- 1 x Wheeled Carry Bag
- 4 x Leg Weight Bags (fillable with water or sand)
- 8 x Guy Ropes
- 8 x Ground Stakes



Figure 2: Included accessories for the Outsunny Pop Up Gazebo.

SETUP INSTRUCTIONS

Assembly typically requires two people for ease and safety.

1. **Unpack and Position:** Remove the folded gazebo frame from the wheeled carry bag. Place the frame in the desired location, ensuring ample space for expansion.
2. **Expand the Frame:** With a person at opposite corners, gently pull the frame outwards until it is partially expanded. Do not force it.

3. **Attach Canopy Cover:** Drape the canopy cover over the partially expanded frame. Ensure the corners and peak align correctly. Secure the canopy to the frame using the hook-and-loop fasteners or ties provided.
4. **Fully Extend Frame:** Continue to pull the frame outwards until it is fully extended and the top locking mechanisms click into place.
5. **Adjust Height:** Press the push-button on each leg to adjust the height to one of the three available settings. Ensure all legs are locked at the same height for stability.



Figure 3: Detail of the adjustable height mechanism on the gazebo leg.


6. **Attach Mesh Sidewalls:** If desired, attach the mesh sidewalls to the gazebo frame using the integrated zippers and hook-and-loop fasteners.
7. **Secure with Weight Bags:** Fill the four leg weight bags with approximately 21 lbs of water or 28 lbs of sand each. Attach one filled weight bag to the base of each leg for added stability.
8. **Anchor with Ropes and Stakes:** Use the provided guy ropes and ground stakes to firmly anchor the gazebo to the ground. Attach ropes to the canopy corners and stake them into the ground at an angle.




MULTIPLE STABILIZATION SETTING




Four Leg Weight Bags

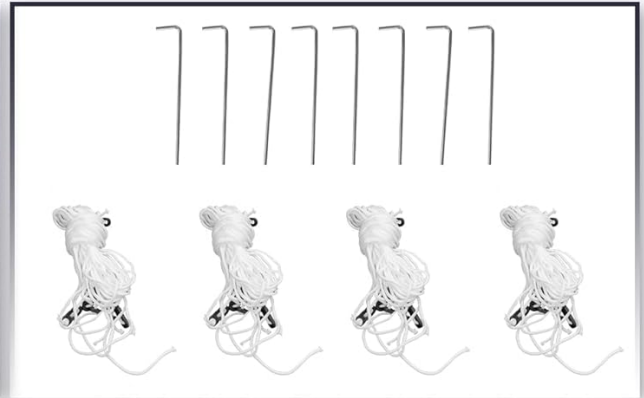

Guy Ropes & Ground Stakes

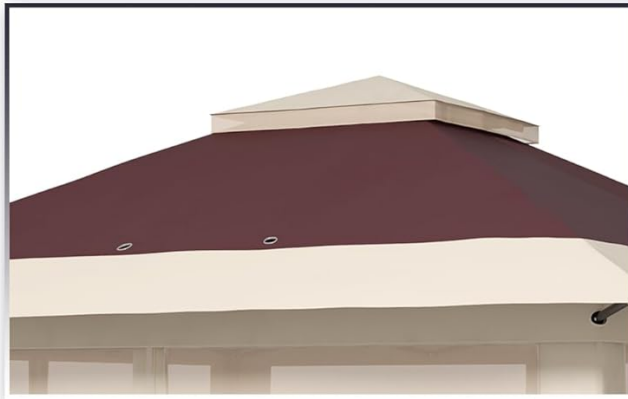 

Double Roof for Excellent Airflow

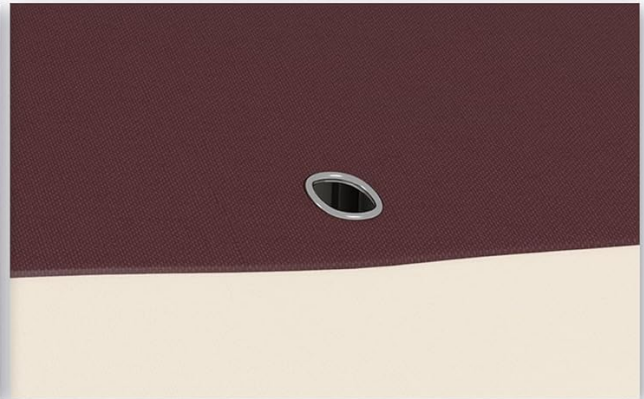 

Drain Holes to Prevent
Water from Accumulating

Figure 4: Illustration of leg weight bags, guy ropes, and ground stakes for stabilization.

OPERATING INSTRUCTIONS

The Outsunny Pop Up Gazebo is designed for temporary outdoor shelter. It provides UV50+ protection from the sun and can offer protection from light rain.

- **Sun Protection:** The UV50+ rated canopy effectively blocks harmful UV rays, providing a shaded area for relaxation or activities.
- **Airflow:** The double-tier roof design promotes airflow, reducing heat buildup under the canopy.
- **Water Drainage:** The canopy features drain holes to prevent water from accumulating on the roof during light rainfall.
- **Insect Protection:** Utilize the mesh sidewalls to create an enclosed space, protecting against insects while maintaining ventilation.



Figure 5: The Outsunny Gazebo providing shade and shelter in an outdoor environment.

MAINTENANCE

- **Cleaning Canopy:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely before folding and storing.
- **Frame Care:** Inspect the alloy steel frame periodically for any signs of rust or damage. The frame is powder-coated for resistance to water and warping. Clean with a damp cloth as needed.
- **Storage:** When not in use, or during adverse weather conditions, disassemble the gazebo and store it in its wheeled carry bag in a dry, protected area.



Figure 6: The convenient wheeled carry bag for transport and storage.

- **Component Check:** Regularly check all ropes, stakes, and fasteners for wear and tear. Replace any damaged components to ensure continued stability and safety.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo is unstable or wobbly.	Legs not fully extended/locked; insufficient anchoring; uneven ground; strong winds.	Ensure all legs are fully extended and locked at the same height. Use all provided weight bags, ropes, and stakes. Relocate to level ground if possible. Disassemble in strong winds.
Canopy sags or collects water.	Canopy not properly stretched; frame not fully extended; excessive rainfall.	Ensure canopy is taut and securely fastened to the frame. Verify frame is fully extended. The gazebo is designed for light rain; disassemble during heavy downpours.

Problem	Possible Cause	Solution
Difficulty extending or collapsing frame.	Frame joints are stiff; mechanism is misaligned.	Apply light lubricant to moving joints if stiff. Ensure no fabric or debris is caught in the mechanism. Gently wiggle and pull/push, do not force. Ensure two people are assisting.
Mesh sidewalls do not fit correctly.	Sidewalls are misaligned or attached incorrectly.	Ensure sidewalls are oriented correctly (e.g., zippers facing inwards/outwards as intended). Re-attach, ensuring all hook-and-loop fasteners and zippers are properly aligned.

SPECIFICATIONS

Brand:	Outsunny
Model Number:	84C-353V00BN
Material:	Polyester (Canopy), Alloy Steel (Frame)
Overall Dimensions:	154.3" L x 154.3" W x 111.4" H (392cm L x 392cm W x 283cm H)
Folded Dimensions:	9.8" L x 9.8" W x 49.2" H (25cm L x 25cm W x 125cm H)
Item Weight:	45.1 lbs (20.45 kg)
UV Protection:	UPF 50+
Water Resistance:	Water Resistant
Assembly Required:	Yes
Color:	Brown
UPC:	196393341186

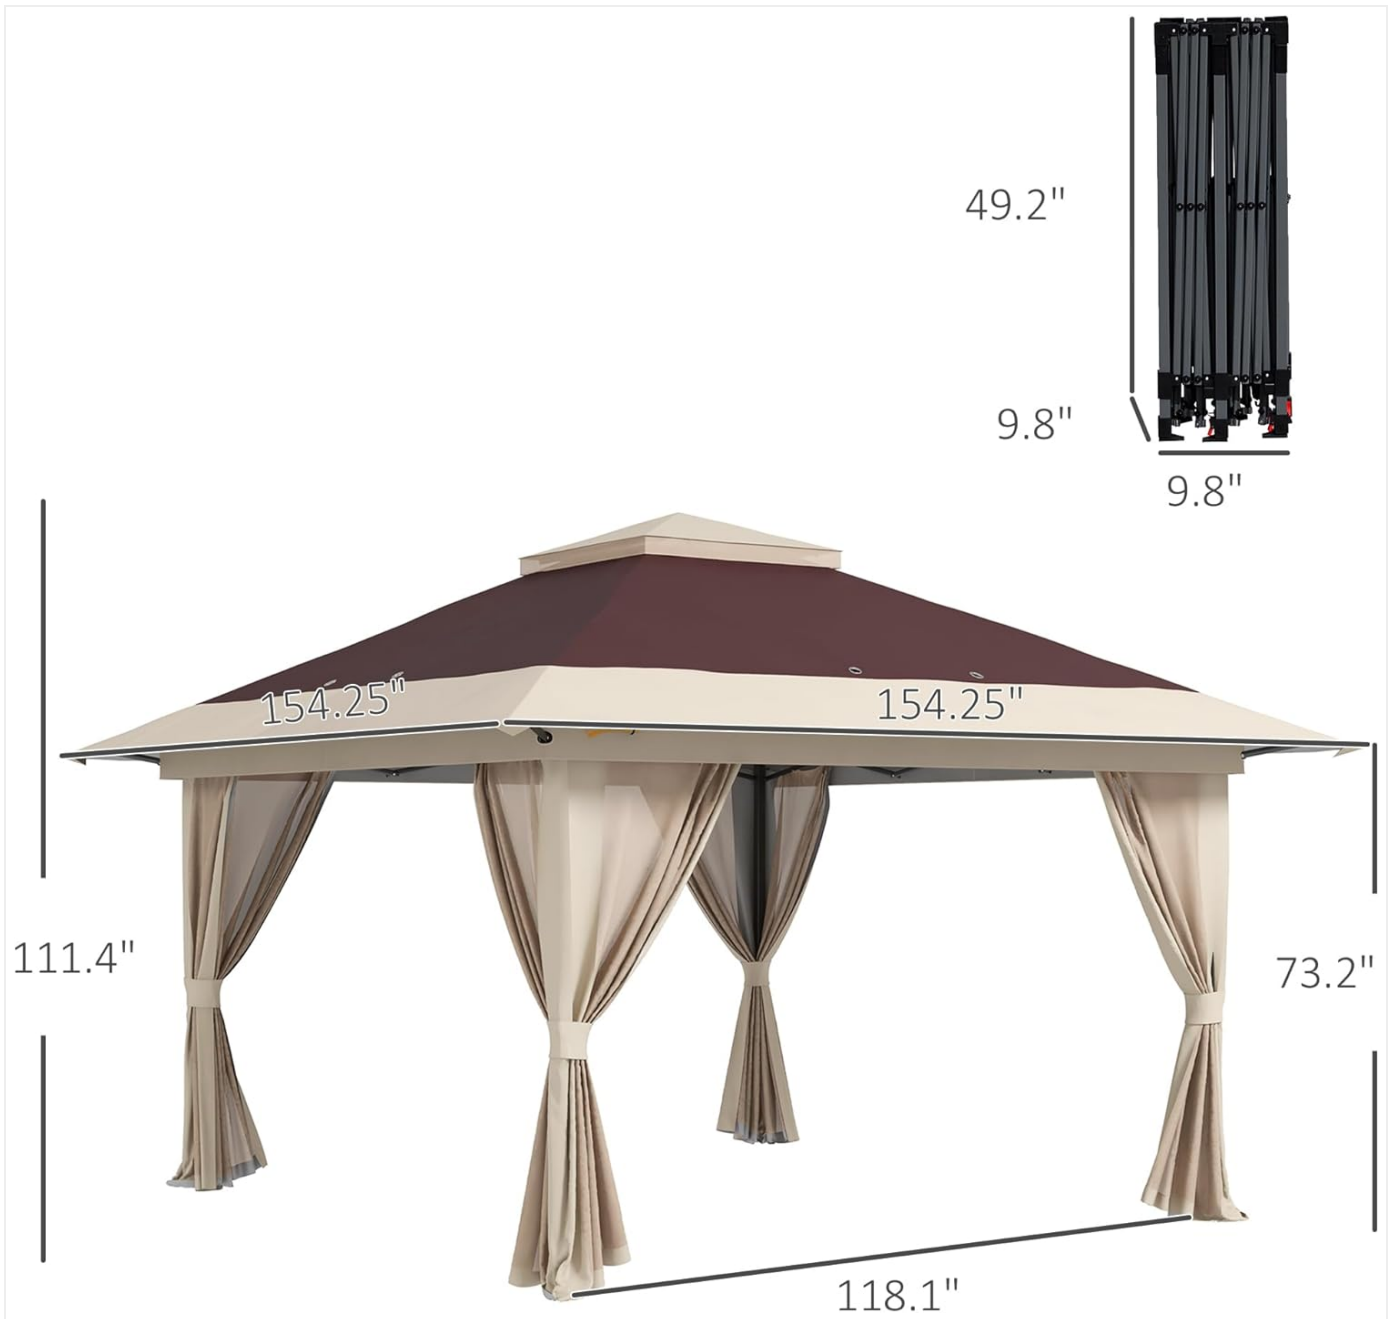 


Figure 7: Detailed dimensions of the Outsunny Pop Up Gazebo.

MATERIALS DISPLAY

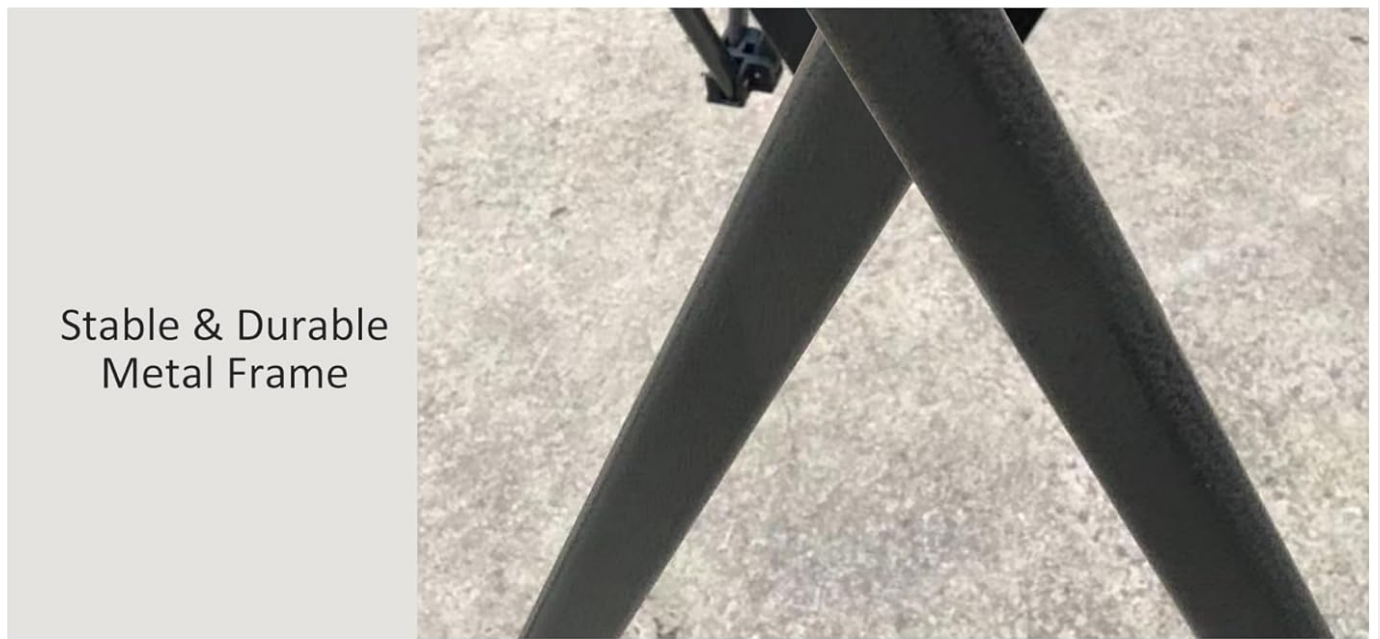 
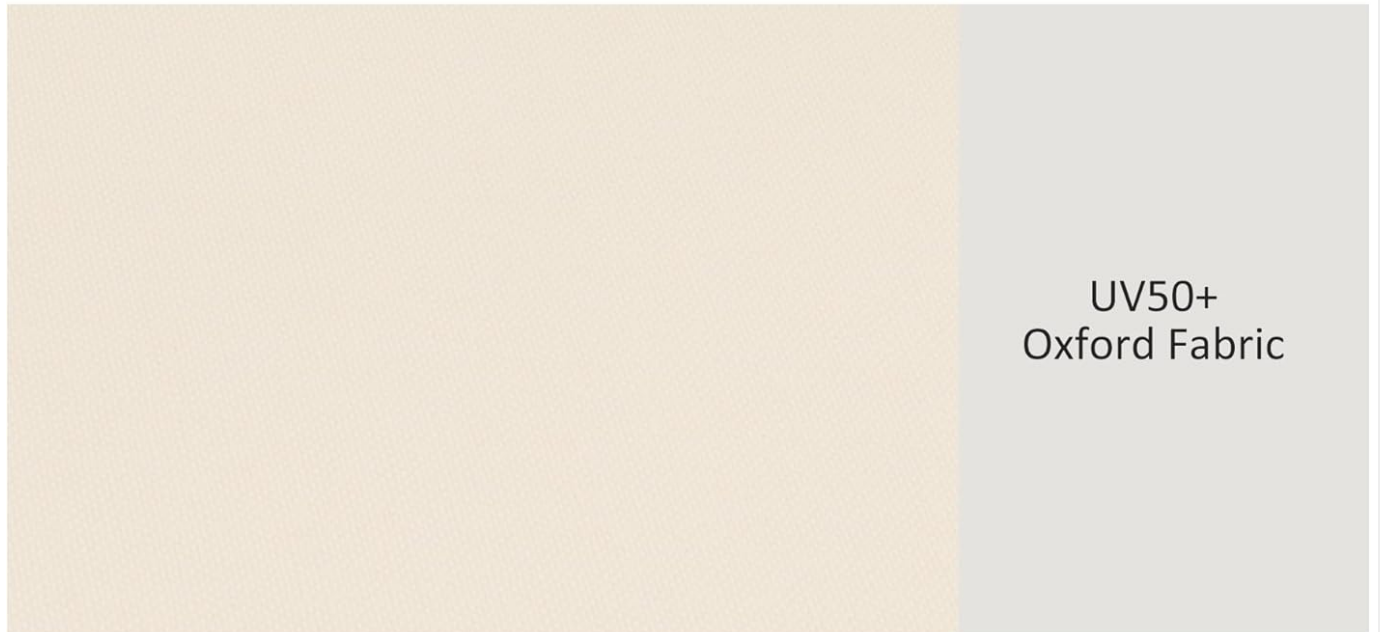 


Figure 8: Display of the UV50+ Oxford Fabric and Stable & Durable Metal Frame materials.

WARRANTY AND SUPPORT

This product is sold by Aosom Direct. For information regarding returns, replacements, or customer support, please refer to the seller's policies on the purchase platform or contact Aosom Direct directly.

- **Returns:** Typically, a 30-day easy return policy applies. Please check your purchase details for specific terms.
- **Customer Support:** For assistance with product issues, missing parts, or general inquiries, please contact the seller, Aosom Direct.
- **Protection Plans:** Extended protection plans may be available for purchase separately. These plans offer additional coverage beyond the standard product terms.

For further assistance, you may visit the [Outsunny Store on Amazon](#).



© 2024 Outsunny. All rights reserved.

For questions or support, please refer to the contact information provided by your retailer.