

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Fockety](#) /

› [Fockety Multifunctional Electric Cooker \(Model: Fockety0dx981fhcp-12\) Instruction Manual](#)

Fockety Fockety0dx981fhcp-12

Fockety Multifunctional Electric Cooker Instruction Manual

Brand: Fockety | **Model:** Fockety0dx981fhcp-12

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** The heating base and pot are designed separately for easier cleaning and enhanced electrical safety. Ensure the heating base remains dry. Do not immerse the heating base in water or other liquids.
- **Temperature Control:** The portable electric cooker features 2 temperature control settings. Always monitor the appliance during operation.
- **Automatic Shutoff:** The appliance is equipped with a heat handle and high-temperature automatic shutoff feature for safety.
- **Even Heating:** The multifunctional electric pot utilizes a three-dimensional high-temperature heat transfer design with an 11cm heating diameter, ensuring even heating of ingredients.
- **Power Cord:** Use only the provided power cord. Unplug the appliance when not in use or before cleaning.
- **Supervision:** Close supervision is necessary when any appliance is used by or near children.
- **Ventilation:** Ensure adequate ventilation around the appliance during use.

2. PRODUCT OVERVIEW

The Fockety Multifunctional Electric Cooker is a versatile and portable appliance designed for various cooking needs. It features a durable stainless steel pot and a separate heating base.

Included Components:

- Electric Pot (1.6L capacity, Stainless Steel)
- Heating Base with Temperature Control
- Glass Lid
- Power Cord
- Spatula

Key Features:

- **Foldable Handle:** Made of food-grade 304 stainless steel, durable, anti-corrosion, high-temperature resistant, and easy to clean.
- **2 Temperature Settings:** Easily adjust heat for different cooking requirements.
- **Separate Design:** Detachable pot from heating base for easy cleaning and safety.
- **Portable:** Compact design suitable for small kitchens, offices, dormitories, travel, camping, and RVs.



Figure 1: All components of the Fockety Multifunctional Electric Cooker.



Figure 2: The electric pot with its foldable handle extended for use.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the electric pot and lid with warm, soapy water. Rinse thoroughly and dry completely. Wipe the heating base with a damp cloth; do not immerse it in water.
3. **Assemble:** Place the clean electric pot securely onto the heating base. Ensure the pot is properly seated.
4. **Connect Power:** Insert the power cord into the designated socket on the heating base, then plug the other end into a standard 110V electrical outlet.

4. OPERATING INSTRUCTIONS

The electric cooker offers two temperature settings for versatile cooking.

General Operation:

1. Add desired ingredients and liquid to the electric pot. Do not exceed the 'MAX' fill line.

2. Place the lid on the pot.
3. Select the desired temperature setting using the control knob:
 - **Low Heat:** Ideal for simmering, keeping warm, or gentle cooking.
 - **High Heat:** Suitable for rapid boiling, stir-frying, or cooking quickly.
4. Monitor your food during cooking. The transparent glass lid allows for easy viewing.
5. Once cooking is complete, turn the control knob to 'OFF' and unplug the appliance from the wall outlet.

Cooking Examples:

- **Boiling Water:** Fill the pot with water up to the desired level (below MAX). Select 'High Heat'. Water will boil rapidly.
- **Cooking Noodles/Ramen:** Add water and bring to a boil on 'High Heat'. Add noodles and seasoning. Cook until desired tenderness, stirring occasionally with the provided spatula or wooden/bamboo chopsticks.
- **Stir-Frying:** Add a small amount of oil to the pot. Select 'High Heat'. Add ingredients like steak, chicken, or vegetables and stir-fry until cooked.
- **Heating Soup/Leftovers:** Add soup or leftovers to the pot. Select 'Low Heat' for gentle warming or 'High Heat' for quicker heating. Stir occasionally.



1.6L Soup Pot to cook a pot of comforting thick soup.

Figure 3: The electric cooker in action, demonstrating its use for preparing meals.



Figure 4: The electric cooker can also be used with a frying pan for stir-frying or cooking eggs.

Product Demonstration Video:

Video 1: A seller-provided demonstration of the Multifunctional Electric Cooker, showcasing its features and ease of use for various cooking tasks.

5. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and safe operation of your electric cooker.

1. **Unplug:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Clean Pot and Lid:** The electric pot and lid can be washed with warm, soapy water. Rinse thoroughly and dry completely.
3. **Clean Heating Base:** Wipe the exterior of the heating base with a soft, damp cloth. Do NOT immerse the heating base in water or any other liquid.
4. **Storage:** Store the appliance in a dry place. The detachable power cord can be stored inside the pot for convenience.

6. TROUBLESHOOTING

If you encounter any issues with your electric cooker, please refer to the following common troubleshooting tips:

- **Appliance Not Turning On:**
 - Ensure the power cord is securely plugged into both the appliance and a working electrical outlet.
 - Check if the outlet is functioning by plugging in another appliance.
- **Food Not Heating Evenly:**
 - Ensure the pot is properly seated on the heating base.
 - Stir food occasionally during cooking to promote even heat distribution.
- **Automatic Shutoff Activates:**
 - This is a safety feature. The appliance may have overheated or run out of liquid. Unplug, allow to cool, and check liquid levels before restarting.

If the problem persists, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Fockety
Model Number	Fockety0dx981fhcp-12
Capacity	1.6 Liters
Wattage	500 watts
Voltage	110 Volts
Material	Stainless steel
Color	Beige
Product Dimensions	8.66"D x 8.66"W x 5.91"H
Item Weight	3.15 pounds
Special Feature	Portable
Care Instructions	Wipe with Damp Cloth

8. WARRANTY AND SUPPORT

Fockety stands behind the quality of its products.

- **Warranty:** This product comes with a 1-year warranty from the date of purchase.
- **Customer Support:** For any questions, concerns, or technical assistance, please contact our customer support team. We aim to provide a professional and detailed reply within 24 hours.