

## LEHMANN LHODF-1880D

# LEHMANN LHODF-1880D 8L 1800W Air Fryer Instruction Manual

Model: LHODF-1880D

## 1. INTRODUCTION

Thank you for choosing the LEHMANN LHODF-1880D Air Fryer. This appliance utilizes advanced hot air technology to cook your favorite foods with little to no oil, offering a healthier alternative to traditional frying. Please read this manual thoroughly before first use to ensure safe and optimal operation. Keep this manual for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

**WARNING: Failure to follow these safety instructions may result in electric shock, fire, or serious injury.**

- Always place the appliance on a stable, heat-resistant surface, away from walls or other appliances to allow adequate ventilation.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not use accessories not recommended by the appliance manufacturer, as this may cause injuries.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- The appliance operates at high temperatures. Do not touch hot surfaces. Use handles or knobs.
- Ensure the food basket is properly inserted before operating.
- Overheat protection is integrated. If the appliance overheats, it will automatically shut off.

## 3. PRODUCT OVERVIEW

---

The LEHMANN LHODF-1880D Air Fryer features a sleek design with an intuitive digital touch screen for easy operation. It includes a removable non-stick basket and crisper plate for efficient cooking and cleaning.

### 3.1 Components

- Main Unit with Digital Control Panel
- Removable Frying Basket
- Crisper Plate
- Handle



Image: Front view of the LEHMANN LHODF-1880D Air Fryer, showcasing its digital control panel and brushed metal finish.



Image: The LEHMANN LHODF-1880D Air Fryer main unit, with its removable frying basket and crisper plate displayed separately.

### 3.2 Digital Control Panel

The control panel features an LED display and touch-sensitive buttons for various functions:

- **Temperature Display:** Shows current or set temperature.
- **Time Display:** Shows remaining or set cooking time.
- **Preheat Button:** Initiates preheating.
- **Start/Pause Button:** Starts or pauses cooking.
- **Stop/Cancel Button:** Stops the current program.
- **Temperature/Time Adjustment Buttons (+/-):** Adjusts temperature and time.
- **Pre-set Program Icons:** Selects from 12 pre-programmed cooking modes.

- **Turn Reminder:** Indicates when to shake or turn food.



Image: A hand interacting with the digital touch screen of the LEHMANN Air Fryer, highlighting the intuitive controls.

## 4. BEFORE FIRST USE

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Clean the frying basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a damp cloth.
4. Ensure all parts are completely dry before use.
5. Place the crisper plate inside the frying basket. Slide the basket back into the air fryer.

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Operation



1. Place the air fryer on a stable, level, heat-resistant surface.
2. Pull out the frying basket and place your ingredients inside. Do not overfill the basket.
3. Slide the frying basket back into the air fryer.
4. Plug the power cord into a grounded wall outlet. The display will illuminate.
5. **Manual Setting:** Press the Temperature/Time adjustment buttons to set your desired temperature (76-200°C) and time (1-60 minutes).
6. **Pre-set Programs:** Select one of the 12 pre-set program icons for common dishes. The appliance will automatically set the optimal temperature and time.
7. Press the **Start** button to begin cooking.
8. During cooking, you may pull out the basket to shake or turn food. The appliance will pause automatically and resume when the basket is reinserted.
9. When the timer reaches zero, the appliance will beep, indicating cooking is complete.
10. Carefully pull out the basket and empty the cooked food onto a plate.



Image: The LEHMANN Air Fryer with its basket pulled out, containing crispy fried chicken pieces, demonstrating its cooking capability.

## 5.2 Pre-set Programs

The air fryer offers 12 convenient pre-set programs for various food types. Simply select the icon corresponding to your

desired dish.



Image: A close-up of the air fryer's digital control panel, showing various food icons representing different pre-set cooking programs.

### 5.3 Healthy Cooking Technology

This air fryer uses 360° hot air circulation to cook food evenly and efficiently, reducing the need for excessive oil. This results in healthier meals with a crispy texture.



Image: An internal view of an air fryer illustrating the 360-degree hot air circulation technology for even cooking.

## 6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. Unplug the air fryer and allow it to cool completely before cleaning.
2. Remove the frying basket and crisper plate. These parts are dishwasher-safe.
3. For manual cleaning, wash the basket and crisper plate with hot water, dish soap, and a non-abrasive sponge.
4. Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. Clean the interior of the appliance with a damp cloth. If necessary, use a mild detergent.
6. Ensure all parts are completely dry before reassembling and storing the appliance.



Image: An air fryer basket placed inside a dishwasher, indicating its dishwasher-safe feature for easy cleaning.

## 7. TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
	No power at the outlet.	Check the circuit breaker or try another outlet.
Food is not cooked evenly.	Basket is overfilled.	Do not overfill the basket. Cook in smaller batches if necessary.
	Food was not shaken or turned.	Shake or turn food halfway through cooking for even results.
White smoke comes from the appliance.	Grease residue from previous use.	Clean the basket and crisper plate thoroughly after each use.
	Fatty ingredients are being cooked.	This is normal for fatty foods. Ensure the basket is clean.
Appliance suddenly stops during operation.	Overheat protection activated.	Unplug the appliance and let it cool down for at least 30 minutes before restarting.

## 8. SPECIFICATIONS

Feature	Detail
Brand	LEHMANN
Model Number	LHODF-1880D
Color	Black
Product Dimensions (L x W x H)	35.5 x 37.6 x 40.2 cm
Capacity	8 Liters
Power	1800 Watts
Voltage	230 Volts
Material	Metal, Plastic
Automatic Shut-off	Yes
Special Features	Automatic shut-off, Temperature control, Timer, Programmable
Item Weight	6.1 Kilograms
Temperature Range	76-200°C
Timer Range	1-60 minutes











Image: The LEHMANN Air Fryer with its key dimensions (height, width, depth) clearly labeled in centimeters.

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact LEHMANN customer service. Keep your proof of purchase for warranty claims.

**Related Documents - LHODF-1880D**

	<p><a href="#">Lehmann Firmware Updater: Operating Instructions for Locks and RFID Readers</a></p> <p>This document provides operating instructions for the LEHMANN Firmware Updater software, detailing how to update firmware on Lehmann locks, RFID readers, and terminals. Includes system requirements, compatible products, and step-by-step guidance.</p>
	<p><a href="#">LEHMANN Management Software User Guide: Configuration and Operation</a></p> <p>Comprehensive user guide for LEHMANN Management Software (LMS), detailing configuration, operation, and management of LEHMANN RFID systems in both offline and online modes. Covers transponder and lock management, user settings, and system administration.</p>
	<p><a href="#">LEHMANN CNC Rotary Tables - Main Catalog Edition 4   PGD, E, DD Series</a></p> <p>LEHMANN's Main Catalog Edition 4 for CNC Rotary Tables. Explore PGD, E-Series, DD Series, and more. High-speed, backlash-free solutions for industrial automation and precision manufacturing.</p>
	<p><a href="#">Lehmann Dial Lock 61 (Free-Code) User Manual and Operating Instructions</a></p> <p>User manual and operating instructions for the Lehmann Dial Lock 61 (Free-Code) combination lock. Provides detailed steps for locking, unlocking, emergency opening with code reset, and setting the rotation direction, with safety notes.</p>
	<p><a href="#">LEHMANN RFID Kartenprogrammierung: Anleitung und Übersicht</a></p> <p>Erfahren Sie, wie Sie LEHMANN RFID-Schließsysteme mit verschiedenen Karten wie Installations-, Master- und User-Karten programmieren. Diese Anleitung erklärt die Betriebsmodi, Funktionen und den Reset-Prozess.</p>
	<p><a href="#">Lehmann M410 Keypad Lock Operating Instructions</a></p> <p>Comprehensive operating instructions for the Lehmann M410 Keypad Lock (M410 TA03), covering installation, operation, maintenance, and troubleshooting.</p>