

Nyko PlayPad Glow

Nyko PlayPad Glow Full-Size Wireless RGB Controller Instruction Manual

Model: PlayPad Glow



INTRODUCTION

The Nyko PlayPad Glow is a versatile full-sized wireless controller designed for an enhanced gaming experience. It features customizable RGB lighting, dual rumble feedback, 6-axis gyroscope motion sensing (for Switch), a turbo button, dual-mode trigger stops, and two mappable back buttons. This manual provides instructions for setup, operation, and maintenance of your PlayPad Glow controller.

PACKAGE CONTENTS

- Nyko PlayPad Glow Wireless RGB Controller
- 2-meter USB-C Charge Cable
- Instruction Manual (this document)

CONTROLLER LAYOUT

Familiarize yourself with the buttons and features of your Nyko PlayPad Glow controller.



Image: Front view of the Nyko PlayPad Glow controller, showcasing its transparent design and customizable RGB lighting around the analog sticks and edges. Key buttons like A, B, X, Y, D-pad, Home, Plus, Minus, Screenshot, and Turbo are visible.

- **Left/Right Analog Sticks:** For precise movement and camera control.
- **D-Pad:** Directional input.
- **A/B/X/Y Buttons:** Action buttons.
- **L/R Buttons:** Shoulder buttons.
- **ZL/ZR Triggers:** Analog triggers with dual-mode stops.
- **Home Button:** Returns to the system home screen.
- **Screenshot Button:** Captures screenshots.
- **Plus (+) / Minus (-) Buttons:** System menu navigation.
- **Turbo Button:** Activates turbo function for other buttons.
- **M1/M2 Buttons:** Programmable back buttons.
- **USB-C Port:** For charging and wired connection.

SETUP

1. Charging the Controller

Before first use, fully charge the controller. Connect the supplied USB-C cable to the controller's USB-C port and the other end to a USB power source (e.g., Nintendo Switch dock, PC, or USB wall adapter). The controller's indicator lights will show charging status. A full charge provides up to 20 hours of gameplay, depending on feature usage.



Image: Side view of the Nyko PlayPad Glow controller, highlighting its rechargeable battery and indicating "20+ HOURS" of battery life.

2. Pairing with Nintendo Switch

1. From the Nintendo Switch HOME Menu, select "Controllers" > "Change Grip/Order".
2. On the PlayPad Glow controller, press and hold the **Home button** for two seconds until the indicator lights begin flashing rapidly. This indicates pairing mode.
3. Once the controller is recognized by the Switch, the indicator lights will become solid, and the controller will be paired.
4. Press the **A button** on the controller to confirm and exit the pairing screen.

The PlayPad Glow controller is compatible with Nintendo Switch, Switch OLED, and Switch Lite.

3. Pairing with PC, iOS, and Android Devices

The PlayPad Glow can also be paired with PC, iOS, and Android devices via Bluetooth. Refer to your device's Bluetooth settings for specific pairing instructions. The controller will appear as "Nyko PlayPad Glow" in the list of available devices.

OPERATING INSTRUCTIONS

Customizable RGB Lighting

The PlayPad Glow features customizable RGB lighting with 8 selectable accent colors. The lighting can be adjusted to match your preference. Refer to the controller's specific button combinations (usually involving the Turbo button and an analog stick press) to cycle through colors or lighting modes. The lights will turn off after 5 minutes of inactivity to conserve battery.

Programmable Back Buttons (M1/M2)

The M1 and M2 buttons on the back of the controller can be programmed for single button presses or complex macro sequences (up to 14 button presses). This allows for quick execution of frequently used actions.

PROGRAMMABLE BACK BUTTONS



Image: Rear view of the Nyko PlayPad Glow controller, showing the M1 and M2 programmable back buttons. The image indicates these buttons can be used to create custom button combinations.

Programming Steps:

1. Press and hold the desired M button (M1 or M2) and the Screenshot button simultaneously for 3 seconds. The controller's LEDs will light up to indicate programming mode.
2. Perform the desired button presses or sequence.
3. Press the same M button and Screenshot button simultaneously again to save the programming and exit programming mode. The LEDs will return to normal.

Dual Mode Trigger Stops

The ZL and ZR triggers feature dual-mode trigger stops, allowing you to adjust the trigger pull distance. This is useful for different game genres:

- **Short Throw:** For faster trigger response in competitive games.
- **Standard Pull Distance:** For full range of motion, ideal for racing games or games requiring analog input.

DUAL MODE TRIGGER STOPS

HALL EFFECT TRIGGER SENSORS

SHORT FOR FASTER TRIGGER RESPONSE
STANDARD PULL DISTANCE FOR RACING GAMES



Image: Underside view of the Nyko PlayPad Glow controller, highlighting the switches for the dual-mode trigger stops on the ZL and ZR buttons. Text indicates "Short for faster trigger response" and "Standard pull distance for racing games."

Turbo Function

The Turbo button allows you to assign rapid-fire functionality to other buttons. To activate, press and hold the **Turbo button**, then press the desired action button (e.g., A, B, X, Y, L, R, ZL, ZR). To deactivate, repeat the process.

6-Axis Gyroscope Motion Sensing (Switch Only)

The controller features a highly sensitive 6-axis gyroscope motion sensing system, providing precise control and an immersive gaming experience, particularly for compatible Nintendo Switch titles.

Dual Rumble Feedback

Experience immersive feedback with dual rumble motors that provide tactile sensations corresponding to in-game actions.

DUAL VIBRATION

FEEL THE ACTION WITH TWO
VIBRATION FEEDBACK MOTORS



Image: Transparent view of the Nyko PlayPad Glow controller, showing the internal dual vibration motors. Text indicates "Feel the action with two vibration feedback motors."

COMPATIBILITY

The Nyko PlayPad Glow controller is compatible with the following platforms:

- Nintendo Switch
- Nintendo Switch OLED
- Nintendo Switch Lite
- PC (Windows)
- iOS Devices
- Android Devices

MAINTENANCE

Cleaning

To clean your controller, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners, as these can damage the controller's finish and internal components.

Storage

Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the controller to prevent damage.



Image: A person's hands holding the Nyko PlayPad Glow controller, emphasizing the built-in rubber anti-slip grips for secure handling.

TROUBLESHOOTING

- **Controller not pairing:** Ensure the controller is charged. On the Switch, verify you are in the "Change Grip/Order" menu. Press and hold the Home button on the controller for 2 seconds until lights flash rapidly. If issues persist, try restarting your Switch console and the controller.

- **Input lag or disconnection:** Ensure there are no obstructions between the controller and the console/device. Move closer to the device. Check for other wireless interference. Ensure the controller is fully charged.
- **Buttons not responding:** Check if the controller is properly paired. If specific buttons are unresponsive, try resetting the controller (a small reset button may be located on the back, often requiring a pin to press).
- **RGB lights not working:** Ensure the controller is powered on. Check if the lighting mode has been accidentally turned off or set to a very dim setting.

SPECIFICATIONS

Model:	PlayPad Glow
Connectivity:	Bluetooth Wireless, USB-C (wired)
Compatibility:	Nintendo Switch, Switch OLED, Switch Lite, PC, iOS, Android
Battery Life:	Up to 20 hours (dependent on feature usage)
Charging Cable:	2-meter USB-C
Motion Sensing:	6-Axis Gyroscope (Switch only)
Feedback:	Dual Rumble Vibration
Special Features:	Customizable RGB Lighting (8 colors), Programmable Back Buttons (M1/M2), Dual Mode Trigger Stops, Turbo Function, Textured Rubber Grips
Product Dimensions:	2.87 x 5.39 x 6.89 inches
Item Weight:	11.99 ounces (approx. 340 grams)



WARRANTY AND SUPPORT





For warranty information and technical support, please visit the official Nyko website or contact Nyko customer service. Details can typically be found on the product packaging or the manufacturer's website.

Nyko Official Website: www.nyko.com



Related Documents - PlayPad Glow

	<p>Nyko PlayPad Glow Wireless Controller User Manual</p> <p>Comprehensive user manual for the Nyko PlayPad Glow wireless controller, detailing its features, setup for PC, Android, and Nintendo Switch, button layout, RGB lighting, turbo functions, and troubleshooting.</p>
	<p>Nyko Air Glow Controller for Nintendo Switch - User Manual</p> <p>User manual for the Nyko Air Glow Controller, featuring fan cooling, customizable turbo mode, adjustable vibration, and LED lighting for Nintendo Switch, PlayStation 3, and PC. Learn setup, operation, troubleshooting, and maintenance.</p>

	<p>Nyko Wireless Core Controller User Manual</p> <p>Comprehensive user manual for the Nyko Wireless Core Controller for Nintendo Switch, covering setup, features, connectivity, troubleshooting, and maintenance.</p>
	<p>Nyko NU-3500 Headset User Manual and Product Information</p> <p>Official user manual and product details for the Nyko NU-3500 Wired Audio and Chat Headset, including features, specifications, setup, troubleshooting, and warranty information.</p>
	<p>Nyko Charge Base Quick Setup Guide for PlayStation 4 Controllers</p> <p>A quick setup guide for the Nyko Charge Base, a dual-port charging dock for PlayStation 4 controllers. Learn how to charge your controllers, care for the device, and understand warranty information.</p>
	<p>Nyko Air Flo EX for PC Controller User Manual and Setup Guide</p> <p>Comprehensive guide for setting up and using the Nyko Air Flo EX controller for PC, including features, software installation, customization, care, troubleshooting, and technical support.</p>